

Magnavox MM442

Magnavox MM442 3-Piece CD Shelf System User Manual

Model: MM442

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Magnavox MM442 3-Piece Top Loading CD Shelf System. Please read this manual thoroughly before using the product and retain it for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and personal injury. Keep the unit away from water and moisture. Do not block ventilation openings. Use only attachments/accessories specified by the manufacturer. Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

- Main Unit (CD Player/Receiver)
- Two (2) Satellite Speakers
- Remote Control (with 1 x CR2025 battery)
- AC/DC Adapter
- User Manual (this document)

PRODUCT OVERVIEW

Front Panel Controls and Connections



Image Description: A front view of the Magnavox MM442 CD Shelf System in white, flanked by two satellite speakers. The central unit features a black display panel with 'MAGNAVOX' branding, a standby button, and an LED display. Below the display is a large silver volume knob with blue backlighting, surrounded by control buttons for playback (play/pause, skip forward/backward), mode selection (USB, EQ, Bluetooth), and an auxiliary input port. A USB port is also visible on the lower left. A remote control is shown next to the system.

- **STANDBY Button:** Powers the unit on or off.
- **VOLUME Knob:** Adjusts the audio output level.
- **PLAY/PAUSE (▶/◀) Button:** Starts or pauses playback.
- **SKIP/SEARCH (◀◀/▶▶) Buttons:** Skips tracks or searches within a track.
- **MODE Button:** Selects input source (CD, FM, Bluetooth, USB, AUX).
- **USB Port:** For audio playback from USB devices.
- **AUX Input:** 3.5mm jack for connecting external audio devices.
- **EQ Button:** Cycles through equalizer presets.
- **LED Display:** Shows current mode, track number, time, or radio frequency.

Rear Panel Connections

The rear panel includes connections for the two satellite speakers and the AC/DC power adapter. Ensure correct polarity when connecting speakers.



Image Description: A white Magnavox MM442 CD Shelf System with its top-loading CD compartment open, revealing the CD spindle. The system is positioned on a light-colored surface, flanked by two white satellite speakers. The remote control is visible in the foreground. This image highlights the top-loading CD mechanism.

Remote Control

The included remote control provides convenient access to all major functions from a distance. It requires one CR2025 battery (included).

SETUP

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Speaker Connection:** Connect the two satellite speakers to the speaker output terminals on the rear of the main unit. Ensure the wires are connected to the correct positive (+) and negative (-) terminals for each speaker.
3. **Power Connection:** Insert the AC/DC adapter into the DC IN jack on the rear of the main unit, then plug the adapter into a standard AC wall outlet.
4. **Remote Control Battery:** Remove the plastic tab from the remote control's battery compartment to activate the pre-installed CR2025 battery.
5. **Placement:** Place the main unit and speakers on a stable, flat surface. For optimal stereo sound, position the speakers equidistant from the main unit.

OPERATING INSTRUCTIONS

Power On/Off

- Press the **STANDBY** button on the front panel or the remote control to turn the unit on or off.

CD Playback



Image Description: A close-up view of the white Magnavox MM442 CD Shelf System with a compact disc placed in its top-loading compartment, ready for playback. The system is on a wooden surface, and the remote control is nearby. This image demonstrates the top-loading CD feature in action.

1. Press the **MODE** button until 'CD' appears on the LED display.
2. Open the CD compartment cover on top of the main unit.
3. Place a CD (CD-R/CD-RW compatible) with the label side facing up onto the spindle.
4. Close the CD compartment cover. The CD will begin playing automatically.
5. Use the **PLAY/PAUSE**, **SKIP/SEARCH** buttons on the unit or remote to control playback.
6. To program tracks, press the **PROG** button on the remote during stop mode and follow the on-screen instructions.

FM Radio Operation

1. Press the **MODE** button until 'FM' appears on the LED display.
2. Press and hold the **SKIP/SEARCH** buttons to automatically scan for the next available station.
3. To manually tune, briefly press the **SKIP/SEARCH** buttons.
4. To save a station as a preset, press the **PROG** button, use **SKIP/SEARCH** to select a preset number, then press **PROG** again to confirm.

Bluetooth Pairing



Image Description: The white Magnavox MM442 CD Shelf System is shown on a wooden surface, surrounded by a laptop, tablet, and smartphone, all displaying music playback interfaces. A Wi-Fi symbol hovers above the system, indicating wireless streaming capabilities. This image illustrates the system's Bluetooth connectivity for streaming from various smart devices.

1. Press the **MODE** button until 'BT' appears on the LED display. The unit will enter pairing mode, indicated by a flashing Bluetooth icon.
2. Enable Bluetooth on your external device (smartphone, tablet, etc.) and search for 'MM442'.
3. Select 'MM442' from the list of available devices to pair. Once paired, the Bluetooth icon will stop flashing.

4. You can now stream audio wirelessly from your device to the MM442 system.

USB Playback

- Insert a USB flash drive into the **USB** port on the front panel.
- Press the **MODE** button until 'USB' appears on the LED display.
- The unit will automatically detect and play compatible audio files from the USB drive.
- Use the playback controls to navigate tracks.

Auxiliary Input (AUX)

- Connect an external audio device (e.g., MP3 player) to the **AUX** input jack on the front panel using a 3.5mm audio cable (not included).
- Press the **MODE** button until 'AUX' appears on the LED display.
- Play audio from your connected device. The volume can be controlled via the MM442 system.

Equalizer (EQ) Function

- Press the **EQ** button on the front panel or remote control to cycle through various preset equalizer modes (e.g., Rock, Pop, Jazz, Classic, Flat) to customize your audio experience.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Clean dirty CDs with a soft, lint-free cloth, wiping from the center outwards.
- **Ventilation:** Ensure the unit has adequate ventilation to prevent overheating. Do not cover the ventilation openings.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not securely connected.	Check power cord connection to the unit and wall outlet.
No sound	Volume too low; incorrect input mode; speaker wires loose.	Increase volume; select correct mode; check speaker connections.
CD not playing	CD inserted incorrectly; dirty or scratched CD; unit in wrong mode.	Reinsert CD label-side up; clean or replace CD; select CD mode.
Bluetooth pairing failure	Device too far; Bluetooth not enabled on external device; unit not in pairing mode.	Move device closer; enable Bluetooth; ensure MM442 is in BT pairing mode.
Remote control not working	Battery depleted; obstruction between remote and unit.	Replace CR2025 battery; remove any obstructions.

SPECIFICATIONS

DIMENSIONS



Image Description: A white Magnavox MM442 CD Shelf System, including the main unit and two satellite speakers, is shown from an angled perspective. Dimensions are overlaid on the image: the main unit is 8.6 inches wide, and the speakers are 5.8 inches tall and 5.5 inches deep. The remote control and AC/DC adapter are also pictured, indicating included accessories.

- **Model:** MM442
- **Output Power:** 10W RMS (2 x 5W)
- **CD Player:** Top-loading, CD-R/CD-RW compatible, programmable
- **Radio:** Digital PLL FM Stereo Radio
- **Connectivity:** Bluetooth Wireless Technology, USB Port, 3.5mm AUX-in
- **Display:** LED Display with blue decorative lights
- **Equalizer:** Built-in EQ function
- **Power Source:** AC Operation (AC/DC adapter included)
- **Remote Control:** Uses 1 x CR2025 battery (included)
- **Product Dimensions (Main Unit):** Approximately 12.2 x 10.87 x 6.77 inches (L x W x H)
- **Item Weight:** Approximately 5.5 pounds
- **Color:** White

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Magnavox website. Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I reset the Magnavox MM442 CD Shelf System, and why is it not playing from the USB port?

The user manual for the Magnavox MM442 does not specify a dedicated "Reset" button or a software factory reset procedure. If the system is behaving unexpectedly or the USB is not responding, you should...

[Read full answer](#)