

Cuisinart FP-110

Cuisinart FP-110 Core Custom 10-Cup Multifunctional Food Processor Instruction Manual

Model: FP-110 | Brand: Cuisinart

1. INTRODUCTION

The Cuisinart Core Custom 10-Cup Food Processor is an innovative food processing system designed for versatility and simplicity in the kitchen. This powerful appliance features a robust motor and a durable 10-cup Tritan work bowl, ensuring exceptional performance for various tasks. It is capable of chopping, pureeing, shredding, slicing, and more, utilizing its premium chopping blade and reversible slicing and shredding discs. The unit includes simple control paddles for High, Low, and Pulse speeds. Its sleek, modern design complements any kitchen decor and incorporates a removable hub for convenient, all-in-one storage of accessories. Additional accessories are available separately to expand its functions, including blending, dicing, and juicing.





Image: Front view of the Cuisinart FP-110 Core Custom 10-Cup Food Processor in white and stainless steel.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Cuisinart FP-110 Core Custom 10-Cup Food Processor. Always exercise caution when handling sharp blades and discs. Keep hands and utensils away from moving blades during operation to prevent personal injury. Ensure the appliance is properly assembled and the lid is securely locked before operating.

Proposition 65 Warning: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

3. COMPONENTS AND WHAT'S INCLUDED

Your Cuisinart FP-110 Core Custom 10-Cup Food Processor includes the following:

- Food Processor Base Unit
- 10-Cup Tritan Work Bowl with Lid
- Premium Chopping/Mixing Blade
- Reversible Shredding Disc (Fine/Medium)
- Adjustable Slicing Disc (Thin/Medium)
- Small Pusher
- Medium Pusher
- Removable Storage Hub for accessories
- Spatula/Cleaning Whisk
- Instruction Manual with Recipes



Image: The Cuisinart FP-110 Food Processor displayed in a kitchen setting with various food items and accessories, highlighting its versatility.

4. SETUP AND ASSEMBLY

Follow these steps to set up your food processor:

1. Place the food processor base on a clean, dry, and stable surface.
2. Place the 10-cup Tritan work bowl onto the motor base, aligning the handle with the front of the base. Turn clockwise until it locks into place.
3. Insert the desired attachment (chopping blade, slicing disc, or shredding disc) onto the center stem of the work bowl. Ensure it is seated properly.
4. Place the work bowl lid onto the work bowl, aligning the lid tab with the work bowl handle. Turn clockwise until the lid locks securely into place. The food processor will not operate unless the lid is locked.
5. Insert the appropriate pusher (small or medium) into the feed tube.
6. Plug the power cord into a standard electrical outlet.

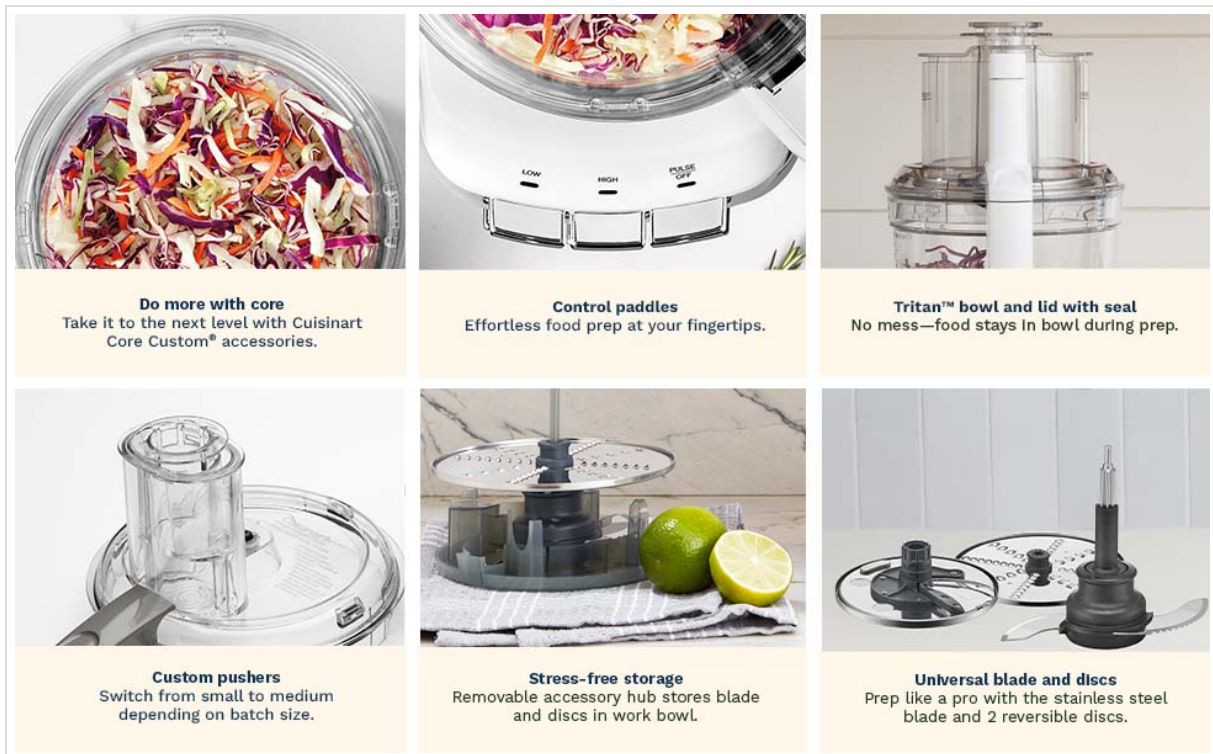


Image: A visual guide demonstrating the assembly of the food processor, from attaching the work bowl to inserting the blades and securing the lid.

5. OPERATING INSTRUCTIONS

The Cuisinart FP-110 features intuitive control paddles for easy operation:

- **LOW:** Press the 'LOW' paddle for continuous low-speed processing.
- **HIGH:** Press the 'HIGH' paddle for continuous high-speed processing.
- **PULSE/OFF:** Press and hold the 'PULSE/OFF' paddle for short bursts of power, ideal for chopping or when precise control is needed. Release to stop. Press briefly to turn the unit off.

To add ingredients while processing, use the feed tube located on the lid. For solid ingredients, use the appropriate pusher to guide them through. For liquids, you can pour them directly into the feed tube while the processor is running.

Video: An overview of the Cuisinart FP-110 Core Custom 10-Cup Multifunctional Food Processor, demonstrating its key features, assembly, and various food preparation capabilities like chopping, pureeing,

and shredding.

Video: Demonstrates the use of the Cuisinart FP-110 Series Food Processor with the optional Blender Attachment, showcasing its ability to create fresh juices and cocktails.

Video: Illustrates the functionality of the Cuisinart FP-110 Core Custom Blender Jar accessory, showing how to prepare smoothie bowls with various fruits and nuts.

6. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and optimal performance of your Cuisinart Food Processor.

- **Removable Parts:** The work bowl, lid, pushers, blades, and discs are dishwasher safe. Place them on the top rack of your dishwasher.
- **Base Unit:** The motor base should never be immersed in water. Wipe it clean with a damp cloth and mild detergent, then dry thoroughly.
- **Stubborn Residue:** For difficult-to-clean areas, use the included spatula/cleaning whisk to remove food particles.

7. TROUBLESHOOTING

If you encounter any issues with your Cuisinart FP-110 Food Processor, please refer to the following general troubleshooting tips:

- **Unit Not Starting:** Ensure the work bowl and lid are correctly assembled and securely locked into place. The unit has safety interlocks that prevent operation if not properly assembled.
- **Motor Overheating:** If the motor stops during heavy use, it may have overheated. Unplug the unit and let it cool down for at least 30 minutes before attempting to use it again. Reduce the load or process in smaller batches.
- **Ineffective Processing:** Check that the correct blade or disc is installed for the task. Ensure ingredients are cut into appropriate sizes for the feed tube and that the work bowl is not overfilled.

For more detailed troubleshooting steps, please consult the complete user manual provided with your product or visit the Cuisinart support website.

8. SPECIFICATIONS

Brand	Cuisinart
Model Name	FP-110
Product Dimensions	11"D x 7"W x 15.5"H
Color	White
Bowl Capacity	10 Cups

Recommended Uses	Chop, Puree, Shred, Slice
Number of Speeds	4 (Low, High, Pulse, Off)
Product Care Instructions	Removable parts are dishwasher safe; Base unit hand wash/wipe clean.
Included Components	10 Cup Food Processor, Tritan Bowl w/Lid, Chopping/Mixing Blade, Reversible Shredding Disc, Adjustable Slicing Disc, Small and Medium Pushers, Removable Storage Hub, Spatula.
Blade Material	Stainless Steel
Power Source	Corded Electric
Item Weight	8.6 pounds

9. WARRANTY AND SUPPORT

The Cuisinart FP-110 Core Custom 10-Cup Multifunctional Food Processor comes with a **Limited 3-Year Warranty**. For detailed information regarding warranty coverage, terms, and conditions, please refer to the warranty section in your complete instruction manual.

For product support, replacement parts, or further assistance, please visit the official Cuisinart website or contact Cuisinart Customer Service.