Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Karlsson /
- Karlsson Duo Cuckoo Luxury Wall Clock PTG-KA5789WH Instruction Manual

Karlsson PTG-KA5789WH

Karlsson Duo Cuckoo Luxury Wall Clock Instruction Manual

Model: PTG-KA5789WH

1. Introduction

Thank you for purchasing the Karlsson Duo Cuckoo Luxury Wall Clock. This manual provides essential information for the proper setup, operation, and maintenance of your clock. Please read these instructions carefully before use and retain them for future reference.

The Karlsson Duo Cuckoo Clock combines modern design with the classic charm of a cuckoo clock. It features an analog display and a cuckoo mechanism that sounds hourly.

2. SAFETY INFORMATION

- Keep the clock away from direct sunlight, extreme temperatures, and high humidity.
- Do not expose the clock to water or other liquids.
- Use only the specified battery type (3xAA). Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the clock will not be used for an extended period to prevent leakage.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Do not attempt to disassemble or repair the clock yourself. Contact qualified personnel for service.

3. PACKAGE CONTENTS

Please check that all items are present in the package:

- Karlsson Duo Cuckoo Luxury Wall Clock unit
- Instruction Manual (this document)

Note: 3xAA batteries are not included and must be purchased separately.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Karlsson Duo Cuckoo Clock.



Image 1: Front view of the Karlsson Duo Cuckoo Luxury Wall Clock. The clock features a white circular face with black hands and the 'Karlsson' brand name. To its right is another white circular unit with a gold-rimmed opening, from which a small white cuckoo bird emerges.

- Clock Face: Analog display with hour and minute hands.
- Cuckoo Compartment: Housing for the cuckoo bird mechanism.
- Battery Compartment: Located on the back of the clock unit.
- Time Setting Knob: Used to adjust the time.

5. SETUP

5.1 Battery Installation

- 1. Locate the battery compartments on the back of the clock unit.
- 2. Insert 3xAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
- 3. Close the battery compartment covers securely.



Image 2: Rear view of the Karlsson Duo Cuckoo Luxury Wall Clock. Two circular black panels are visible, each containing a battery compartment and a hanging slot. The left panel shows the mechanism for the clock hands, and the right panel shows the mechanism for the cuckoo bird.

5.2 Time Setting

- 1. After installing batteries, locate the time setting knob on the back of the clock mechanism.
- 2. Gently turn the knob to move the clock hands clockwise until the correct time is displayed.
- 3. Avoid turning the hands counter-clockwise, as this may damage the movement.

5.3 Mounting and Placement

The Karlsson Duo Cuckoo Clock can be used as a wall-mounted clock or placed on a tabletop.

- Wall Mounting: Use the integrated hanging slots on the back of each clock unit. Ensure the wall fasteners (screws or hooks, not included) are appropriate for the clock's weight (0.62 kg) and wall material. Hang both units side-by-side.
- **Tabletop Placement:** Place the clock on a stable, flat surface. Ensure it is not prone to falling or being knocked over.

6. OPERATING THE CLOCK

6.1 Analog Time Display

The clock features a sweep movement, providing a smooth, continuous motion of the second hand (if present) and quiet operation.

6.2 Cuckoo Function

The cuckoo bird will emerge from its compartment and make soft forest sounds every hour on the hour. This feature operates automatically once batteries are installed and the time is set.



Image 3: A close-up view of the Karlsson Duo Cuckoo Luxury Wall Clock, focusing on the cuckoo bird. The small white bird with a red beak is visible, partially emerged from the gold-rimmed opening of the right circular unit.

7. MAINTENANCE

7.1 Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish.

7.2 Battery Replacement

When the clock hands slow down, stop moving, or the cuckoo function becomes irregular, it is time to replace the batteries. Follow the instructions in Section 5.1 for battery installation.

8. TROUBLESHOOTING

- Clock not working: Check if batteries are inserted correctly with the right polarity. Ensure batteries are fresh
- Cuckoo not sounding: Verify batteries are fresh and correctly installed. Ensure the clock is set to the correct time. The cuckoo sounds hourly.
- Incorrect time: Adjust the time using the setting knob on the back of the clock.
- Irregular cuckoo sound: This may indicate low battery power. Replace batteries.

If problems persist after following these steps, please contact Karlsson customer support.

9. SPECIFICATIONS

| Feature | Detail |
|----------------------|---|
| Brand | Karlsson |
| Model Number | PTG-KA5789WH |
| Colour | White |
| Display Type | Analog |
| Power Source | Battery Powered (3xAA, not included) |
| Indoor/Outdoor Usage | Indoor |
| Frame Material | ABS Plastic & Steel |
| Mounting Type | Wall Mount, Tabletop |
| Item Weight | 0.62 Kilograms |
| Movement Type | Sweep |
| Dimensions (LxWxH) | 28.1 x 3.8 x 16.3 Centimeters (approximate) |
| Country of Origin | China |

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or visit the official Karlsson website. Keep your proof of purchase for any warranty claims.

Related Documents - PTG-KA5789WH



Karlsson Duo Cuckoo Wall Clock Instruction Manual

Instruction manual for the Karlsson Duo Cuckoo Wall Clock, model numbers KA5789BK, KA5789GR, KA5789GY, and KA5789WH. Includes setup, operation, and warranty information.



 
Karlsson Natural Cuckoo Wall Clock KA5886: Instruction Manual & Setup Guide

Comprehensive guide for the Karlsson Natural Cuckoo Wall Clock, model KA5886. This manual provides detailed instructions on setup, time setting, operation of buttons, volume control, and maintenance. Learn how to correctly set the time, understand the day/night setting, and utilize the demo and set functions. Includes warranty information and disposal guidelines.




Karlsson Grato Cuckoo Wall Clock KA6026 Instruction Manual

Detailed instructions for setting up and operating the Karlsson Grato Cuckoo Wall Clock model KA6026, including battery installation, time setting, volume control, and bird voice activation. Includes warranty and maintenance information.



Karlsson Wall Clock Duo Cuckoo KA5789 Instruction Manual

 Detailed instructions for setting up and operating the Karlsson Wall Clock Duo Cuckoo KA5789. Learn how to insert batteries, adjust volume, set the time, and configure the bird voice feature. Includes a comprehensive table for bird voice timing.



Karlsson KA5768 Cuckoo Clock Instruction Manual and User Guide

Comprehensive user manual for the Karlsson KA5768 Cuckoo Clock, providing step-by-step instructions for setup, time setting, cuckoo function, battery replacement, and troubleshooting. Learn how to operate your Karlsson cuckoo clock efficiently.



Karlsson Wall Clock Duo Cuckoo KA5789 Instruction Manual

Detailed instructions for setting up and operating the Karlsson Wall Clock Duo Cuckoo KA5789, including battery installation, time setting, volume adjustment, and bird voice configuration.