

## Karlsson KA5789GY

# Karlsson KA5789GY Duo Cuckoo Wall Clock Instruction Manual

Model: **KA5789GY** | Brand: **Karlsson**

## 1. INTRODUCTION

The Karlsson Duo Cuckoo Wall Clock is a modern timepiece that combines a robust design with the playful elements of a classic cuckoo clock. Each hour, a small bird emerges, emitting gentle forest sounds. This manual provides essential information for the proper installation, operation, and care of your clock.

## 2. SETUP

### 2.1 Unpacking

Carefully remove all components from the packaging. Ensure the clock is free from any protective materials.

### 2.2 Battery Installation

1. Locate the battery compartments on the back of the clock.
2. Insert **3 AA batteries** (not supplied) into the designated slots, ensuring correct polarity (+/-).
3. Close the battery compartment covers securely.



Image: Back view of the clock, illustrating the battery compartments and adjustment buttons.

This image displays the rear of the Karlsson Duo Cuckoo Wall Clock. Two circular sections are visible, each containing a battery compartment. The left section shows an open compartment for AA batteries, with a red button for adjustments. The right section shows a closed compartment. Both sections have mounting holes at the top.

### 2.3 Wall Mounting

The clock is designed for wall mounting. Due to its weight (620g) and dimensions (27.9 x 3.81 x 16.5 cm), ensure you use appropriate wall anchors and screws suitable for your wall type to securely hang the clock.



Image: Side view of the Karlsson Duo Cuckoo Wall Clock, highlighting its two-part design.

This image shows the Karlsson Duo Cuckoo Wall Clock from a slightly angled side view. The clock consists of two cylindrical grey sections. The left section displays the clock face with black hands and the 'KARLSSON' logo. The right section features a small opening with a golden rim, from which a white cuckoo bird is visible.

## 3. OPERATING INSTRUCTIONS

### 3.1 Setting the Time

To set the time, gently turn the adjustment knob located on the back of the clock (often a small wheel or button near the clock mechanism) until the hands indicate the correct time. Avoid moving the hands directly.

### 3.2 Cuckoo Function

- The cuckoo bird will emerge and emit gentle forest sounds every hour.
- The clock features a light sensor that automatically silences the cuckoo function in low-light conditions to prevent disturbance during the night.
- Volume control: The clock offers three volume settings for the cuckoo sound. Adjust this using the dedicated switch or button on the back of the clock.
- Chiming schedule: You can select specific hours for the cuckoo to start and stop chiming, allowing for customization of its operation. Refer to the controls on the back of the clock for these settings.



Image: Detailed view of the Karlsson Duo Cuckoo Wall Clock, focusing on the cuckoo bird.

This close-up image of the Karlsson Duo Cuckoo Wall Clock shows the two grey cylindrical sections. The left section displays the clock face with black hour and minute hands and the 'KARLSSON' logo. The right section provides a clear view of the small white cuckoo bird inside its golden-rimmed opening, ready to emerge.

### 3.3 Silent Movement

The clock is equipped with a silent sweep movement, ensuring no ticking sounds for a peaceful environment.

## 4. MAINTENANCE

- **Cleaning:** To clean the clock, use a soft, dry cloth. Avoid abrasive cleaners or solvents, as these

may damage the finish.

- **Battery Replacement:** Replace batteries promptly when the clock's performance diminishes or the cuckoo function becomes inconsistent. Always replace all batteries at once with new ones of the same type.

## 5. TROUBLESHOOTING

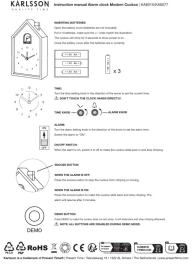
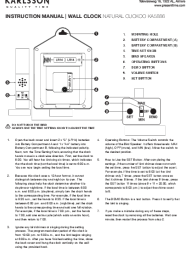
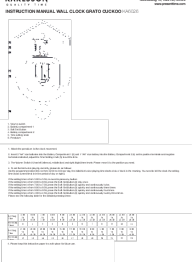
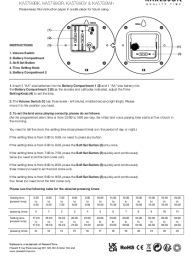
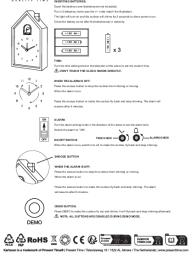
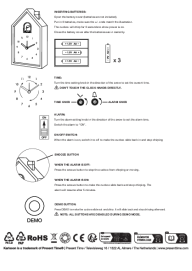
- **Clock Not Working:** Check if the batteries are inserted correctly and are not depleted. Replace if necessary.
- **Cuckoo Not Sounding:** Ensure the batteries are fresh. Verify that the light sensor is not detecting darkness (if it's daytime). Check the volume setting.
- **Incorrect Time:** Re-adjust the time using the setting knob on the back of the clock.

## 6. SPECIFICATIONS

Brand	Karlsson
Model Number	KA5789GY
Color	Mouse Grey
Material	Alloy Steel
Movement Type	Sweep (Silent)
Display Type	Analog
Dimensions (L x W x H)	27.9 x 3.81 x 16.5 cm (11 x 1.5 x 6.5 inches)
Product Dimensions (L x H)	26 x 13 cm (10.2 x 5.1 inches)
Item Weight	620 grams
Power Source	Battery Powered (3 AA batteries required, not included)
Special Feature	Silent Clock
Indoor/Outdoor Use	Indoor

## 7. WARRANTY AND SUPPORT

Karlsson products are manufactured to high-quality standards. For specific warranty information, please refer to the documentation included with your purchase or visit the official Karlsson website. For technical support or inquiries, please contact Karlsson customer service through their official channels.

	<p><a href="#">Karlsson Modern Cuckoo Alarm Clock KA6015/KA6077: Instruction Manual</a></p> <p>User guide for the Karlsson Modern Cuckoo Alarm Clock (Model KA6015/KA6077). Learn how to insert batteries, set the time and alarm, use snooze, and understand its features. Includes warranty and maintenance information.</p>
	<p><a href="#">Karlsson Natural Cuckoo Wall Clock KA5886: Instruction Manual &amp; Setup Guide</a></p> <p>Comprehensive guide for the Karlsson Natural Cuckoo Wall Clock, model KA5886. This manual provides detailed instructions on setup, time setting, operation of buttons, volume control, and maintenance. Learn how to correctly set the time, understand the day/night setting, and utilize the demo and set functions. Includes warranty information and disposal guidelines.</p>
	<p><a href="#">Karlsson Grato Cuckoo Wall Clock KA6026 Instruction Manual</a></p> <p>Detailed instructions for setting up and operating the Karlsson Grato Cuckoo Wall Clock model KA6026, including battery installation, time setting, volume control, and bird voice activation. Includes warranty and maintenance information.</p>
	<p><a href="#">Karlsson Duo Cuckoo Wall Clock Instruction Manual</a></p> <p>Instruction manual for the Karlsson Duo Cuckoo Wall Clock, model numbers KA5789BK, KA5789GR, KA5789GY, and KA5789WH. Includes setup, operation, and warranty information.</p>
	<p><a href="#">Karlsson Modern Cuckoo Alarm Clock KA6015 Instruction Manual</a></p> <p>Learn how to set up and use the Karlsson Modern Cuckoo Alarm Clock KA6015, including battery installation, time and alarm setting, snooze function, and demo mode.</p>
	<p><a href="#">Karlsson Modern Cuckoo Alarm Clock KA6015/KA6077: Instruction Manual</a></p> <p>Comprehensive guide for the Karlsson Modern Cuckoo Alarm Clock (KA6015/KA6077). Learn how to insert batteries, set time and alarm, use snooze and demo features, and understand warranty and maintenance.</p>