

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Karlsson](#) /

› [Karlsson KA5789GR Duo Cuckoo Wall Clock User Manual](#)

Karlsson PTG-KA5789GR

Karlsson KA5789GR Duo Cuckoo Wall Clock User Manual

Model: PTG-KA5789GR

INTRODUCTION

Thank you for choosing the Karlsson KA5789GR Duo Cuckoo Wall Clock. This modern cuckoo clock combines contemporary design with the playful element of a classic cuckoo. This manual provides essential information for the correct setup, operation, and maintenance of your clock to ensure its longevity and optimal performance.

SAFETY INFORMATION

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Remove depleted batteries promptly to prevent leakage.
- Do not expose the clock to extreme temperatures or direct sunlight.
- Avoid placing the clock in high humidity environments.
- Handle the clock with care to prevent damage to the delicate cuckoo mechanism.

PACKAGE CONTENTS

Please check that all components are present:

- 1 x Karlsson KA5789GR Duo Cuckoo Wall Clock
- 1 x Instruction Manual (this document)
- *Note: Batteries are not included.*

SETUP

1. Installing Batteries

1. Locate the battery compartments on the back of the clock. There are two compartments, one for the timekeeping

mechanism and one for the cuckoo mechanism.

2. Insert 3 AA batteries (not supplied) into the designated compartments, ensuring correct polarity (+/-).



Figure 1: Rear view of the clock with battery compartments.

2. Setting the Time

1. Once batteries are installed, turn the time-setting knob (usually a small wheel) on the back of the clock to set the correct time.
2. Ensure the hands move freely and do not touch each other.

3. Mounting the Clock

1. Choose a suitable location on a wall. The clock is designed for indoor use.
2. Use appropriate wall anchors and screws (not supplied) to securely mount the clock. The clock has a hanging slot on the back.
3. Ensure the clock is level for optimal performance of the cuckoo mechanism.

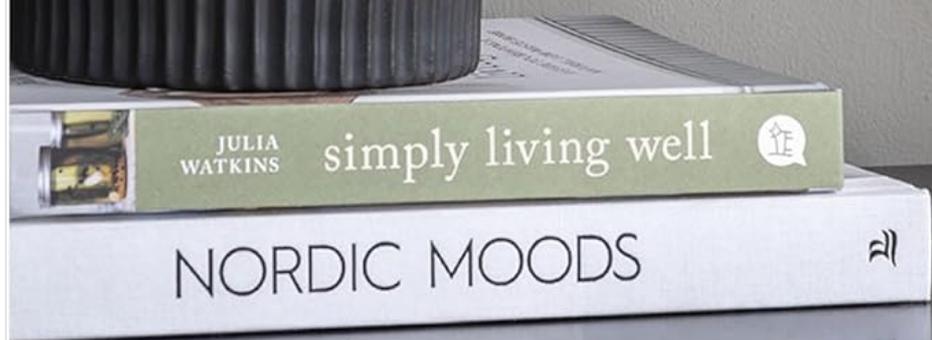


Figure 2: The clock displayed in a home setting.

OPERATING THE CUCKOO MECHANISM

The Karlsson Duo Cuckoo Wall Clock features a modern cuckoo mechanism. The cuckoo bird emerges and emits soft forest sounds every hour. The clock is designed to automatically silence the cuckoo sound during nighttime hours (typically between 9 PM and 6 AM) to prevent disturbance.



Figure 3: Front view of the clock with the cuckoo visible.

Sound Adjustment: There is no manual volume control for the cuckoo sound. The sound level is preset to a gentle forest sound.

Night Mode: The cuckoo automatically stops chiming during the night. This feature is integrated and does not require manual activation.

MAINTENANCE

Cleaning

- Wipe the clock surface with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.

Battery Replacement

- When the clock hands stop moving or the cuckoo sound becomes weak or stops, it is time to replace the batteries.
- Follow the "Installing Batteries" steps in the Setup section to replace all 3 AA batteries.
- Always replace all batteries at the same time with new ones.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clock not running / Hands not moving	Dead or incorrectly installed batteries.	Check battery polarity. Replace all 3 AA batteries with new ones.
Cuckoo not chiming	Dead batteries for the cuckoo mechanism. Night mode is active.	Replace batteries. The cuckoo automatically silences between 9 PM and 6 AM. Check during daytime hours.
Cuckoo sound is weak or distorted	Low battery power.	Replace all 3 AA batteries with new ones.
Clock makes unusual noises	Internal mechanism obstruction or damage.	Ensure the clock is mounted level. If the issue persists, contact customer support. Do not attempt to open or repair the clock yourself.

SPECIFICATIONS

- **Model:** PTG-KA5789GR
- **Brand:** Karlsson
- **Color:** Jungle Green
- **Movement Type:** Sweep (silent)
- **Display Type:** Analog
- **Material:** Wood
- **Dimensions (L x W x H):** 28.2 x 3.81 x 16.3 cm (11.1 x 1.5 x 6.4 inches)
- **Product Dimensions (L x H):** 26 x 13 cm (10.2 x 5.1 inches) -*Note: Discrepancy in dimensions, using both for clarity.*
- **Item Weight:** 200 grams (0.44 lbs)
- **Power Source:** Battery Powered (3 x AA batteries, not included)
- **Indoor/Outdoor Use:** Indoor
- **Shape:** Round

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

For further assistance, you may visit the official Karlsson website or contact their customer service department.

