

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Amazon Basics](#) /

› [Amazon Basics 28-inch 60-Degree Oscillating Tower Fan with Mechanical Control User Manual](#)

Amazon Basics DC1663

Amazon Basics 28-inch 60-Degree Oscillating Tower Fan User Manual

Model: DC1663

IMPORTANT SAFETY INSTRUCTIONS

Please read and save these instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always unplug the fan before cleaning, servicing, or relocating.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fan.
- Do not block air intakes or exhaust in any manner. Do not use on any soft surface, like a bed, where openings may become blocked.
- This fan is not intended for use in wet or damp locations.
- Close supervision is necessary when any appliance is used by or near children.

PACKAGE CONTENTS

- Amazon Basics 28-inch Tower Fan Unit
- Fan Base (2 halves)
- Base Fasteners (screws)
- User Manual

PRODUCT OVERVIEW

The Amazon Basics 28-inch 60-Degree Oscillating Tower Fan provides efficient cooling and air circulation with its compact design and intuitive mechanical controls. It features three customizable speed settings and a wide oscillation range to distribute air effectively in various indoor spaces.

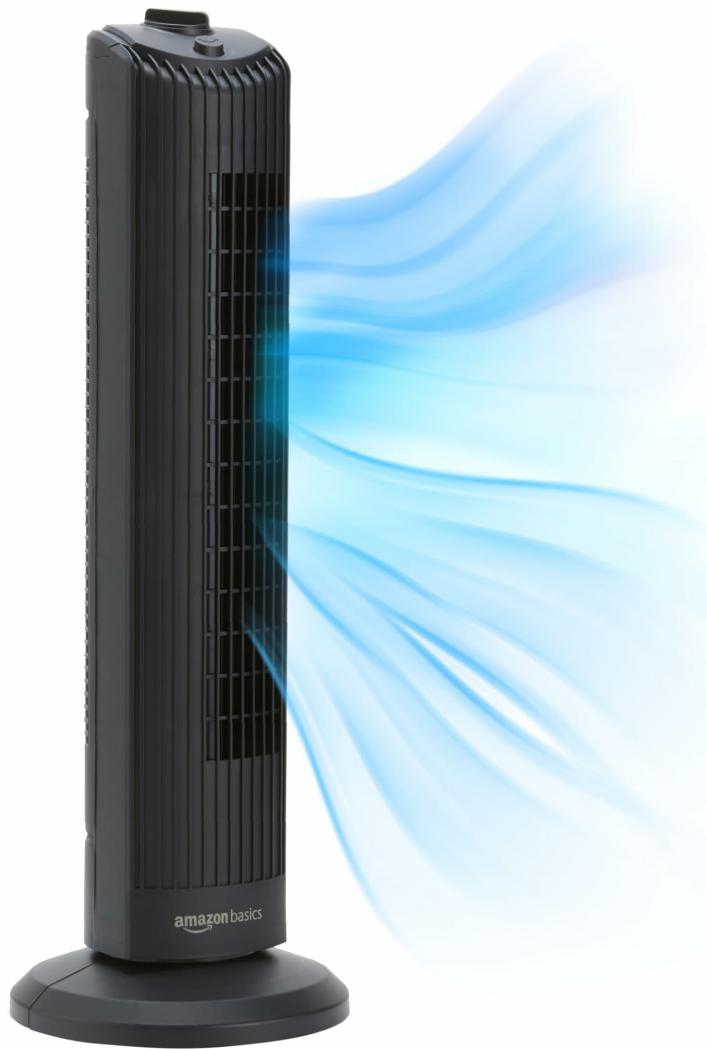


Figure 1: Amazon Basics 28-inch Tower Fan, illustrating its slim profile and top-mounted controls.

SETUP

- 1. Assemble the Base:** Carefully align the two halves of the fan base and snap them together.
- 2. Attach the Base to the Fan:** Place the fan unit onto the assembled base, ensuring the alignment tabs fit securely into the slots.
- 3. Secure the Base:** Using the provided fasteners (screws), secure the base to the fan unit from underneath. Ensure the base is stable and the fan stands upright.
- 4. Placement:** Place the fan on a firm, level surface. Ensure there is adequate space around the fan for proper air circulation and oscillation.

OPERATION

The fan features simple mechanical controls located on the top of the unit for easy adjustment.

Sleek & Efficient

Easy portability at just 5.4 lbs / 2.4 kg

Intuitive control dial

Perfect for enclosed
space air circulation

Tall and sleek
for space-saving
convenience



Figure 2: Close-up of the fan's top-mounted mechanical controls, showing the speed dial and oscillation button.

- 1. Power On/Off:** Plug the fan into a standard electrical outlet. To turn the fan ON, rotate the speed dial clockwise from the '0' position to your desired speed setting (1, 2, or 3). To turn the fan OFF, rotate the dial counter-clockwise back to the '0' position.
- 2. Adjusting Fan Speed:** The fan offers three speed settings: 1 (Low), 2 (Medium), and 3 (High). Rotate the mechanical dial on the top of the fan to select the desired airflow intensity.
- 3. Activating Oscillation:** To enable the oscillation feature, press the dedicated oscillation button located next to the speed dial on the top panel. The fan will begin to rotate from side to side, distributing air across a wider area. Press the button again to stop oscillation.



Stay Cool, Effortlessly

Experience cooling comfort with a 28 in / 21.1 cm tower fan.

Enjoy 3 speed settings with 60° oscillation flow for wide coverage and even distribution of the air.

Figure 3: The tower fan operating in a room, demonstrating its 60-degree oscillation for wide air distribution.

Official Product Video: Amazon Basics Manual 3 Speed Oscillating Tower Fan

Your browser does not support the video tag.

Video 1: This official Amazon Basics video demonstrates the features and operation of the 3-speed oscillating tower fan, including its manual controls and compact design.

Maintenance

Regular maintenance ensures optimal performance and longevity of your fan.

- **Cleaning the Exterior:** Unplug the fan before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- **Cleaning Air Intake/Exhaust:** Use a vacuum cleaner with a brush attachment to gently remove dust and debris from the air intake and exhaust grilles. Do not attempt to disassemble the fan for cleaning.
- **Storage:** When not in use, store the fan in a cool, dry place. Cover it to protect from dust.

Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; Power outlet malfunction; Speed dial set to '0'.	Ensure fan is securely plugged in. Test outlet with another device. Rotate speed dial to 1, 2, or 3.
Fan does not oscillate.	Oscillation button not pressed.	Press the oscillation button on the top panel.
Weak or no airflow.	Air intakes/exhaust blocked; Fan speed too low.	Check for obstructions and clean grilles. Increase fan speed using the dial.

SPECIFICATIONS

Feature	Detail
Brand	Amazon Basics
Model Name	DC1663
Color	Black
Style	28" - Mechanical Control
Product Dimensions	9.4"D x 9.4"W x 27.8"H
Item Weight	5.4 Pounds
Power Source	AC Power
Wattage	35 watts
Voltage	120 Volts (AC)
Number of Power Levels	3
Special Feature	Oscillating, 3 Speeds
Control Method	Push Button
Indoor/Outdoor Usage	Indoor

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or visit the official Amazon Basics website. Keep your proof of purchase for any warranty claims.