



Manuals.plus /

› INFRAOVENS /

› INFRAOVENS Parchment Paper Sheets User Manual

## INFRAOVENS 10 x 12

# INFRAOVENS Parchment Paper Sheets User Manual

Model: 10 x 12 Inch Sheets

## 1. INTRODUCTION

Thank you for choosing INFRAOVENS Parchment Paper Sheets. These precut, perforated non-stick oven liners are designed to simplify your cooking and baking experience in toaster ovens, air fryers, and dehydrators. They are compatible with a wide range of appliances including Cuisinart, Breville, Black and Decker, Hamilton Beach, Oster, Emeril, Ninja, Kitchenaid, Kalorik, Panasonic, and Gowise.

This manual provides essential information on the proper use, care, and safety of your INFRAOVENS Parchment Paper Sheets and the included reusable mat.

## 2. PRODUCT OVERVIEW

The INFRAOVENS Parchment Paper Sheets are designed for convenience and cleanliness in various cooking appliances. Each pack contains 100 sheets, measuring 10 x 12 inches, along with a reusable mat.

### 2.1 Key Features

- **Precut and Perforated:** Specifically sized for toaster ovens and air fryers (10 x 12 inches) with perforations to allow optimal air circulation for even cooking.
- **Non-Stick Surface:** Prevents food from sticking, making cleanup easier.
- **Heat-Resistant:** Suitable for use in high-temperature cooking environments.
- **Food-Grade Material:** Safe for direct contact with food.
- **Included Reusable Mat:** A non-stick, PFOA-free, odorless fiberglass mat for cooking stickier or more liquid foods, and for protecting oven trays from drips.

### 2.2 Package Contents

- 100 x INFRAOVENS Parchment Paper Sheets (10 x 12 inches)
- 1 x INFRAOVENS Reusable Mat

## 3. SETUP


No assembly is required for these products. Ensure your appliance is clean and ready for use before placing the liners or mat.

## 4. OPERATING INSTRUCTIONS

### 4.1 Using Parchment Paper Sheets

1. **Select Sheet:** Choose one INFRAOVENS Parchment Paper Sheet.
2. **Placement:** Place the parchment paper sheet directly onto your toaster oven rack or air fryer basket.
3. **Add Food:** Always place food directly on top of the parchment paper sheet. This is crucial to weigh down the liner and prevent it from flying around inside the appliance due to air circulation, especially during preheating or cooking without food.
4. **Cooking:** Proceed with your cooking or baking as usual. The perforations will allow air to circulate, ensuring even cooking while keeping your appliance clean.
5. **Removal:** After cooking, carefully remove the parchment paper sheet with the food residue.

**KEEP YOUR TOASTER RACK CLEAN**  
BY AVOIDING STICKY OR GREASY FOOD RESIDUE

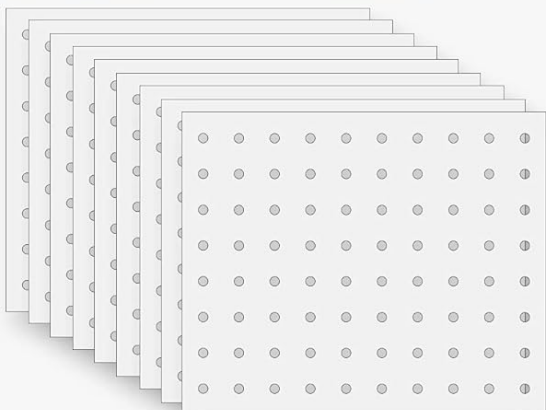

**PLACE UNDER FOOD WHEN READY TO COOK AND PROTECT YOUR RACK FROM DIRT, RESIDUE AND BUILD-UP.**

**MAKE CLEAN-UP A BREEZE!**

*Image: A parchment paper sheet with cooked bacon and cheese being removed from a toaster oven, demonstrating how the liner prevents residue from sticking to the tray.*



**REUSABLE MAT  
INCLUDED WITH  
EVERY PURCHASE**

- NON-STICK
- REUSABLE
- DISHWASHER  
SAFE

**PLACE AT THE BOTTOM OF YOUR  
TOASTER TO CATCH ALL FOOD  
DRIPPINGS, KEEPING YOUR  
TRAYS AND RACKS CLEAN**

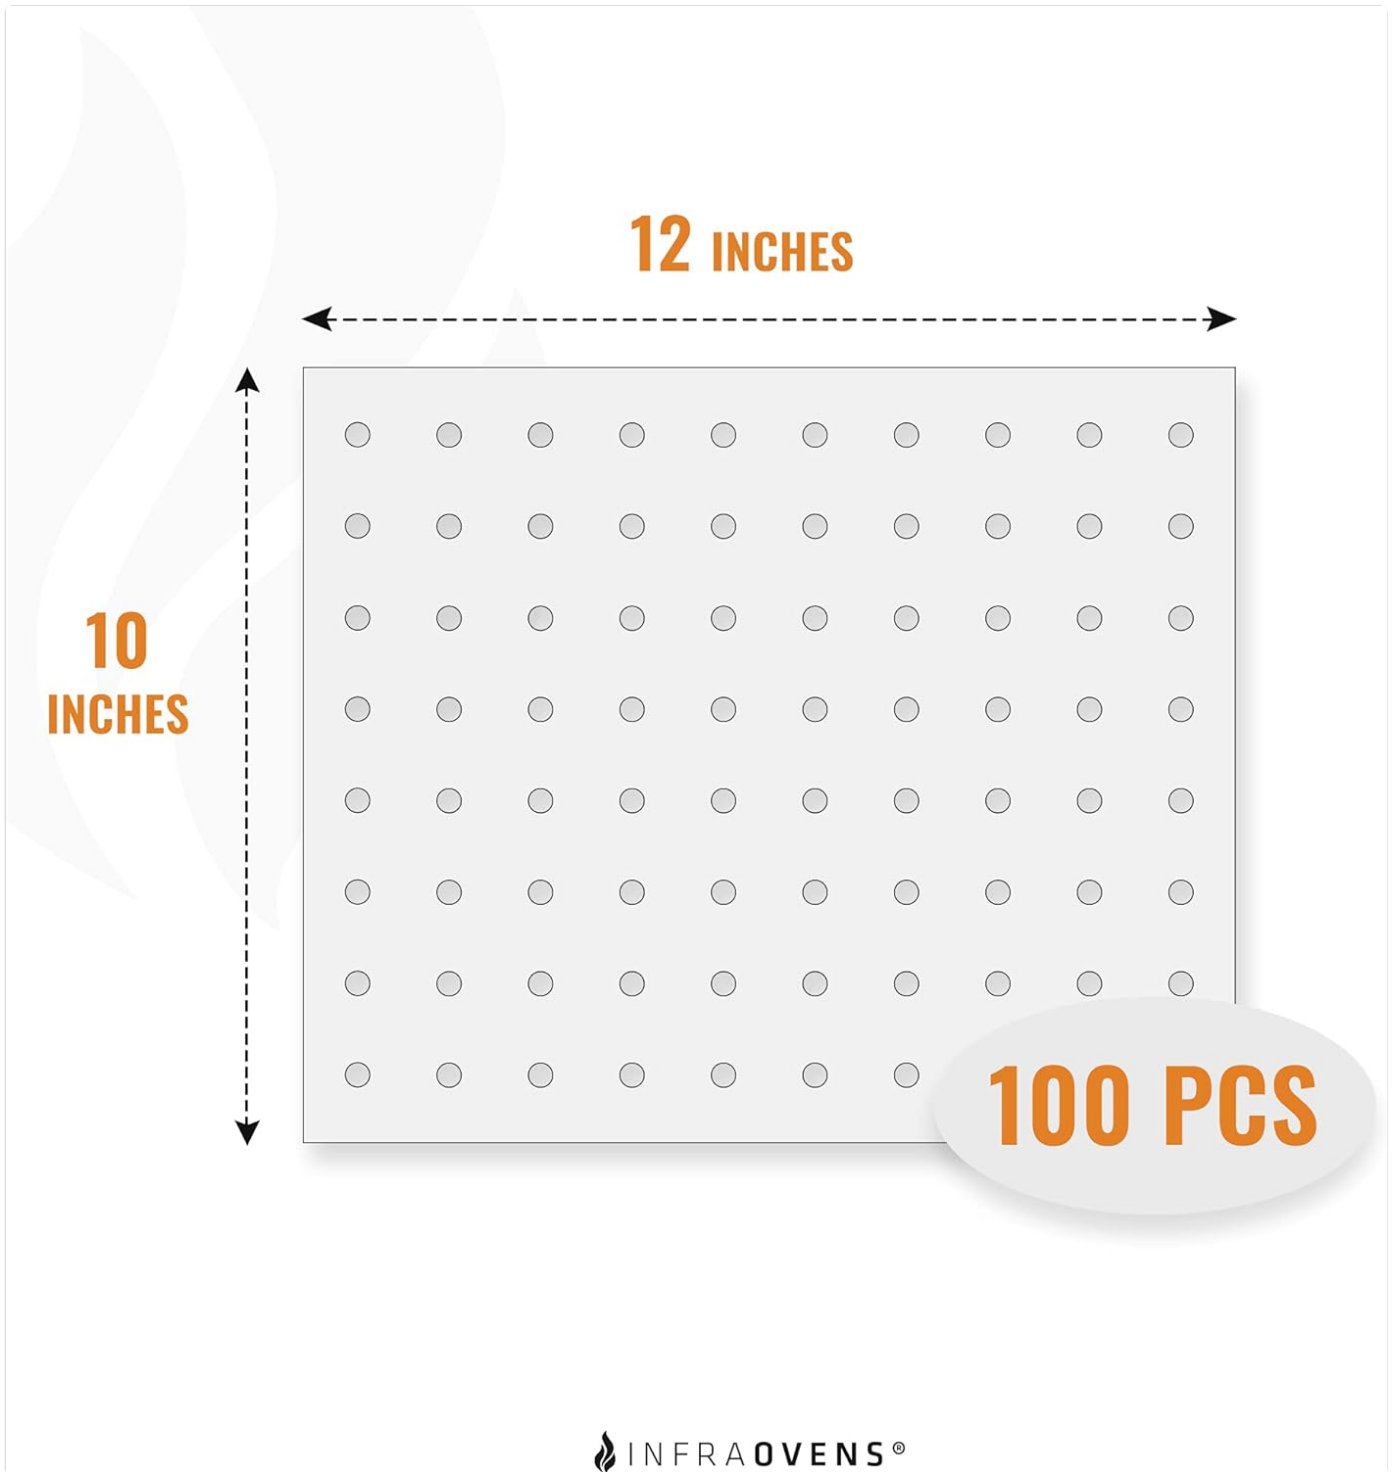





*Image: A parchment paper sheet with cooked shrimp, illustrating how the perforated holes allow air to circulate for even cooking.*

#### 4.2 Using the Reusable Mat

1. **Placement:** Place the reusable mat on the bottom tray or rack of your toaster oven.
2. **Purpose:** This mat is ideal for cooking stickier or more liquid foods, such as BBQ wings or pancakes, to prevent drips and residue from reaching the oven's interior. It also serves as a protective liner for your oven's bottom.
3. **Cooking:** Place food directly on the mat and cook as desired.
4. **Cleanup:** The non-stick surface allows for easy removal of food and simple cleaning.



*Image: The black reusable mat positioned on the lower tray of a toaster oven, designed to catch food drippings and keep the oven clean.*

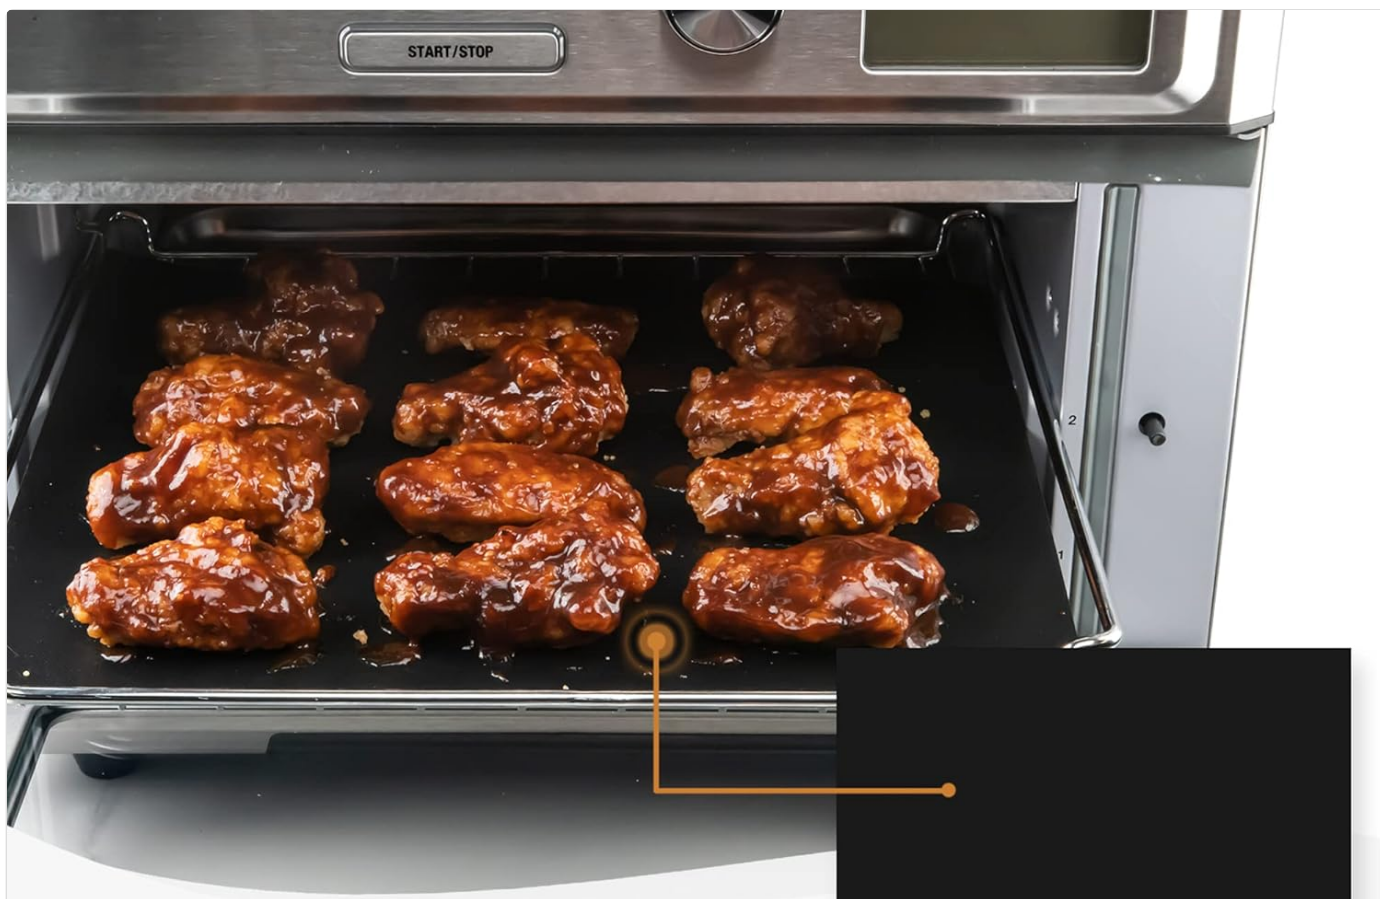

USE IT TO **COOK STICKY FOODS** DIRECTLY ON TOP TO **AVOID SCRAPING YOUR RACK** DURING CLEAN-UP

 INFRAOVENS®

*Image: Cooked BBQ wings on the reusable mat, demonstrating its use for sticky foods to prevent scraping during cleanup.*

## 5. SAFETY PRECAUTIONS

- **Always Place Food on Liners: IMPORTANT:** Do not turn on or preheat your toaster oven or air fryer with the parchment paper liners alone inside. They are lightweight and will fly around, potentially getting caught in the heating element and causing a fire hazard. Always place food on top of the liners to weigh them down safely.
- **Temperature Limits:** While heat-resistant, avoid direct contact with heating elements.
- **Supervision:** Always supervise cooking when using liners or mats.
- **Proper Fit:** Ensure the liners and mat fit your appliance without touching the sides or heating elements. Measure your appliance before purchasing for best results.

## 6. MAINTENANCE AND CARE

### 6.1 Parchment Paper Sheets

- **Disposal:** These are disposable liners. Discard after each use.
- **Storage:** Store unused sheets in a cool, dry place to maintain their quality.

## 6.2 Reusable Mat

- **Cleaning:** The reusable mat is non-stick and can be easily wiped clean with a damp cloth and mild soap. It is also dishwasher safe.
- **Drying:** Ensure the mat is completely dry before storing or reusing.
- **Storage:** Store flat or rolled to prevent creases.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Parchment paper flying around inside oven.	No food or insufficient weight on the liner.	Always place food on top of the parchment paper before operating the appliance. Do not preheat with empty liners.
Food not cooking evenly on parchment paper.	Improper air circulation or overcrowding.	Ensure the perforated holes are not completely blocked by food. Avoid overcrowding the cooking surface to allow proper air flow.
Mat or liner appears damaged after use.	Direct contact with heating elements or exceeding temperature limits.	Ensure liners/mat do not touch heating elements. Verify appliance temperature settings are within safe limits for parchment paper. Replace if damaged.

## 8. SPECIFICATIONS

- **Product Name:** INFRAOVENS Parchment Paper Sheets
- **Model:** 10 x 12 Inch Sheets
- **Material (Parchment):** Food-grade, non-stick, heat-resistant paper
- **Material (Reusable Mat):** Food-grade, non-stick, PFOA-free, odorless fiberglass
- **Sheet Dimensions:** 10 x 12 inches (25.4 x 30.48 cm)
- **Sheet Count:** 100 sheets
- **Included Items:** 100 Parchment Paper Sheets, 1 Reusable Mat
- **Compatibility:** Toaster ovens, air fryers, dehydrators (e.g., Cuisinart, Breville, Black and Decker, Hamilton Beach, Oster, Emeril, Ninja, Kitchenaid, Kalorik, Panasonic, Gowise)

## 9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your INFRAOVENS Parchment Paper Sheets, please contact our customer service. While specific warranty details are not provided in this manual, we are committed to ensuring your satisfaction with our products.

Please refer to the product packaging or the official INFRAOVENS website for the most up-to-date warranty information and contact details.

**Manufacturer:** INFRAOVENS

**Website:** Visit the INFRAOVENS Store on Amazon

## 10. PRODUCT VIDEOS

Watch these official videos from INFRAOVENS for additional guidance and demonstrations on using your parchment paper sheets and reusable mat.

### **10.1 The accessories you need for your toaster oven!**

Your browser does not support the video tag.

*Video: This video demonstrates the use of INFRAOVENS liners for toaster ovens, highlighting how they simplify cleanup and allow for cooking various foods. It shows both the perforated parchment paper and the reusable mat in action.*