

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TARANZY](#) /

› [TARANZY 6-Inch Cordless Mini Chainsaw Instruction Manual](#)

TARANZY MC2 - Vibrant Orange High-Power Chainsaw

TARANZY 6-Inch Cordless Mini Chainsaw Instruction Manual

Model: MC2

INTRODUCTION

Thank you for choosing the TARANZY 6-Inch Cordless Mini Chainsaw. This powerful and portable tool is designed to make your tree trimming, branch pruning, and wood cutting tasks easier and more efficient. Its lightweight design and robust performance make it an ideal companion for various outdoor and DIY projects. Please read this manual thoroughly before operation to ensure safe and effective use of your new chainsaw.

IMPORTANT SAFETY INFORMATION

WARNING: Always use in accordance with the included manufacturer's instructions to avoid injury. Do not attempt to open the motor or repair the device yourself. Never touch the moving chain with any part of the body. Failure to follow these guidelines may void the warranty.

- Equipped with essential safety features and comprehensive usage guidelines to ensure secure operation.
- Constructed with high-quality, eco-friendly materials designed for long-lasting performance and minimal environmental impact.
- Always wear appropriate personal protective equipment (PPE) including safety goggles and anti-cut gloves provided, and other necessary gear like hearing protection and sturdy footwear.
- Ensure the 90° splash guard baffle is properly positioned before operation to protect against splash and dust.
- Utilize the security switch to prevent accidental starts.
- Keep hands, hair, and loose clothing away from the chain when the chainsaw is in operation.
- Do not operate the chainsaw in wet conditions or near flammable liquids or gases.
- Always maintain a firm grip on the anti-slip rubber handle during use.

SUPER SHARP STEEL CHAIN

With Extra Chain Brake For

- ✓ Neat & Fast Cutting
- ✓ High Efficiency
- ✓ Extra Safety



Figure 1: Key safety features including protective baffle and safety switch.

PACKAGE CONTENTS

Your TARANZY 6-Inch Cordless Mini Chainsaw package includes everything you need to get started:

- 1x Wireless 6-inch Chainsaw
- 1x 6-inch Chain Plate (Guide Plate)
- 2x Chains
- 2x 21V Lithium-ion Batteries
- 1x Fast Charger
- 1x Screwdriver
- 1x Quality Storage & Carry Box
- 1x Detailed Manual Instruction (this document)
- 1x Oil Bottle (empty)
- 1x Protective Gloves
- 1x Goggles



Figure 2: Complete package contents of the TARANZY Mini Chainsaw.

SPECIFICATIONS

Feature	Specification
Brand	TARANZY
Model Number	MC2 - Vibrant Orange High-Power Chainsaw
Power Source	Cordless, Battery-Powered Ease
Horsepower	550 Watts

Item Weight	1.87 pounds
Product Dimensions	16"L x 6"W x 7.5"H
Chain Length	6 Inches
Chain Speed	Swift 19.6 FT/S for Rapid Cutting
Voltage	21 Volts
Wattage	880 watts
Battery Type	Lithium Ion (2x 21V 2000mAh included)
Charging Time	30-60 minutes
Working Time	Up to 45 minutes (per battery)

SETUP AND ASSEMBLY

Battery Charging

Before first use, fully charge both batteries. Connect the charger to a power outlet and then to the battery. The indicator light on the charger will show the charging status. A full charge typically takes 30-60 minutes.

ELITE BATTERY TECHNOLOGY

2x 21V High Performance Lithium Batteries

Longer Lifespan



Over-Charge
Protection



Over-Current
Protection



Over-Voltage
Protection



Over-heat
Protection

● **Charging Time:**

30-60 Minutes

● **Working Time:**

45 Minutes



Figure 3: Battery charging and protection features.

Chain and Guide Plate Installation

1. Ensure the battery is removed from the chainsaw before installation.
2. Place the chain around the guide plate, ensuring the cutting teeth are facing the correct direction (away from the motor).
3. Align the guide plate with the chainsaw body and secure it using the easy install & uninstall knob.
4. Use the provided screwdriver to adjust the chain tension. The chain should be snug but still able to be pulled slightly away from the guide bar. Do not overtighten.
5. Once the chain is properly tensioned, tighten the knob securely.

MORE CUTS & LESS ENERGY USE

Upgraded High Power Copper Motor

6 inch = 5 Sec

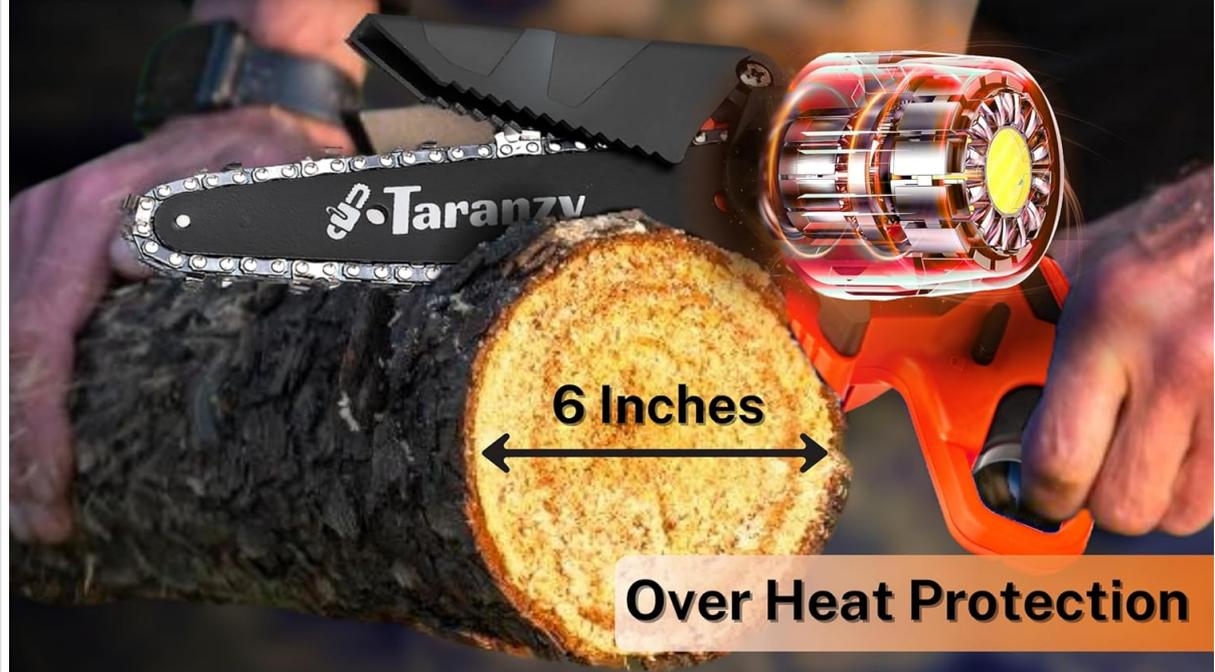


Figure 4: Chainsaw motor and chain assembly for installation.

OPERATING INSTRUCTIONS

General Operation

To operate the chainsaw, first ensure a charged battery is securely inserted. Press and hold the safety switch (usually a button or lever) with your thumb, then press the variable speed trigger to start the chain. Release the safety switch once the chain is running. The chainsaw is designed for comfortable one-handed use, but always maintain a firm grip.



Figure 5: Demonstrating one-handed operation of the lightweight chainsaw.

Cutting Techniques

For optimal cutting performance and safety, follow these guidelines:

- Always ensure the chain is sharp and properly tensioned.
- Start the chainsaw before making contact with the wood.
- Apply steady, consistent pressure. Do not force the saw through the wood.
- For larger branches, make a small undercut first to prevent pinching or splintering.
- Be aware of kickback, especially when cutting with the tip of the guide bar.
- The chainsaw is ideal for branches up to 6 inches in diameter.



Figure 6: High-performance cutting with precision.

Video 1: Official product video demonstrating the TARANZY Mini Chainsaw's features and cutting capabilities.

MAINTENANCE

Chain Lubrication

Regular chain lubrication is crucial for optimal performance and chain longevity. Use standard chainsaw bar and chain oil (not included) to fill the provided empty oil bottle. Apply oil directly to the chain and guide bar before and during extended use. The frequency of lubrication depends on the duration and intensity of cutting.

Cleaning and Storage

- Always remove the battery before cleaning.
- Clean the chainsaw body and guide bar with a damp cloth after each use. Remove any sawdust, debris, or resin buildup.
- Inspect the chain for sharpness and damage. Replace dull or damaged chains promptly.
- Store the chainsaw and batteries in the provided quality storage & carry box in a dry, cool place, away from direct sunlight and out of reach of children.

- For long-term storage, it is recommended to use and recharge the batteries every 3 months to maintain their lifespan.

TROUBLESHOOTING

If you encounter issues with your TARANZY Mini Chainsaw, please refer to the following common troubleshooting tips:


- **Chainsaw not starting:** Ensure the battery is fully charged and properly inserted. Check if the safety switch is fully engaged before pressing the trigger.
- **Chain not moving or moving slowly:** Verify the chain tension is correct. The chain might be too tight or too loose. Check for any obstructions or debris in the guide bar or chain. Ensure the battery has sufficient charge.
- **Poor cutting performance:** The chain might be dull. Replace it with one of the spare chains provided. Ensure the chain is installed with the cutting teeth facing the correct direction.
- **Overheating:** The chainsaw has built-in overheating protection. If it stops due to overheating, allow it to cool down before resuming operation. Ensure proper chain lubrication and avoid excessive force during cutting.

For persistent issues or technical support, please contact TARANZY customer service.

WARRANTY AND SUPPORT

Your TARANZY 6-Inch Cordless Mini Chainsaw is backed by an **18-month warranty**, ensuring peace of mind with your purchase. We are committed to providing exceptional after-sales service and technical support to address any problems you may encounter. Our team aims to solve your issues within 24 hours. For warranty claims, technical assistance, or any questions regarding your product, please contact TARANZY customer support through the platform where you made your purchase. Purchase with confidence, knowing you're backed by reliable customer support.

Related Documents - MC2 - Vibrant Orange High-Power Chainsaw

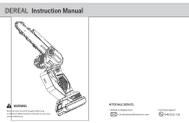	<p>Common Questions and Answers for Bomves 6-Inch Cordless Mini Chainsaw</p> <p>Find answers to common questions about the Bomves 6-inch cordless mini chainsaw, covering chain installation, battery issues, overheating, shaking, and power problems.</p>
	<p>DEREAL Instruction Manual for Cordless Mini Chainsaw</p> <p>Comprehensive instruction manual for the DEREAL cordless mini chainsaw, covering safety precautions, operation, assembly, maintenance, and troubleshooting for safe and effective use.</p>
	<p>NaTiddy 21V Cordless Mini Chainsaw User Manual</p> <p>Comprehensive user manual for the NaTiddy 21V Cordless Mini Chainsaw, covering safety instructions, product specifications, operation, maintenance, and after-sales information. Learn how to safely and effectively use your cordless chainsaw.</p>

INSTRUCTION MANUAL - USER MANUAL



Please read instruction carefully before use.
If you have any problem, please contact us at
tingmengte@163.com

[Tingmengte Mini Chainsaw Instruction Manual - Safety, Operation, and Maintenance](#)

Comprehensive instruction manual for the Tingmengte 24V cordless mini chainsaw. Covers safety warnings, package contents, operating instructions, chain adjustment, lubrication, battery charging, maintenance, and storage.



[YHYXPO 4-Inch Cordless Chainsaw Instruction Manual \(Model DL-08\)](#)

This instruction manual provides comprehensive safety guidelines, product details, assembly instructions, operating procedures, troubleshooting tips, and warranty information for the YHYXPO 4-Inch Cordless Chainsaw, Model DL-08.



[Vastar Mini Wireless Electric Chain Saw: Operation Instructions & Safety Guide](#)

Comprehensive operation instructions and safety guide for the Vastar Mini Wireless Electric Chain Saw (Model AAVABK0101). Learn about its features, components, safe usage, and troubleshooting for efficient tree trimming and gardening.