

Portronics Ruffpad 8.5E

Portronics Ruffpad 8.5E LCD Writing Pad Instruction Manual

Model: Ruffpad 8.5E (POR-1383)

1. INTRODUCTION

The Portronics Ruffpad 8.5E is a re-writable LCD writing pad designed for drawing, writing, and note-taking. It utilizes pressure-sensitive technology to create lines of varying thickness, offering a paperless and eco-friendly alternative for various uses, from children's learning to office notes. The LCD screen is designed to be safe for eyes, radiation-free, and glare-free.

2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Portronics Ruffpad 8.5E LCD Writing Pad
- Stylus
- Battery (pre-installed or separate)

3. PRODUCT OVERVIEW

Familiarize yourself with the key components of your Ruffpad 8.5E:

- **Writing Surface:** The 8.5-inch LCD screen where you write or draw.
- **Stylus:** The pen-like tool used for writing and drawing on the screen. It can be stored in the integrated stylus dock.
- **Erase Button:** A button, typically located at the bottom center, used to clear all content from the screen.
- **Lock Switch:** A small switch, usually on the back or side, that prevents accidental erasure of content.
- **Battery Compartment:** Located on the back, housing the replaceable button-cell battery.



Image: Front view of the Portronics Ruffpad 8.5E LCD Writing Pad.

4. SETUP

4.1 Battery Installation/Check

The Ruffpad 8.5E typically comes with a pre-installed battery. If the screen does not respond or clear, you may need to check or replace the battery.

1. Locate the battery compartment on the back of the device.
2. Use a small screwdriver or coin to open the battery cover.
3. Insert a new CR2025 button-cell battery with the positive (+) side facing up.
4. Close the battery cover securely.



Low power Consumption Durable Using

Image: Close-up of the battery compartment on the Ruffpad 8.5E, showing the button cell battery.

5. OPERATING INSTRUCTIONS

5.1 Writing and Drawing

Use the included stylus to write or draw directly on the LCD screen. The pressure-sensitive technology allows for varying line thickness based on how firmly you press the stylus.

WRITING A BETTER STORY

Take notes or create doodles saving paper and trees.



Image: A person using the stylus to write on the Ruffpad 8.5E.

5.2 Erasing Content

To clear the entire screen, press the erase button located at the bottom of the pad. All content will be instantly removed.



Image: Illustration showing the one-touch erase button on the Ruffpad 8.5E.

5.3 Using the Lock Function

The Ruffpad 8.5E features an anti-erase lock button to prevent accidental deletion of your written or drawn content. Locate the lock switch, usually on the side or back of the device, and slide it to the 'Lock' position to disable the erase button. Slide it back to 'Unlock' to enable erasing.



Prevent mistake Clean lock button

No need eraser, button turn on to lock screen
protect children's painting be cleared



Image: Close-up of the lock switch on the back of the Ruffpad 8.5E.

6. MAINTENANCE

6.1 Cleaning the Screen

To clean the LCD screen, gently wipe it with a soft, lint-free cloth. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the screen.

6.2 Battery Care

The Ruffpad 8.5E uses a low-power consumption design. When the screen becomes dim or the erase function stops working, it's time to replace the battery. Always use the specified CR2025 button-cell battery.

7. TROUBLESHOOTING

- **Screen not clearing:**
 1. Check if the lock switch is in the 'Lock' position. Slide it to 'Unlock' and try erasing again.
 2. The battery may be low or depleted. Replace the CR2025 battery.
- **Stylus not writing:**
 1. Ensure you are using the correct stylus provided with the device.
 2. The screen may be damaged. Contact customer support if the issue persists.
- **Faint writing:**
 1. The battery might be low. Replace the CR2025 battery.
 2. Ensure you are applying sufficient pressure with the stylus.

8. SPECIFICATIONS

Feature	Detail
Model Name	Ruffpad 8.5E
Model Number	POR-1383
Display Type	LCD
Screen Size	8.5 Inches (21.5 cm)
Active Surface Area	12.5 cm x 22.7 cm
Special Features	Anti-Glare Glass, Stylus Dock
Power Source	Button Cell Battery (CR2025)
Item Weight	120 Grams
Item Dimensions (L x W)	22.7L x 12.5W Centimeters
Color	Black
Country of Origin	China

9. WARRANTY INFORMATION

The Portronics Ruffpad 8.5E comes with a **1 Year Manufacturer Warranty** from the date of purchase. Please retain your purchase receipt for warranty claims. The warranty covers manufacturing defects but does not cover damage caused by misuse, accidents, or unauthorized repairs.

10. CUSTOMER SUPPORT

For any assistance, queries, or support regarding your Portronics Ruffpad 8.5E, please contact us:

- **Call/WhatsApp:** 9555-245-245
- **Support/Email:** <https://support.portronics.com>
- **Operating Hours:** 10 am - 6 pm

Manufacturer Address: Portronics Digital Pvt Ltd, FLOOR-1st and 2nd, B-76, Wazirpur Industrial area, Wazirpur, New Delhi, Delhi, 110052

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question