

Paw Patrol PAWC3018

Paw Patrol PAWC3018 Interactive Kids Camera User Manual

Model: PAWC3018

1. INTRODUCTION

Thank you for purchasing the Paw Patrol PAWC3018 Interactive Kids Camera. This manual provides essential information for the safe and effective use of your new device. Please read it thoroughly before operation and retain it for future reference.

2. SAFETY INFORMATION

- This product is intended for children aged 3 years and older.
- Do not expose the camera to water or excessive moisture. It is not waterproof.
- Avoid dropping the camera or subjecting it to strong impacts.
- Do not attempt to disassemble or repair the camera yourself. Contact customer support for assistance.
- Use only the provided charging cable and a compatible power source.
- Adult supervision is recommended during use, especially when handling small parts like the SD card.

3. PACKAGE CONTENTS

Ensure all items are present in the package:

- Paw Patrol PAWC3018 Interactive Kids Camera Body
- Accessory for camera (e.g., wrist strap or neck strap)
- USB Charging Cable
- Micro SD Card (pre-installed or included separately)
- User Manual (this document)

4. PRODUCT OVERVIEW



Figure 1: Front View of the Camera

The camera features a blue body with red grips on the sides. The front panel displays Paw Patrol characters Marshall, Chase, Skye, and Rubble around the camera lens.



Figure 2: Back View of the Camera

The back of the camera features a central LCD screen, surrounded by yellow control buttons for navigation and function selection. The 'Paw Patrol' logo is visible at the top center.

5. SETUP

5.1 Charging the Camera

The camera is equipped with a Lithium-ion battery. Before first use, fully charge the camera.

1. Connect the provided USB charging cable to the camera's USB port.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.

3. The charging indicator light will illuminate. It will turn off or change color once charging is complete.

5.2 Inserting/Removing the Micro SD Card

A Micro SD card is required to store photos and videos. A card is typically included with the product.

1. Locate the Micro SD card slot on the camera (refer to product diagrams if available).
2. Gently insert the Micro SD card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. To remove, gently push the card inward until it clicks, then release. The card will partially eject, allowing you to pull it out.

5.3 Powering On/Off

- **To Power On:** Press and hold the Power button (usually located near the screen or on top) for a few seconds until the screen illuminates.
- **To Power Off:** Press and hold the Power button again until the screen turns off.

5.4 Attaching the Strap

Attach the provided strap to the designated loops on the camera for secure carrying and to prevent accidental drops.

6. OPERATING THE CAMERA

The camera offers various modes for interactive fun.

6.1 Navigation

Use the directional buttons (up, down, left, right) and the 'OK' or 'Enter' button to navigate through menus and select options on the LCD screen.

6.2 Photo Mode

To take a photo:

1. Select the 'Photo' icon from the main menu.
2. Frame your shot using the LCD screen.
3. Press the 'Shutter' button (usually on top of the camera) to capture the image.

6.2.1 Digital Zoom

While in Photo mode, use the designated zoom buttons (often marked with '+' and '-') to digitally zoom in or out. The camera supports Digital Zoom.

6.2.2 Image Effects and Filters

The camera includes fun filters and special effects. Navigate through the photo settings to apply these before or after taking a picture. These include Paw Patrol themed filters.

6.2.3 Burst Mode

The camera supports a burst mode, allowing it to take multiple photos in quick succession (e.g., 30 FPS). Consult the on-screen menu for activating this feature.

6.3 Video Mode

To record a video:

1. Select the 'Video' icon from the main menu.
2. Press the 'Shutter' button to start recording.
3. Press the 'Shutter' button again to stop recording.

6.4 MP3 Player

The camera features a built-in MP3 player with speakers.

1. Select the 'MP3' icon from the main menu.
2. Use the navigation buttons to browse your music files (stored on the SD card).
3. Press 'OK' to play a selected track.

6.5 Games

Enjoy a selection of educational and fun games pre-loaded on the camera.

1. Select the 'Games' icon from the main menu.
2. Choose a game from the list and press 'OK' to start.
3. Follow the on-screen instructions to play.

7. FILE MANAGEMENT

7.1 Viewing Photos and Videos

To review your captured media:

1. Select the 'Playback' or 'Gallery' icon from the main menu.
2. Use the left/right navigation buttons to scroll through your photos and videos.
3. Press 'OK' to view a photo or play a video.

7.2 Deleting Files

To delete unwanted photos or videos:

1. In Playback mode, select the file you wish to delete.
2. Access the options menu (often by pressing a specific button, refer to on-screen prompts).
3. Select 'Delete' and confirm your choice.

7.3 Transferring Files to a Computer

You can transfer your media files to a computer using the USB cable or by directly accessing the Micro SD card.

- **Using USB:** Connect the camera to your computer with the USB cable. The camera should appear as a removable drive. You can then copy files from the camera's storage.
- **Using SD Card Reader:** Remove the Micro SD card from the camera and insert it into a compatible SD card reader connected to your computer.

8. MAINTENANCE

- Clean the camera body with a soft, dry cloth. Do not use liquid cleaners.
- Gently wipe the lens with a lens cleaning cloth.
- Store the camera in a cool, dry place away from direct sunlight when not in use.

9. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|----------------------------|--|---|
| Camera does not turn on. | Battery is depleted. | Charge the camera fully. |
| Cannot take photos/videos. | SD card is full or not inserted correctly. | Check SD card insertion. Delete old files or replace the SD card. |
| Screen is frozen. | Software glitch. | Press and hold the Power button to force a shutdown, then restart the camera. |
| Poor image quality. | Low light conditions, dirty lens. | Ensure adequate lighting. Clean the camera lens. |

10. SPECIFICATIONS

| Feature | Detail |
|----------------------------|--|
| Brand | Paw Patrol |
| Model | PAWC3018 |
| Color | Blue |
| Product Type | Compact |
| Screen | 40 millimeters LCD |
| Image Stabilization | Digital |
| Special Features | Fun filters and special effects |
| Connectivity Technology | USB |
| Supported Formats | Micro SD Card |
| Battery Type | Lithium-ion |
| Video Resolution | 2048 x 1152 |
| Compatible Devices | SD card readers, computers, smartphones, tablets |
| Camera Lens | Fixed lens, basic, integrated |
| Burst Mode Speed | 30 FPS |
| ISO Range | 100-3200 |
| Water Resistance Level | Not waterproof |
| Zoom Type | Digital Zoom |
| Effective Still Resolution | 20 Megapixels |

| Feature | Detail |
|--------------------------------|------------------------------|
| Product Dimensions (L x W x H) | 8.5 x 15 x 4.5 cm; 218 grams |

11. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact the retailer. For technical support or further assistance, please visit the official Paw Patrol or Lexibook website, or contact their customer service department.