

HABA 306383

HABA Sensory Play Cube Farmyard Instruction Manual

Model: 306383

1. INTRODUCTION

Thank you for choosing the HABA Sensory Play Cube Farmyard. This multi-sensory activity cube is designed to engage infants aged 6 months and up, promoting fine motor skills, sensory awareness, and imaginative play. It features various tactile, auditory, and visual elements inspired by a farmyard theme.

2. SAFETY INFORMATION

Please read and retain these instructions for future reference. Ensure the product is used under adult supervision.

- **Age Recommendation:** Suitable for infants 6 months and older.
- **Inspection:** Before each use, inspect the play cube for any signs of damage or wear. Discontinue use if any parts are loose or broken.
- **Choking Hazard:** This product contains small parts (rattle beads, plastic rings) that are securely enclosed. Do not attempt to open or remove these parts.
- **Cleaning:** Follow the care instructions carefully to maintain hygiene and product integrity.
- **Storage:** Store the play cube in a clean, dry place away from direct sunlight when not in use.

3. PRODUCT OVERVIEW

The HABA Sensory Play Cube Farmyard is a soft, fabric cube featuring various interactive elements on each side and top. These elements are designed to stimulate different senses and encourage exploration.



Figure 3.1: Front view of the HABA Sensory Play Cube Farmyard, showing the tractor side and chicken on top.

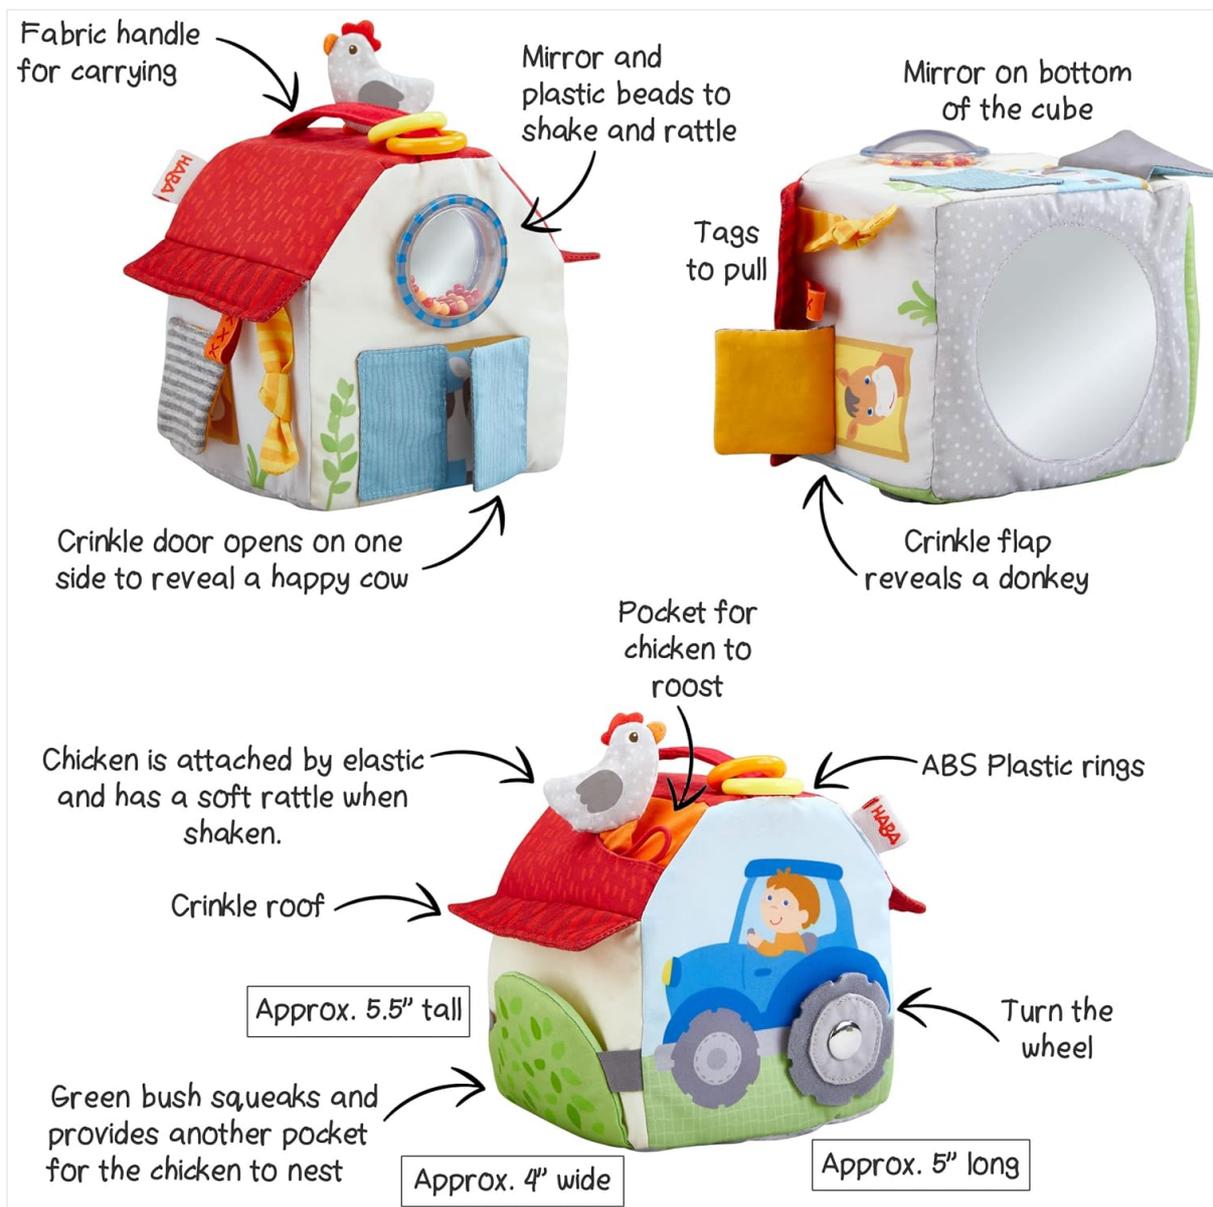


Figure 3.2: Detailed diagram highlighting key features of the play cube.

Key Features:

- **Fabric Handle:** Located on top for easy carrying.
- **Chicken with Rattle:** A soft chicken attached by elastic, containing a gentle rattle sound when shaken. It can be placed in a pocket on the roof or a green bush.
- **ABS Plastic Rings:** Colorful rings on top for grasping and teething.
- **Crinkle Roof:** The red roof material produces crinkling sounds when touched.
- **Mirror and Plastic Beads:** A clear window on one side contains plastic beads that rattle when shaken, and a reflective surface for visual stimulation.
- **Crinkle Door:** A fabric door that opens to reveal a happy cow, producing crinkle sounds.
- **Tractor Wheel:** A soft wheel on the tractor side that can be turned.
- **Tags to Pull:** Various fabric tags and ribbons for tactile exploration.
- **Crinkle Flap:** A flap that reveals a donkey, offering another crinkle sound.
- **Mirror on Bottom:** A large, child-safe mirror on the underside of the cube for self-discovery during tummy time.



Figure 3.3: Side view of the play cube, featuring the large mirror for self-discovery.

4. SETUP

The HABA Sensory Play Cube Farmyard requires no assembly. It is ready for play directly out of the packaging.

1. Remove all packaging materials and dispose of them properly.
2. Inspect the play cube for any damage before giving it to a child.

5. OPERATING INSTRUCTIONS

Encourage your child to explore the various features of the play cube. This toy is designed for open-ended play and sensory exploration.

- **Tactile Exploration:** Let your child touch and feel the different fabric textures, pull the tags, and turn the tractor wheel.
- **Auditory Stimulation:** Shake the cube to hear the rattle beads and the chicken's soft rattle. Squeeze or crinkle the roof and flaps to produce crinkling sounds.
- **Visual Engagement:** Encourage your child to look at their reflection in the mirror and observe the colorful farm animals.

- **Fine Motor Skills:** Practice grasping the plastic rings, opening and closing the crinkle door, and placing the chicken in its pockets.

6. CARE AND MAINTENANCE

To ensure the longevity and hygiene of your HABA Sensory Play Cube Farmyard, follow these care instructions:

- **Washing:** The play cube is machine washable. Use a gentle cycle with cold water.
- **Detergent:** Use a mild, baby-safe detergent.
- **Drying:** Air dry thoroughly. Do not tumble dry, as this may damage the internal components or fabric.
- **Spot Cleaning:** For minor spills, spot clean with a damp cloth and mild soap.
- **Do Not Bleach:** Avoid using bleach or harsh chemicals.

7. TROUBLESHOOTING

If you encounter any issues with your play cube, please refer to the following common concerns:

- **No Crinkle Sound:** Ensure the fabric is being actively squeezed or manipulated. The crinkle material is designed to activate with movement.
- **Rattle Not Working:** Gently shake the cube or the chicken. If the rattle sound is absent or significantly diminished, inspect for any external damage.
- **Mirror Appears Cloudy:** The mirror is a child-safe reflective foil. Clean it gently with a soft, damp cloth. Avoid abrasive cleaners.
- **Loose Threads:** Occasionally, minor loose threads may appear. Trim them carefully with scissors. Do not pull them.

If problems persist or you have concerns about product safety, please contact HABA customer support.

8. SPECIFICATIONS

| | |
|---------------------------|-------------------------------------|
| Product Name | HABA Sensory Play Cube Farmyard |
| Model Number | 306383 |
| Brand | HABA |
| Recommended Age | 6 months and up |
| Product Dimensions | 5.12 x 4.33 x 5.12 inches (approx.) |
| Item Weight | 3.2 ounces (approx.) |
| Materials | Cotton, ABS plastic, PET |

9. WARRANTY AND SUPPORT

HABA products are known for their quality and durability. For specific warranty information or to contact customer support regarding your Sensory Play Cube Farmyard, please visit the official HABA website or refer to the contact information provided with your purchase. Please have your model number (306383) available when contacting support.

