

[Manuals.plus](#) /

› [DR1TECH](#) /

› DR1TECH GamePow PS5 Dualsense Controller Charging Station User Manual

DR1TECH DR10022

DR1TECH GamePow PS5 Dualsense Controller Charging Station User Manual

Model: DR10022

INTRODUCTION

This manual provides comprehensive instructions for the DR1TECH GamePow PS5 Dualsense Controller Charging Station. It covers product setup, operation, maintenance, troubleshooting, and technical specifications to ensure optimal performance and longevity of your device. The GamePow charging station is designed to efficiently charge two DualSense wireless controllers simultaneously, offering a secure and convenient charging solution.

PACKAGE CONTENTS

- DR1TECH GamePow PS5 Dualsense Controller Charging Station
- USB-C Snap-in Plugs (2 units)
- USB Charging Cable (Type-A to Type-C)
- User Manual

SETUP INSTRUCTIONS

Follow these steps to set up your DR1TECH GamePow charging station:

1. **Connect the Charging Station:** Connect the provided USB charging cable to the charging station's input port. Plug the other end of the cable into a compatible USB power source (e.g., a PS5 console USB port, a USB wall adapter).
2. **Attach Snap-in Plugs to Controllers:** Insert the small USB-C snap-in plugs into the USB-C port of your DualSense wireless controllers. These plugs are designed to remain in the controller for quick and easy docking.
3. **Place Controllers on Station:** Gently place your DualSense controllers onto the charging station, aligning the snap-in plugs with the charging contacts on the station. Ensure the controllers are seated firmly.



Image: The DR1TECH GamePow charging station with two USB-C snap-in plugs ready for controller connection. This image illustrates the main components of the charging station and the detachable USB-C connectors.

OPERATING INSTRUCTIONS

The GamePow charging station is designed for simple and safe operation.

- **Charging Process:** Once controllers are correctly placed on the station, charging will begin automatically. The station supports fast charging for two DualSense controllers simultaneously.
- **Charging Indicator:** The charging status can be monitored directly from your DualSense controller. The controller's light bar will display a yellow/orange LED during charging and turn off when fully charged.
- **Safety Features:** The GamePow charging station incorporates safety mechanisms to protect your DualSense controllers from overcharging, over-voltage, and overheating. This ensures safe charging, especially during extended periods such as overnight charging.

MAINTENANCE

To ensure the longevity and proper functioning of your charging station, follow these maintenance guidelines:

- **Cleaning:** Disconnect the charging station from the power source before cleaning. Use a soft, dry cloth to wipe the surface. Avoid using abrasive cleaners, solvents, or harsh chemicals.
- **Storage:** When not in use for extended periods, store the charging station in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the device or subjecting it to strong impacts. Do not attempt to disassemble or modify the charging station.

TROUBLESHOOTING

If you encounter issues with your DR1TECH GamePow charging station, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Controllers are not charging.	Charging cable not properly connected.	Ensure the USB charging cable is securely connected to both the station and the power source.
	Snap-in plugs not fully inserted into controllers.	Verify that the snap-in plugs are fully inserted into the controller's USB-C port.
	Controllers not correctly seated on the station.	Re-seat the controllers on the charging station, ensuring proper alignment.
	Power source issue.	Try a different USB port or power adapter.
Slow charging.	Insufficient power from the USB source.	Ensure the USB power source provides adequate power (e.g., a dedicated wall adapter or a high-power USB port on the console).
Controller LED does not indicate charging.	Similar to "Controllers are not charging" issues.	Refer to the solutions for "Controllers are not charging."

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- **Model:** DR10022
- **Product Dimensions:** 13.6 x 6.6 x 2.9 cm
- **Weight:** 90 grams
- **Compatibility:** PlayStation 5 DualSense Wireless Controllers
- **Charging Type:** Dual Fast Charging
- **Input:** USB-C

WARRANTY INFORMATION

DR1TECH products are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your product packaging or visit the official DR1TECH website. Keep your purchase receipt as proof of purchase for any warranty claims.

SUPPORT

For technical assistance, product inquiries, or in case of unexpected issues, please contact DR1TECH customer support. Contact information can typically be found on the product packaging, the official DR1TECH website, or through your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09GG66PZC>

More documents and user manuals: **<https://manuals.plus/>**