

[Manuals.plus](#) /

› [Radio Flyer](#) /

› Radio Flyer City Luxe Stroll 'N Wagon Instruction Manual (Model 3973Z)

Radio Flyer 3973Z

Radio Flyer City Luxe Stroll 'N Wagon Instruction Manual

Model: 3973Z

PRODUCT OVERVIEW

The Radio Flyer City Luxe Stroll 'N Wagon (Model 3973Z) offers luxury and comfort for every outing. This versatile vehicle features both a wagon pull handle and a fold-away push handlebar, providing ultimate convenience for various terrains. Designed for children aged 1+ years, it meets ASTM-F963-13 toy safety standards and supports a maximum weight capacity of 120 lbs.

IMPORTANT SAFETY INFORMATION

Please read all safety instructions provided inside the product packaging before assembly and use. Ensure all harnesses are securely fastened and the rear foot brake is engaged when stationary. Always supervise children when using the wagon.

- Rear foot brake for secure stops.
- 5-point safety harnesses for child security.
- UV protection canopy to shield from sun.
- Meets ASTM-F963-13 toy safety standard.

KEY FEATURES

- **Push and Pull Functionality:** Easily switch between pulling like a wagon with the NeverFall handle or pushing with the fold-away handlebar.
- **Ample Storage:** Includes a parent caddy, internal storage pockets for children, a rear storage pouch for the canopy, and two front cup holders.
- **Compact Folding:** Features an easy one-hand fold mechanism for convenient storage and portability.
- **Enhanced Safety:** Equipped with a rear foot brake, 5-point safety harnesses, and a UV protection canopy.
- **Durable Wheels:** Front caster wheels for nimble steering and large 12" easy-push rear wheels made of high-density foam for a smooth ride on various surfaces.

SETUP AND ASSEMBLY

The Radio Flyer City Luxe Stroll 'N Wagon requires minimal assembly. Refer to the included assembly guide for

detailed instructions. Typical assembly time is approximately 30 minutes.

1. Unpack all components from the box.
2. Unfold the wagon frame until it locks into place.
3. Attach the wheels if not pre-assembled (refer to specific diagrams in the printed manual).
4. Install the push handlebar and pull handle.
5. Attach the UV protection canopy by inserting the support rods into the designated slots at each corner.
6. Secure the parent caddy and any additional storage accessories.

Three ways to roll... one wagon for every adventure.

Ride



Bench



Haul



Image: Fully assembled Radio Flyer City Luxe Stroll 'N Wagon in Gray.

OPERATING INSTRUCTIONS

Folding and Unfolding

The wagon features an easy one-hand fold mechanism. To fold, locate the central strap on the wagon floor and pull upwards. The wagon will collapse for compact storage. To unfold, release the locking mechanism and push down on the center of the wagon until the frame clicks into place.

Check out our *wheely big* line-up!



ACCESSORIES



STROLLER WAGONS



WAGONS



TRIKES



SCOOTERS



GO-KARTS



RIDE-ONS



BALANCE BIKES



PUSH WALKERS

Image: A woman demonstrating the easy one-hand folding process of the wagon.

Push and Pull Modes

- **Pull Mode:** Utilize the NeverFall wagon pull handle located at the front. This handle is designed to prevent tipping when released.
- **Push Mode:** Engage the fold-away push handlebar at the back. Adjust the height of the handlebar by pressing the buttons on the sides for comfortable use.

Smooth transitions for effortless outings

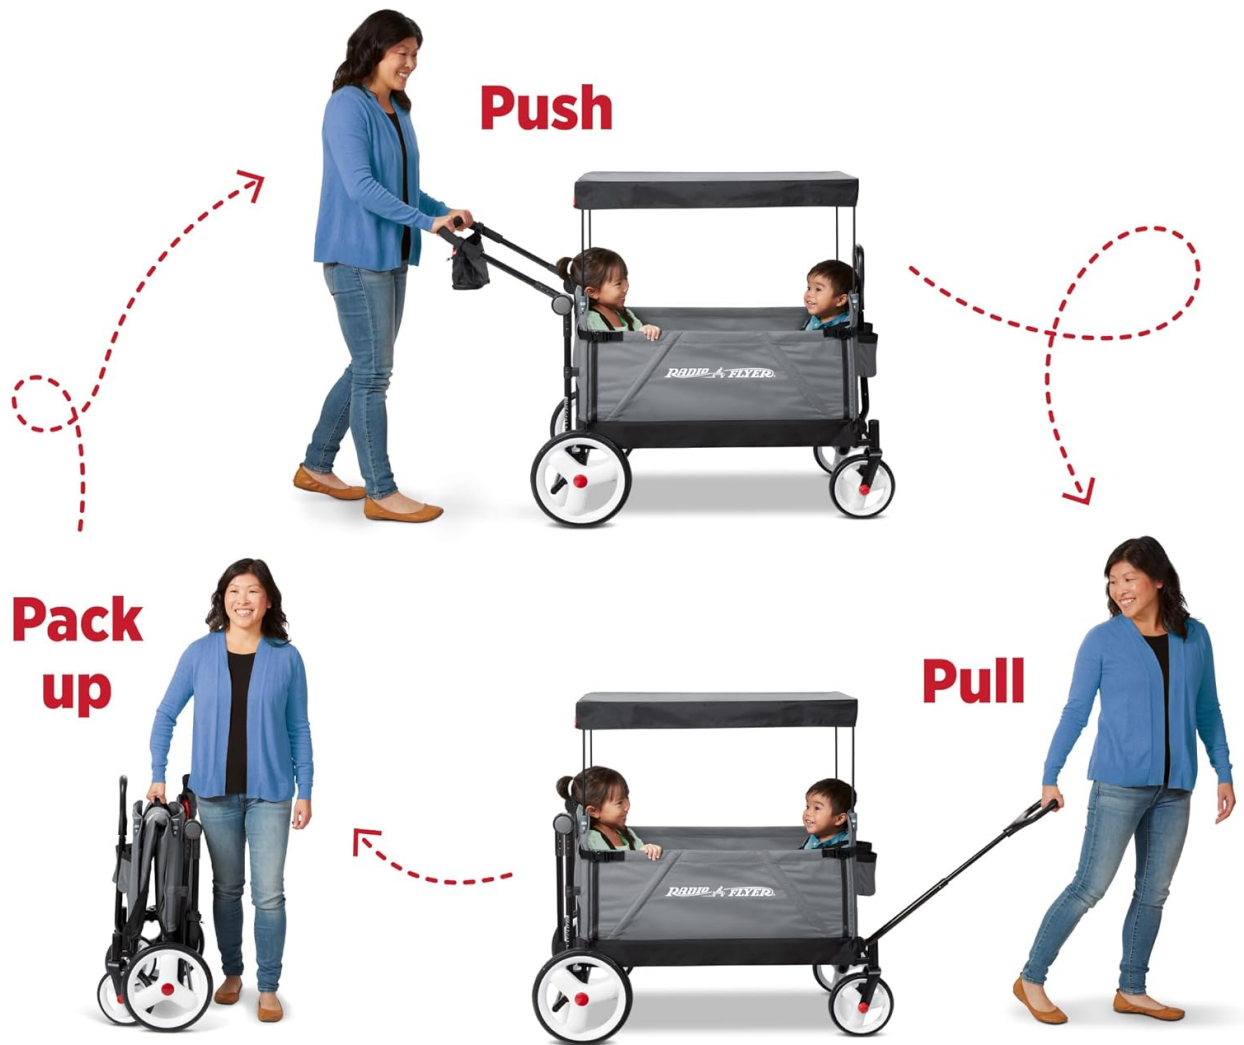 


Image: A woman demonstrating both push and pull modes of the wagon with children.

Bench Seating

The wagon features a unique bench seating option. Unzip and unbuckle one side of the wagon to create a comfortable bench for children to sit on, ideal for sporting events or picnics.



Less fuss,
more fun

Quick cleanup & easy entry



Image: Two children comfortably seated on the wagon's bench conversion.

MAINTENANCE

- **Cleaning Fabric:** The fabric components can be spot cleaned with mild soap and water. For deeper cleaning, some users report success with hosing down and air drying.
- **Wheel Care:** Periodically check wheels for debris and ensure they spin freely. Lubricate axles if squeaking occurs, especially after exposure to rain.
- **Frame Inspection:** Regularly inspect the metal frame for any signs of damage or loose connections.

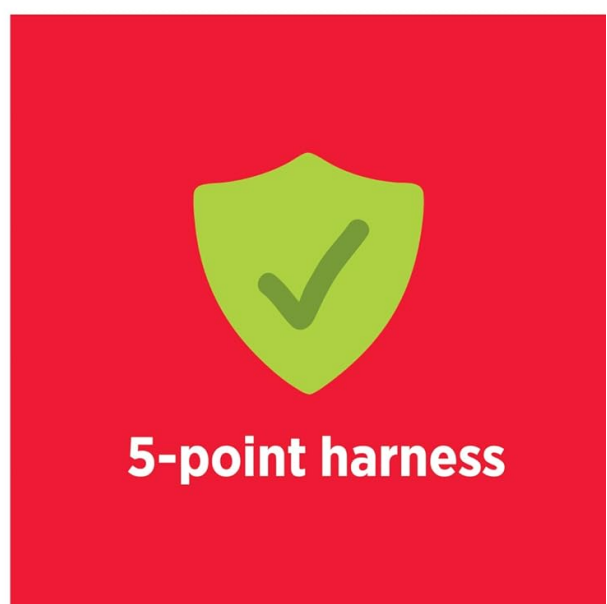 
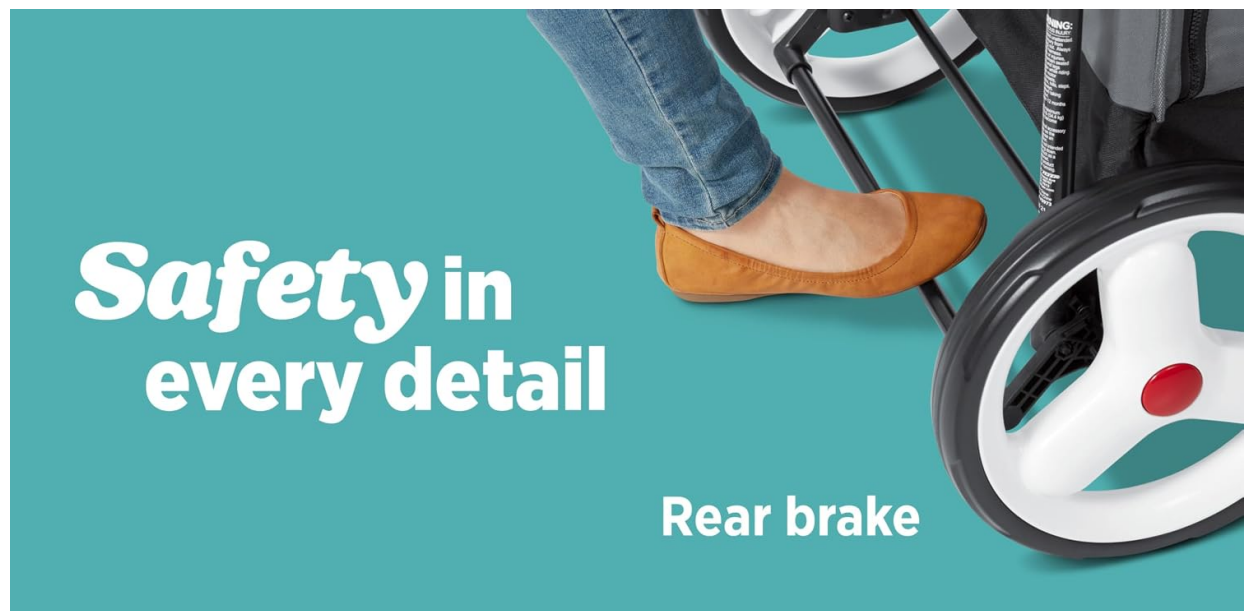 


Image: A hand cleaning the gray fabric of the wagon.

TROUBLESHOOTING

- **Squeaky Wheels:** Apply a silicone-based lubricant to the wheel axles.
- **Difficulty Folding/Unfolding:** Ensure all locking mechanisms are disengaged. Check for any obstructions in the folding joints.
- **Canopy Instability:** Verify that all four support rods are fully extended and securely clicked into place.

SPECIFICATIONS

Product Dimensions	24.4"D x 47.2"W x 41.3"H
Brand	Radio Flyer
Material	Alloy Steel, Plastic, Polyester (41.5% Steel, 23.3% Plastic, 35.2% Polyester)
Color	Gray
Special Features	Adjustable Handle, Built-In Cup Holder, Collapsible, Compact, Portable

Item Weight	31.3 Pounds
Number of Wheels	4
Weight Limit	120 Pounds
Assembly Required	Yes (Approx. 30 Minutes)
Model Number	3973Z
UPC	042385115962

WARRANTY AND SUPPORT

This product comes with a **1-year warranty** against manufacturer defects. For warranty claims, technical support, or replacement parts, please contact Radio Flyer customer service directly. Contact information can typically be found on the official Radio Flyer website or in the original product packaging.