

Glem ST664MI

Glem Gas ST664MI 60x60 Cooker with Multifunction Oven User Manual

Model: ST664MI

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Glem Gas ST664MI 60x60 cooker. Please read all instructions carefully before using the appliance and keep this manual for future reference.

Key Features:

- **Titanium Enamel Interior:** The oven's internal Titanium enamel features a low-porosity technology, preventing dirt adhesion and making cleaning more efficient. This enamel is also highly resistant to acids, maintaining its shine and color over time.
- **Triple Crown Burner:** Positioned on the left, the 3.6 kW triple crown burner optimizes the use of other hobs, allowing for larger pans (up to 30 cm diameter) without obstructing other cooking areas.
- **Under-Knob Ignition:** Easily ignite the gas burners by simply pressing and turning the control knob.
- **Comfort Door Closure:** A new hinge system ensures smooth and quiet opening and closing of the oven door, enhancing user comfort.
- **Full Glass Inner Door:** The oven door features a completely smooth, full glass interior, which can be easily removed without tools for thorough cleaning.
- **Built-in Compatibility:** All Glem cookers are approved for installation adjacent to modular furniture, complying with UNI EN 30-1-1 Class 2 standards.
- **Multifunction Electric Fan Oven:** The oven includes a circular heating element around the fan in the rear wall, ensuring uniform heat distribution for precise cooking results across 12 programs.

SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your Glem Gas ST664MI cooker. It must be installed by a qualified technician in accordance with local regulations and the provided installation instructions.

Unpacking:

- Carefully remove all packaging materials.
- Check the appliance for any signs of damage. If damaged, do not install or use it, and contact your retailer.
- Keep packaging materials out of reach of children.

Positioning and Dimensions:

The cooker is designed for floor mounting and can be installed adjacent to kitchen furniture, provided it meets UNI EN 30-1-1 Class 2 standards for built-in appliances. Ensure adequate ventilation as per installation guidelines.



Image: Technical diagram illustrating the dimensions of the Glem Gas ST664MI cooker. The diagram shows a top view of the hob with four burners, a front view of the cooker, and a side view with height and depth measurements. The overall dimensions are approximately 60 cm width, 60 cm depth, and adjustable height between 86-91 cm (or 92-97 cm depending on leg adjustment).

- Product Dimensions: 60 x 60 x 91 cm (Width x Depth x Height).
- Ensure sufficient clearance from walls and cabinets as specified in the full installation manual.

Electrical and Gas Connections:

All electrical and gas connections must be performed by a licensed professional. Verify that the voltage and gas supply pressure match the specifications on the appliance's rating plate.

OPERATING INSTRUCTIONS

Gas Hob Operation:

Your cooker is equipped with four gas burners, including a powerful triple crown burner.

1. **Ignition:** To light a burner, push in the corresponding control knob and turn it counter-clockwise to the maximum flame setting (large flame symbol). The integrated igniter will spark.
2. **Flame Adjustment:** Once lit, hold the knob for a few seconds to allow the thermocouple to heat up. Release the knob; if the flame extinguishes, repeat the process. Adjust the flame size by turning the knob between the maximum and minimum flame settings.
3. **Turning Off:** To turn off a burner, turn the knob clockwise to the 'off' position (dot symbol).

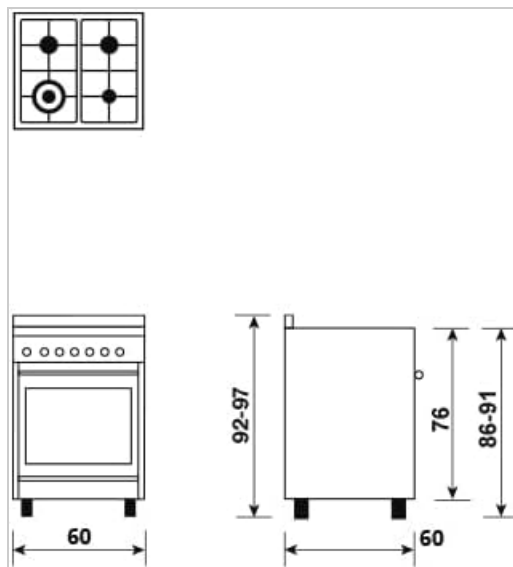


Image: Top view of the Glem Gas ST664MI cooker's gas hob, showing four burners. One burner, typically the triple crown, is larger and positioned on the left, while the other three are standard size.

Multifunction Electric Oven Operation:

The oven offers 12 cooking programs for versatile meal preparation.

1. **Program Selection:** Use the function selector knob to choose the desired cooking program (e.g., conventional, fan-assisted, grill, pizza).
2. **Temperature Setting:** Use the thermostat knob to set the desired cooking temperature. The oven indicator light will illuminate during heating and turn off when the set temperature is reached.
3. **Preheating:** For best results, preheat the oven to the desired temperature before placing food inside.
4. **Cooking Programs:** Refer to the full oven program guide (usually printed on the oven door or in a separate section of the manual) for specific recommendations for different food types. The fan-assisted function ensures even heat distribution, ideal for baking and roasting.
5. **Timer:** If equipped, use the timer function to set cooking duration.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your cooker. Always ensure the appliance is cool and disconnected from the power supply before cleaning.

Hob Cleaning:

- Remove pan supports and burner caps. Wash them with warm soapy water.
- Clean the hob surface with a soft cloth and a mild detergent. For stainless steel surfaces, use a specialized stainless steel cleaner to avoid streaks.
- Ensure all parts are completely dry before reassembling.

Oven Cleaning:

- **Titanium Enamel:** The low-porosity Titanium enamel interior makes cleaning easier. Wipe down the interior with a damp cloth and mild detergent after each use, once the oven has cooled.
- **Full Glass Inner Door:** The inner glass panel can be easily removed without tools for thorough cleaning. Consult the full manual for specific instructions on removing the glass.
- For stubborn stains, use a non-abrasive oven cleaner suitable for enamel surfaces.

General Maintenance:

- Regularly check the condition of the gas hose and electrical cable.
- Do not use abrasive cleaners, scourers, or harsh chemicals as they can damage surfaces.
- For any technical issues or repairs, contact authorized service personnel only.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Burner does not light.	No gas supply, igniter blocked, or knob not held long enough.	Check gas supply. Clean igniter. Hold knob for 5-10 seconds after ignition.
Oven not heating.	Power supply issue, incorrect program/temperature setting, or oven door not closed properly.	Check power connection. Verify program and temperature settings. Ensure oven door is fully closed.
Uneven cooking in oven.	Overcrowding, incorrect rack position, or dirty fan.	Avoid overcrowding. Use recommended rack positions. Clean oven interior and fan area.
Gas smell.	Gas leak.	Immediately turn off gas supply, open windows, do not operate electrical switches, and contact a qualified technician.

If the problem persists after trying these solutions, please contact Glem Gas customer support or an authorized service center.

PRODUCT SPECIFICATIONS

Brand	Glem
Model Number	ST664MI
Product Dimensions (W x D x H)	60 x 60 x 91 cm
Material	Stainless Steel

Energy Efficiency Class	A+
Hob Type	Gas (3 standard + 1 Triple Crown burner)
Oven Type	Multifunction Electric Fan Oven
Number of Oven Programs	12
Ignition Type	Under-knob ignition
Oven Interior	Titanium Enamel
Door Type	Full Glass Inner Door with Comfort Closure
Installation Type	Floor Mounting, Built-in Compatible (UNI EN 30-1-1 Class 2)

WARRANTY AND SUPPORT

For detailed information regarding the warranty period and terms for your Glem Gas ST664MI cooker, please refer to the warranty card included with your appliance or visit the official Glem Gas website.

Should you require technical assistance, spare parts, or have any questions not covered in this manual, please contact Glem Gas customer support or an authorized service center. Contact details can typically be found on the manufacturer's website or in your purchase documentation.

Important: Always ensure that any repairs or servicing are carried out by qualified and authorized personnel to maintain the safety and validity of your warranty.

© 2023 Glem Gas. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question