

[Manuals.plus](#) /

› [Rulefiss](#) /

› Rulefiss BX27 Wireless Sport Earbuds User Manual

Rulefiss BX27

Rulefiss BX27 Wireless Sport Earbuds User Manual

Model: BX27

INTRODUCTION

Thank you for choosing the Rulefiss BX27 Wireless Sport Earbuds. These earbuds are designed to provide a superior audio experience with advanced features such as Bluetooth 5.4 connectivity, Environmental Noise Cancellation (ENC), and IPX7 waterproofing, making them ideal for workouts, running, and daily use. This manual will guide you through the setup, operation, and maintenance of your new earbuds to ensure optimal performance and longevity.

Wireless Sport Earbuds RULEFISS BX27



Image: Rulefiss BX27 Wireless Sport Earbuds with their charging case, highlighting the product name.

WHAT'S IN THE BOX?

Please check the contents of your package to ensure all items are present:

- BX27 Bluetooth 5.4 Earbuds (2 pieces)
- USB-C Charging Cable (1 piece)
- User Manual (English, Spanish, French, etc.) (1 piece)

- Charging Box (1 piece)
- Soft Silicone Ear Caps (6 pieces - L/M/S sizes)

Wide Compatibility



Watch



Computer



Phone



Laptop



Image: A visual representation of all items included in the Rulefiss BX27 product package, including earbuds, charging case, USB-C cable, user manual, and ear tips.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Rulefiss BX27 earbuds and charging case.



Image: The Rulefiss BX27 earbuds displayed within their open charging case, showing the digital battery display.

Key Features

- **Bluetooth 5.4 Technology:** Ensures a stable and fast connection with minimal signal loss.
- **75 Hours Total Playtime:** Extended battery life with the portable charging case.
- **4 ENC Microphones:** Enhances call clarity by reducing environmental noise.
- **IPX7 Waterproof:** Resistant to sweat and splashes, suitable for intense workouts.
- **Smart Touch Control:** Easy management of music, calls, and voice assistant.
- **Dual LED Display:** Real-time monitoring of charging case and earbud battery levels.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

- Connect the USB-C cable to the charging port on the case and a power source.
- The dual LED display on the case will show the charging status. The percentage indicates the case battery, and the earbud icons will show their individual charging status.
- A full charge for the case takes approximately 1.5 hours.
- The earbuds provide up to 15 hours of continuous use on a single charge, with the charging case extending total playtime to 75 hours.

DUAL LED POWER DISPLAY



100

Battery Percentage of
Charging Case



LED Power Display of
the Earbud

Image: The charging case with its dual LED display showing the battery percentage of the case and the charging status of the earbuds.

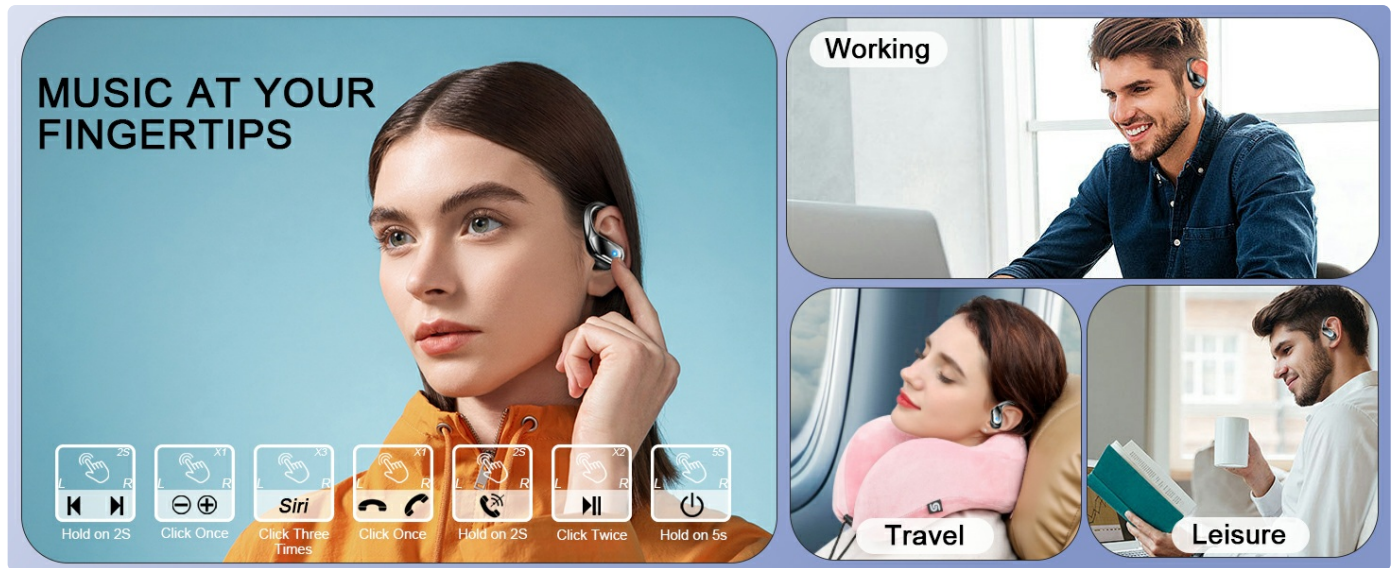 


Image: Infographic illustrating the 75 hours total playtime with the charging case and 15 hours on a single earbud charge, alongside the dual power display.

2. Pairing with Your Device

The earbuds feature one-step automatic pairing.

1. Open the charging case. The earbuds will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, computer), enable Bluetooth.
3. Search for "BX27" in the list of available Bluetooth devices and select it to connect.
4. Once connected, you will hear a confirmation prompt, and the earbuds will be ready for use.
5. For subsequent uses, the earbuds will automatically connect to the last paired device when removed from the case.

NEW BLUETOOTH 5.4

Faster and more stable connection



5.4
BLUETOOTH 5.4

Image: Close-up of an earbud highlighting the internal components and the Bluetooth 5.4 chip, emphasizing faster and more stable connection.

OPERATING INSTRUCTIONS

Touch Controls

The Rulefiss BX27 earbuds feature sensitive touch controls for easy management of your audio and calls.


Action	Left Earbud (L)	Right Earbud (R)
Play/Pause	Click Once	Click Once

Action	Left Earbud (L)	Right Earbud (R)
Next Track	Click Twice	
Previous Track		Click Twice
Volume Up		Hold for 2 seconds
Volume Down	Hold for 2 seconds	
Answer/End Call	Click Once	Click Once
Reject Call	Hold for 2 seconds	Hold for 2 seconds
Activate Voice Assistant (Siri/Google Assistant)	Click Three Times	Click Three Times
Power On/Off	Hold for 5 seconds	Hold for 5 seconds

SMART TOUCH CONTROL



 Hold on 2S

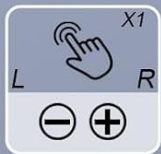

Click Once



Click Three Times



Click Once



Hold on 2S



Click Twice



Hold on 5s

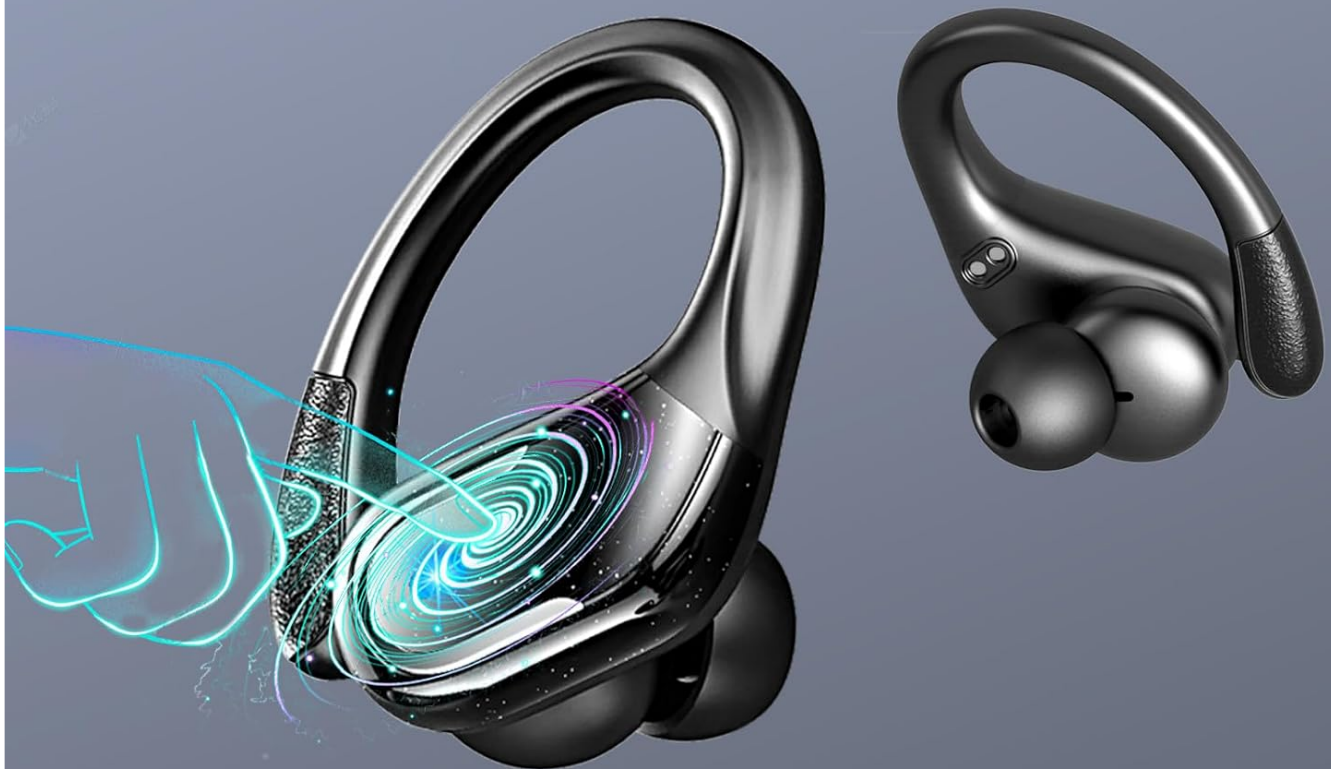 


Image: A visual guide demonstrating the various touch control gestures on the earbuds for music, calls, and voice assistant.

ENC Noise Canceling For More Immersive Music and Clearer Call

ENC technology can eliminate nearly 75% of noise in noisy environments, bringing you more immersive music enjoyment and a clearer call environment



Image: A user interacting with the earbud's touch controls, with illustrations of various touch gestures and scenarios like working, travel, and leisure.

Wearing the Earbuds

For optimal sound quality and comfort, ensure a proper fit.

- Select the ear tips (S/M/L) that provide the best seal and comfort for your ears.
- Place the earbud in your ear and adjust the flexible earhook over your ear for a secure fit.
- The ergonomic design ensures the earbuds stay in place during vigorous activities.



Image: A person wearing the earbuds while water is splashed on their face, demonstrating the comfortable fit and IP7 waterproof rating, along with images of flexible earhooks and different ear tip sizes.

Long Playtime&Dual Power Display



75 Hrs
Charging Case



15 Hrs
Single Charge



Battery Status
of the Charging Case



Power Display of
the Headphones



Image: A person exercising, showcasing the secure fit of the earbuds with flexible earhooks and ergonomic design, and illustrating the three types of ear tips (S, M, L).

MAINTENANCE

Cleaning

- Regularly clean the earbuds, especially the ear tips and charging contacts, with a soft, dry, lint-free cloth.
- Do not use harsh chemicals or abrasive materials.
- Ensure the earbuds are dry before placing them back into the charging case.

Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place away from extreme temperatures and direct sunlight.

Water Resistance (IPX7)

The earbuds are IPX7 waterproof, meaning they can withstand splashes, sweat, and rain. They are not designed for swimming or submersion in water for extended periods.

- Do not intentionally submerge the earbuds in water.
- If the earbuds get wet, wipe them dry thoroughly before placing them back in the charging case to prevent damage to the charging contacts.

Ultra-light and portable design

4g Feather-Lightweight



Image: An earbud with water droplets on its surface, set against a watery background, illustrating its IP7 sweat-resistant capability.

TROUBLESHOOTING

If you encounter any issues with your Rulefiss BX27 earbuds, try the following solutions:

Problem	Possible Solution
Earbuds not pairing/connecting	◦ Ensure earbuds are charged. ◦ Turn off and on Bluetooth on your device. ◦ Forget "BX27" from your device's Bluetooth list and re-pair. ◦ Place earbuds back in the case, close, then reopen to reset.
Only one earbud working	◦ Ensure both earbuds are charged. ◦ Place both earbuds back in the charging case, close the lid, wait a few seconds, then open again. ◦ Try resetting the earbuds (refer to manual for specific reset procedure if needed).
Low volume or poor sound quality	◦ Adjust volume on both earbuds and your connected device. ◦ Ensure ear tips are properly sealed in your ear canal. Try different sized ear tips. ◦ Clean any debris from the earbud nozzles.
Charging case not charging	◦ Check the USB-C cable and power adapter. ◦ Ensure the charging port is clean and free of debris. ◦ Try a different charging cable or power source.

Problem	Possible Solution
Touch controls not responding	◦ Ensure your fingers are clean and dry. ◦ Try restarting the earbuds by placing them in the case and taking them out.

If the problem persists, please contact Rulefiss customer support for further assistance.

SPECIFICATIONS

Detailed technical specifications for the Rulefiss BX27 Wireless Sport Earbuds:

Feature	Detail
Model Name	BX27
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.4
Bluetooth Range	15 Meters (approx. 33 feet)
Audio Driver Size	14.2 mm
Audio Driver Type	Dynamic Driver
Noise Control	Sound Isolation (ENC Noise Cancelling)
Battery Life (Earbuds)	Up to 15 hours (single charge)
Total Playtime (with Charging Case)	Up to 75 hours
Charging Time	Approx. 1.5 hours (for case)
Charging Case Battery Capacity	650 mAh
Water Resistance Level	IPX7 (Waterproof)
Control Type	Touch Control
Ear Placement	In Ear with Over-Ear Hook
Product Dimensions	1.97 x 0.98 x 1.18 inches
Item Weight	5 ounces
Color	Black

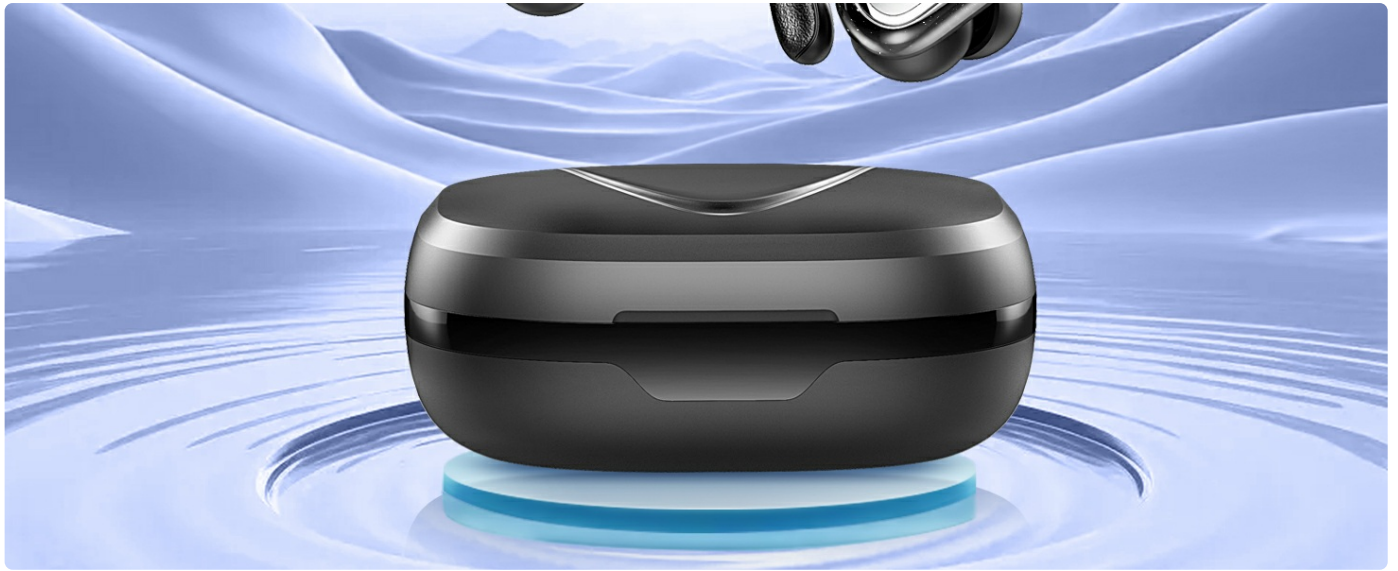 


Image: An exploded view of an earbud showing its internal components, including the 14.2mm driver, emphasizing immersive sound and deep bass.

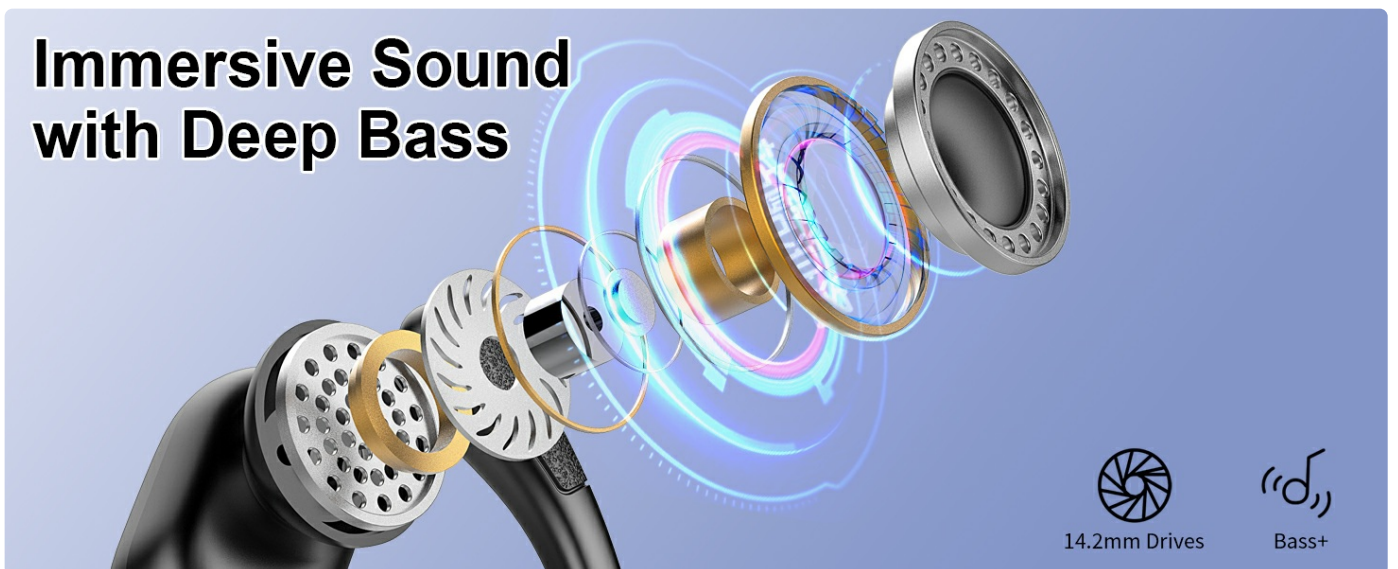 


Image: An earbud with an overlay showing the ENC technology, indicating its ability to eliminate nearly 75% of noise for immersive music and clearer calls.



Image: The earbuds and charging case alongside icons representing various compatible devices such as watches, computers, phones, and laptops, highlighting wide compatibility.

WARRANTY AND SUPPORT

Rulefiss products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Rulefiss website.

Customer Service: For any questions or issues, please contact our customer support team. Details can be found in the included user manual or on the Rulefiss brand store page on Amazon.

Online Resources: Visit the [Rulefiss Store on Amazon](#) for product updates, FAQs, and additional support.

© 2025 Rulefiss. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09GK2WZMT>

More documents and user manuals: <https://manuals.plus/>