

[Manuals.plus](#) /

> [AGARO](#) /

> AGARO 3-in-1 Rechargeable Multi Trimmer for Women - Instruction Manual

AGARO 33622

AGARO 3-in-1 Rechargeable Multi Trimmer for Women

Model: 33622

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your AGARO 3-in-1 Rechargeable Multi Trimmer. Designed for versatile hair removal, this device offers precision and comfort for various body parts including face, legs, eyebrows, underarms, and bikini area. Please read this manual thoroughly before first use and keep it for future reference.

WHAT'S IN THE BOX

Your AGARO 3-in-1 Multi Trimmer package includes the following components:

- Main Trimmer Unit
- Shaver Head (Rotating)
- Trimmer Head with Comb (for bikini area)
- Eyebrow Head with Comb
- Pouch
- Type-C Charging Cable
- Cleaning Brush



Image: All components included in the AGARO 3-in-1 Multi Trimmer package.

PRODUCT FEATURES

- **3-in-1 Versatility:** Includes Shaver Head, Trimmer Head, and Eyebrow Head for comprehensive hair removal.
- **Rechargeable:** Provides up to 90 minutes of cordless use after a 2-hour charge.
- **IPX4 Water Resistant:** Designed for easy cleaning and safe use in damp conditions.
- **Precision Trimming:**
 - Bikini Head: Shaves up to 0.3 mm without comb, up to 0.5 mm with comb.
 - Eyebrow Trimmer: Trims 0.2 mm without comb, 2 mm or 4 mm with comb.
 - Rotating Shaver Head: Achieves a cutting length of 0.1 mm.
- **Painless Hair Removal:** Gentle on sensitive skin, minimizing cuts and irritation.
- **Portable Design:** Compact and travel-friendly for grooming at home or on the go.

AGARO

Rechargeable
Multi-Trimmer
for Women

6 Zones.
1 Smooth
Solution.



Eyebrow
Head



Trimmer
Head



Shaver
Head

Image: The AGARO Multi Trimmer is suitable for hair removal across six body zones.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Charge the Device:** Before first use, fully charge the trimmer. Connect the Type-C charging cable to the trimmer's charging port and plug the other end into a suitable USB power source. The charging indicator light will illuminate. A full charge takes approximately 2 hours and provides up to 90 minutes of cordless use.
3. **Attach Desired Head:** Select the appropriate head (Shaver, Trimmer, or Eyebrow) for your grooming needs. Align the head with the main unit and gently twist or push until it clicks securely into place.

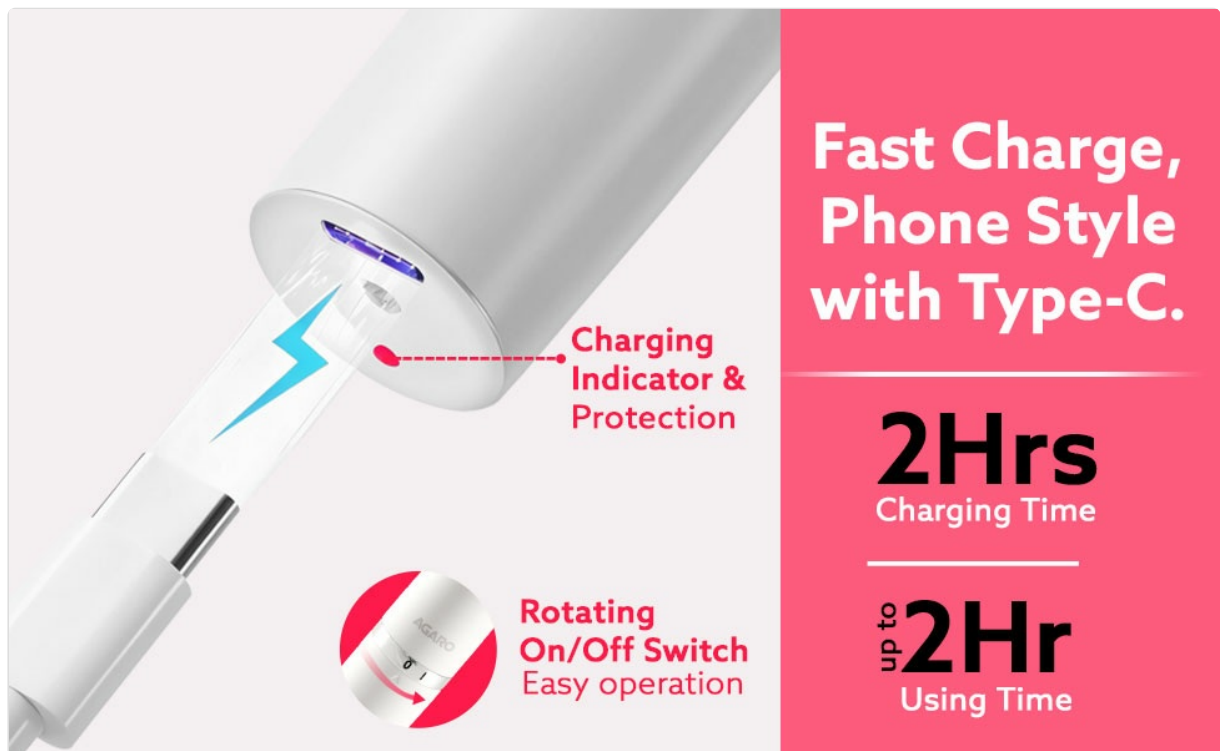


Image: The trimmer charging via its Type-C port, with the charging indicator visible.

OPERATING INSTRUCTIONS

Ensure your skin is clean and dry before use for optimal results.

General Operation:

- To turn ON, rotate the switch on the main unit.
- To turn OFF, rotate the switch back to the OFF position.

Using the Shaver Head (for Face and Body):

Attach the rotating shaver head. Gently press the shaver head against your skin and move it in small, circular motions or against the direction of hair growth. This head is ideal for facial hair and other delicate areas, providing a close shave of 0.1 mm.



Image: The 3D rotating shaver head in action for facial hair removal.

Using the Trimmer Head (for Bikini Area, Underarms, Legs):

Attach the trimmer head. For a closer trim, use without the comb (0.3 mm). For a slightly longer trim, attach the comb (0.5 mm). Glide the trimmer against the direction of hair growth. This head is effective for larger areas and sensitive zones like the bikini line and underarms.



**Six Zones.
One Smooth
Solution.**

Cutting Length
Without Comb: **0.3mm**
With Comb: **0.5 mm**

Eyebrows **Arms** **Bikini Line**

Face **Underarms** **Legs**

Image: Demonstrating the effectiveness of the trimmer head on underarm hair.

Using the Eyebrow Head:

Attach the eyebrow head. For precise shaping, use without the comb (0.2 mm). For uniform length, attach the 2 mm or 4 mm comb. Gently guide the trimmer along your eyebrow line to remove stray hairs or shape as desired.

No Pain, just Smooth Gain



Image: Using the eyebrow trimmer head for precise eyebrow shaping.

MAINTENANCE

Regular cleaning ensures optimal performance and hygiene.

1. **Turn Off:** Always ensure the trimmer is turned off before cleaning.
2. **Remove Head:** Detach the trimming head from the main unit.
3. **Clean Blades:** Use the provided cleaning brush to remove any trapped hairs from the blades and inside the head.
4. **Rinse (if applicable):** Since the device is IPX4 water resistant, you can rinse the detachable heads under running water. Do NOT submerge the main unit.
5. **Dry:** Allow all parts to air dry completely before reattaching or storing.
6. **Store:** Store the trimmer and its accessories in the provided pouch in a dry place.

Your browser does not support the video tag.

Video: A demonstration of cleaning the trimmer heads after use.

TROUBLESHOOTING

If you encounter any issues with your AGARO Multi Trimmer, please refer to the following common solutions:

- **Trimmer not turning on:** Ensure the device is fully charged. Check the charging cable and adapter for damage.
- **Reduced performance:** Clean the trimming head thoroughly to remove any accumulated hair. Ensure the head is securely attached.
- **Irritation during use:** Ensure your skin is clean and dry. Use the appropriate head and comb for the area. Move the trimmer gently and avoid excessive pressure.
- **Charging issues:** Verify the Type-C cable is correctly inserted into both the trimmer and the power source.

For further assistance, please contact customer support.

SPECIFICATIONS

| Feature | Detail |
|-------------------------|---|
| Model Number | 33622 |
| Power Source | Rechargeable (Internal Battery) |
| Charging Time | 2 Hours |
| Runtime | Up to 90 minutes (cordless) |
| Water Resistance | IPX4 (Water Resistant) |
| Blade Material | Stainless Steel |
| Item Weight | 93 Grams |
| Item Dimensions (LxWxH) | 16.5 x 2.5 x 2.5 Centimeters |
| Included Components | Main unit, shaver head, trimmer head with comb, eyebrow head with comb, pouch, Type-C cable |
| Target Audience | Women |

WARRANTY AND SUPPORT

Your AGARO 3-in-1 Rechargeable Multi Trimmer comes with a **1 Year Warranty**. For warranty claims, product support, or any inquiries, please contact AGARO customer service. Keep your purchase receipt as proof of purchase.

Importer Contact Information: Universal Corporation Ltd, 4/1, Middleton St, Kankaria Estates, Park Street area, Kolkata, West Bengal 700071. Phone: 9821486487

SAFETY INFORMATION

WARNING: Keep out of reach of children.

- Do not use the device if it is damaged.
- Do not attempt to repair the device yourself. Contact authorized service personnel.
- Do not submerge the main unit in water. Only detachable heads are rinseable.
- Avoid using on irritated or broken skin.

