

[Manuals.plus](#) /

› [Teabloom](#) /

› Teabloom One-Touch Tea Maker (27 Oz / 800 ML) Instruction Manual

Teabloom One-Touch Tea Maker

Teabloom One-Touch Tea Maker

MODEL: ONE-TOUCH TEA MAKER (27 Oz / 800 ML)

Introduction

The Teabloom One-Touch Tea Maker is a versatile 2-in-1 appliance designed for both heating water and steeping loose leaf tea. Constructed from durable borosilicate glass and featuring a stainless steel filter lid, this tea maker provides a convenient and efficient way to prepare your favorite teas. Its design allows for optimal flavor extraction and easy cleaning.



Image: Teabloom One-Touch Tea Maker in use, steeping a blooming tea flower.

Key Features

- **Two-in-One Design:** Functions as both a stovetop kettle and a tea steeper, allowing you to heat water and steep tea in a single vessel.
- **Optimal Tea Flavor:** The high water-to-tea surface ratio promotes full expansion of tea leaves, enhancing flavor extraction.

- **Premium Borosilicate Glass:** Made from hygienic, non-porous borosilicate glass, ensuring no transfer of off-flavors, odors, or toxins to your tea. It is designed to withstand boiling temperatures without cracking.
- **Stainless Steel Filter Lid:** Features a built-in strainer lid for simplified brewing and easy cleaning. A silicone ring secures the lid during pouring.
- **Versatile Heating:** Safe for use on gas stovetops, electric stovetops, and in microwaves.
- **Lead-Free and Plastic-Free:** Constructed with materials free from lead and plastics for a healthier brewing experience.



WHY TEA CONNOISSEURS LOVE THIS TEA MAKER



**LEAD
FREE**



[View Test Report](#)

STAINLESS STEEL FILTER LID

The built-in strainer lid design simplifies brewing and cleaning. The silicone ring helps keep the lid secure while pouring.

PREMIUM QUALITY GLASS

Made of hygienic, non-porous borosilicate glass. You'll never worry about off-flavors, odors or toxins. It is the healthier choice for brewing tea and ensuring your tea tastes as pure as possible.

DEVELOPS FULL TEA FLAVOR

The high water to tea surface ratio allows tea leaves to fully expand and release optimal flavor.

TWO-IN-ONE HEAT & STEEP DESIGN

For use as a stovetop kettle and tea steeper – heat water then steep tea all with one vessel.



Image: Visual representation of the tea maker's key features and safety certifications.

Setup

Before first use, wash all components of the Teabloom One-Touch Tea Maker with warm, soapy water. Rinse thoroughly and dry. Ensure the stainless steel filter lid is properly assembled with its silicone ring before use.



Image: Teabloom One-Touch Tea Maker with the lid removed, showing the separate components.

Operating Instructions

The Teabloom One-Touch Tea Maker offers two primary methods for tea preparation:

Method 1: Tea Preparation Guide (Using Pre-heated Water)

1. **Add Tea:** Place the desired amount of loose leaf tea into the pot. Approximately 1-2 teaspoons of loose leaf tea per 8-ounce cup of water is recommended.
2. **Add Water:** Fill with hot water, leaving a minimum of 2.5 cm (1 inch) of space at the top.
3. **Wait:** Allow the tea to steep to your liking.

4. **Enjoy:** Stir in sweetener if desired. Serve and enjoy.

Method 2: Using as a Kettle & Tea Steeper (Stovetop Heating)

1. **Add Water:** Remove the lid and add water to the pot.
2. **Heat:** Place the pot on a gas or electric stovetop (or in the microwave) and heat the water until it reaches the desired temperature or boils.
3. **Add Tea:** Remove from the stovetop. Add loose leaf tea and replace the lid. Steep to your liking.
4. **Enjoy:** Stir in sweetener if desired. Serve and enjoy.



TEA PREPARATION GUIDE

One of the best ways to steep loose leaf tea

The high water to tea surface ratio allows tea leaves to fully expand and release optimal flavor.



1

TEA

Place desired amount of loose leaf tea into the pot (add approx. 1-2 tsp of loose leaf tea per 8-oz cup of water).



2

ADD WATER

Fill with hot water. Leave a minimum of 2.5 cm/1 in of space at the top.



3

WAIT

Allow the tea to steep to your liking.



4

ENJOY

Stir in sweetener if desired. Serve and enjoy.

HOW TO USE AS A KETTLE & TEA STEEPER



1

ADD WATER

Remove lid and add water.



2

HEAT

Heat water on a gas/electric stovetop (or in the microwave).



3

TEA

Remove from the stovetop, Add tea and replace the lid. Steep to your liking.



4

ENJOY

Stir in sweetener if desired. Serve and enjoy.

Image: Step-by-step guide for preparing tea using the Teabloom One-Touch Tea Maker.

Maintenance & Cleaning

The Teabloom One-Touch Tea Maker is designed for easy cleaning.

- **Dishwasher Safe:** The entire tea maker, including the glass pot and stainless steel lid, is dishwasher safe.
- **Hand Washing:** For best results and to prolong the life of the silicone ring, hand washing with warm, soapy water is recommended.
- **Drying:** Ensure all components are thoroughly dry before reassembling and storing.

Specifications

Feature	Detail
Brand	Teabloom
Model Name	One-Touch Tea Maker
Capacity	27 OZ / 800 ML / 2-3 CUPS
Material	Heatproof Borosilicate Glass, 304 Stainless Steel
Color	Clear
Product Dimensions	4.5"D x 4.5"W x 5.5"H
Item Weight	1.04 Pounds
Dishwasher Safe	Yes
Stovetop Safe	Yes (Gas & Electric)
Microwave Safe	Yes
UPC	810019871245



Image: Detailed dimensions of the Teabloom One-Touch Tea Maker.

Warranty & Support

Teabloom stands behind its products with a full one-year warranty. For any questions, concerns, or support needs, please refer to the contact information provided with your purchase or visit the official Teabloom website.



Image: Certifications for Lead-Free and Plastic-Free materials.

For more information on product safety and testing, please visit: <https://bit.ly/4frfcw>

For information on lead-free testing, please visit: <https://bit.ly/3SA8U8H>

© 2026 Teabloom. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09GKSH3B2>

More documents and user manuals: <https://manuals.plus/>