

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Vogel's](#) /

> [Vogel's TVM 3405 Fixed TV Wall Bracket User Manual](#)

Vogel's TVM 3405

Vogel's TVM 3405 Fixed TV Wall Bracket User Manual

Model: TVM 3405

INTRODUCTION

This manual provides detailed instructions for the safe and correct installation and use of your Vogel's TVM 3405 Fixed TV Wall Bracket. This bracket is designed for televisions ranging from 32 to 77 inches and supports a maximum weight of 110 lbs (50 kg). Please read all instructions carefully before beginning installation.

SAFETY INFORMATION

- Ensure the wall structure can support the combined weight of the mount and your television.
- Always use the provided fasteners and follow the drilling instructions for your specific wall type.
- Do not exceed the maximum weight capacity of 110 lbs (50 kg).
- Installation requires two people for safety.
- Keep children and pets away from the work area during installation.
- If unsure about any part of the installation, consult a qualified professional.

WHAT'S IN THE BOX

The Vogel's TVM 3405 package includes all necessary components for installation:

- Wall mount unit
- TV interface strips (2)
- Wall mount cover
- Protective TV patches
- Quick start guide and drilling template
- Safety instructions
- TV fasteners kit (various screws and washers)

- Wall fasteners kit (screws, plugs, spirit level)



Image: All components included in the Vogel's TVM 3405 Fixed TV Wall Mount package.

TOOLS REQUIRED

For a successful installation, you will need the following tools (not included):

- Crosshead screwdriver
- Drilling machine
- 8mm or 5/16" concrete/brick drill bit
- 4mm or 5/32" wood drill bit
- Socket wrench no. 10
- Pencil

SETUP AND INSTALLATION

Step 1: Attach the Interface Strips to the TV

1. Carefully place your TV face down on a soft, clean surface to prevent scratches.
2. Identify the VESA mounting holes on the back of your TV.
3. Fix the protective TV patches over the mounting holes to prevent damage.
4. Align the two interface strips with the VESA holes on the back of your TV.
5. Secure the strips using the appropriate screws and washers from the TV fasteners kit. Ensure they are tightened securely but do not overtighten.

Video: Installation process for Vogel's COMFORT Flat Series TV wall mount, showing how to attach the interface strips to the TV.

This video demonstrates the initial steps of attaching the interface strips to the back of your television.

Step 2: Attach the Wall Mount to the Wall

1. Determine the desired height and position for your TV on the wall.
2. Use the provided drilling template and the DrillRight AR App (available on Android and iOS) to accurately mark the first drill hole.



vogel's®

DrillRight™ App

Take the stress out of mounting your TV at exactly the right spot

The DrillRight AR App calculates the position of the first drill hole with the included poster and the camera of your phone/tablet. You can simply mark the drill hole on your wall. The app also contains clear instruction videos.

GET IT ON
Google Play

Download on the
App Store

Image: The DrillRight AR App assists in precisely marking the first drill hole for your TV mount.

Video: Demonstration of the DrillRight app for easy and accurate marking of drill holes for TV wall mount installation.

This video illustrates how to use the DrillRight app to simplify the drilling process.

3. Drill the required holes (typically three) using the appropriate drill bit for your wall type (concrete/brick or wood).
4. Insert the wall plugs (H) into the drilled holes.
5. Position the wall mount unit over the holes. Use the integrated spirit level to ensure the mount is perfectly horizontal.
6. Secure the wall mount to the wall using the provided screws (H) and washers (J) from the wall fasteners kit. Tighten firmly.
7. Place the cover over the wall mount unit.

Step 3: Attach the TV to the Wall Mount

1. With assistance, carefully lift the TV and align the interface strips on the TV with the wall mount.
2. Gently lower the TV onto the wall mount until it clicks into place, indicating it is securely locked by the ClickLoc™ system.

Video: Product overview of Vogel's COMFORT fixed wall mounts, demonstrating the ClickLoc™ system for secure TV attachment.

This video highlights the secure ClickLoc™ system and the slim profile of the mounted TV.

OPERATING YOUR TV WALL MOUNT

Securing and Releasing the TV (ClickLoc™ System)

The Vogel's TVM 3405 features the ClickLoc™ security system, ensuring your TV is safely mounted. Once the TV is placed on the wall mount, it automatically locks into position. To release the TV, gently pull the release cords located at the bottom of the interface strips. This allows you to tilt the TV forward for cable access or to remove it from the mount.

Easy Cable Access

For convenient access to cables and USB ports behind your TV, the mount offers a special maintenance position. Simply tilt the TV forward by pulling the release cords. This creates space to manage your connections without fully removing the TV from the wall.

Enjoy your TV with peace of mind

Lock your TV with a single click through ClickLoc

Like a painting

Just 2.2 cm from the wall



Special maintenance position

To easily access your cables



Image: The TV mount allows for a tilted position to easily access cables and ports.

MAINTENANCE

- **Cleaning:** Wipe the mount with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- **Periodic Checks:** Regularly check all screws and connections to ensure they remain tight and secure. Do not overtighten.
- **Damage:** If any part of the mount appears damaged or worn, do not use it. Contact Vogel's customer support for assistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
TV not level after installation.	Wall mount not perfectly horizontal.	Slightly loosen the wall mount screws, adjust the mount using the spirit level, and retighten.

Problem	Possible Cause	Solution
Difficulty attaching TV to the wall mount.	Interface strips not correctly aligned with the wall mount.	Ensure the TV is lifted high enough and the strips are directly above the wall mount's hooks before lowering.
TV feels unstable on the mount.	Screws not tightened sufficiently or incorrect fasteners used.	Verify all screws are securely tightened. Confirm correct fasteners were used for your wall type. If issues persist, contact support.

SPECIFICATIONS

- **Model:** TVM 3405
- **Compatible TV Sizes:** 32 - 77 inches
- **Maximum Weight Capacity:** 110 lbs (50 kg)
- **VESA Compatibility:** Up to 400x400 mm
- **Distance to Wall:** 0.87 inches (2.2 cm)
- **Movement Type:** Fixed
- **Material:** Alloy Steel
- **Color:** Black
- **Product Dimensions:** 23.11 x 3.74 x 2.17 inches
- **Item Weight:** 0.4 ounces *(Note: This weight is for the item as packaged, not the full mount assembly.)*



Image: Detailed dimensions of the TVM 3405 wall mount for reference.

WARRANTY AND SUPPORT

For warranty information, technical support, or to access the full online manual, please visit the official Vogel's website or contact their customer service. You can also find additional resources and FAQs on the [Official Vogel's Brand Store](#).