

[Manuals.plus](#) /

> [PHILIPS](#) /

> Philips X5206 Bluetooth Party Speaker Instruction Manual

## PHILIPS X5206

# Philips X5206 Bluetooth Party Speaker Instruction Manual

Model: X5206

## INTRODUCTION

This instruction manual provides comprehensive guidance for the safe and efficient use of your Philips X5206 Bluetooth Party Speaker. Please read this manual thoroughly before operating the device and retain it for future reference. The Philips X5206 is a portable party speaker designed to deliver powerful sound with an integrated light show and karaoke functions. It features Bluetooth connectivity, multiple input options, and a trolley design for easy transport.

## PACKAGE CONTENTS

Ensure all items are present in the packaging:

- Philips X5206 Bluetooth Party Speaker
- AC Power Cord
- Quick Start Guide
- Safety and Warranty Sheet
- Warranty Certificate





*Image: The Philips X5206 Bluetooth Party Speaker, showing its front grille with two illuminated woofers and a retractable handle.*

## SETUP

### 1. Initial Charging

Before first use, fully charge the speaker. Connect the supplied AC power cord to the speaker's power input and then to a wall outlet. The charging indicator will show the charging status. A full charge takes approximately 3 hours and provides up to 14 hours of playtime.

# Party All Day

A 3 hour single charge can keep the party going on all day.



 Battery capacity  
4400 mAh

 Charging time  
3 hrs

**14H**

*Image: An illustration of the Philips X5206 speaker with icons indicating a 4400 mAh battery capacity, 3 hours charging time, and 14 hours of playtime.*

## 2. Positioning the Speaker

Place the speaker on a stable, flat surface. For optimal sound dispersion, ensure there are no obstructions in front of the speaker. The trolley design with wheels and a built-in handle allows for easy relocation.

# Portable & Easy Carrying

Take the beats anywhere.



*Image: A person walking outdoors, easily transporting the Philips X5206 speaker using its retractable handle and wheels.*

## OPERATING INSTRUCTIONS

### 1. Power On/Off

- To power on, press and hold the **Power** button until the indicator lights illuminate.
- To power off, press and hold the **Power** button again until the lights turn off.

## 2. Bluetooth Connection

The speaker supports Bluetooth 5.0 for wireless audio streaming up to 10 meters.

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing Bluetooth LED).
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "Philips X5206" from the list to pair.
4. Once connected, the Bluetooth LED will glow solid.

## 3. Wired Connections

The X5206 offers various wired input options:

- **Mic In:** Connect a microphone for karaoke or announcements.
- **Guitar In:** Connect a guitar for live music.
- **USB:** Insert a USB drive for audio playback.
- **Audio-in (AUX):** Connect external audio devices using a 3.5mm audio cable.
- **Line-out:** Connect the speaker to another speaker or amplifier.

# Wired or Wireless Connection

Multi-uses in one machine, includes Bluetooth, Mic in, Guitar in, USB, Lines in & out.



Image: A close-up of the Philips X5206 control panel, highlighting the microphone, guitar, USB, and line-in/out ports for both wired and wireless (Bluetooth 5.0) connections.

## 4. Sound and Karaoke Features

Adjust audio settings and utilize karaoke functions:

- **Volume Control:** Use the main rotary knob to adjust overall volume.
- **Bass & Treble:** Dedicated rotary controls allow fine-tuning of bass and treble levels.

- **Microphone Volume:** Adjust the microphone input level separately.
- **Echo:** Apply an echo effect to the microphone input.
- **Vocal Fader:** Reduces the vocal track of music playing through the microphone input.
- **Voice Changer:** Modifies the pitch of the microphone input for various vocal effects.

# Treble & Bass Control for Your Voice

Karaoke feature for microphone input, echo, vocal fader, voice changer, microphone volume control.

8"

Woofer 8" x 2

2.5"

Tweeter 2.5" x 2

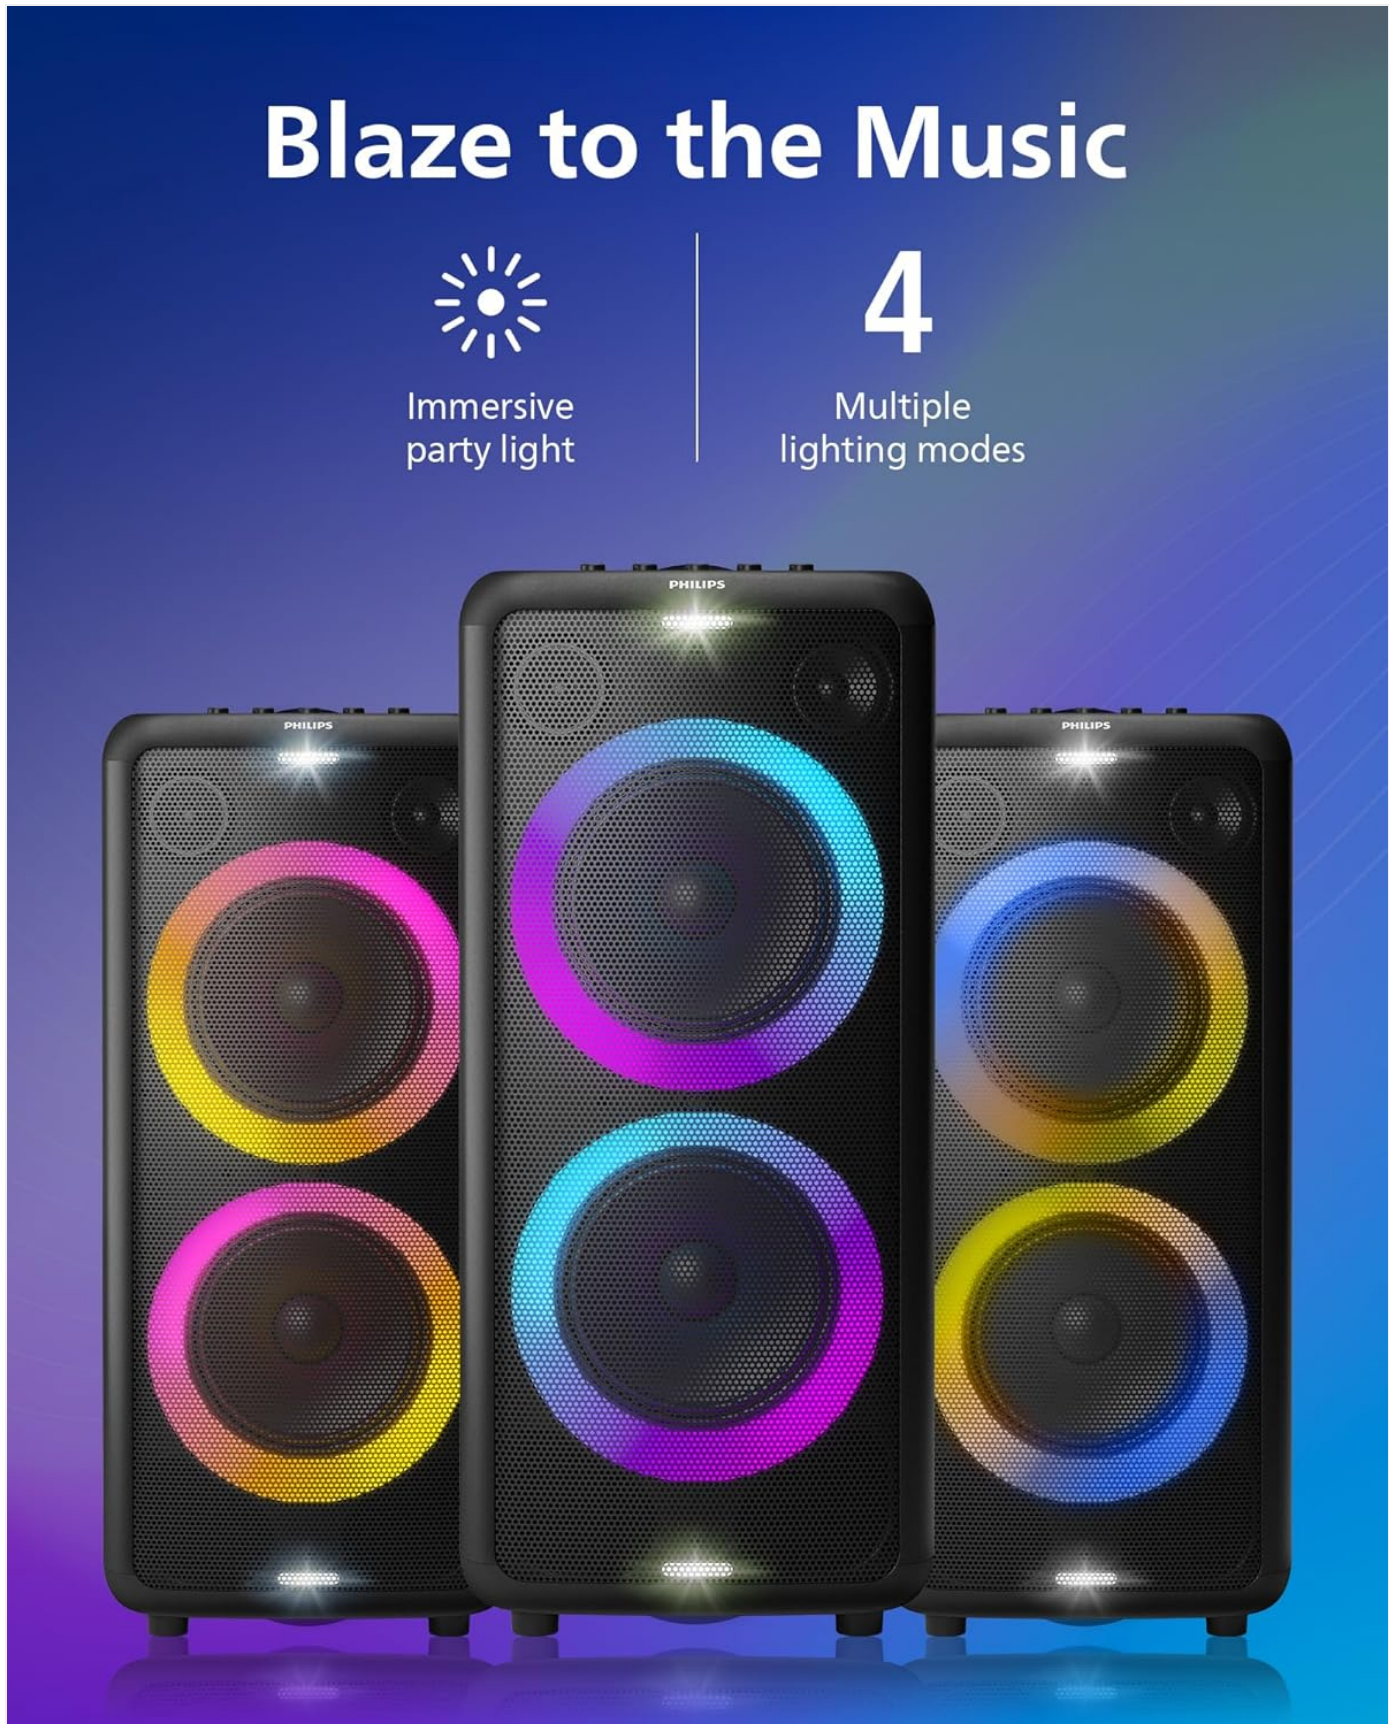


*Image: An internal view diagram of the Philips X5206 speaker, illustrating its two 8-inch woofers and two 2.5-inch tweeters, emphasizing treble and bass control for voice.*

## 5. Light Show

The speaker features an integrated light show with multiple modes:

- Press the **Light** button to cycle through 4 LED lighting modes.
- The lights pulsate to the rhythm of the music.



*Image: Three Philips X5206 speakers showcasing various colorful light patterns on their woofers, illustrating the multiple lighting modes available.*

## MAINTENANCE

### 1. Cleaning

Wipe the speaker's exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents. Ensure no liquids enter the speaker openings.

### 2. Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- If storing the speaker for an extended period, charge it to approximately 50% every few months.
- Avoid exposing the speaker to extreme temperatures.

### 3. Storage

Store the speaker in a cool, dry place away from direct sunlight and moisture when not in use.

## TROUBLESHOOTING

Refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
No power	Battery depleted; Power cord not connected.	Charge the speaker; Ensure AC power cord is securely connected.
No sound	Volume too low; Incorrect input selected; Device not connected.	Increase volume; Select correct input source; Reconnect Bluetooth or wired device.
Bluetooth pairing issues	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in pairing mode; Move device closer (within 10m); Turn off other Bluetooth devices.
Wired input (AUX/Mic/Guitar) not working	Cable not fully inserted; Incorrect input selected; Faulty cable.	Ensure cables are fully inserted; Select correct input; Try a different cable.
Lights not working or incorrect pattern	Light mode not selected; Software glitch.	Press the Light button to cycle modes; Power cycle the speaker.

## SPECIFICATIONS

Feature	Detail
Model Number	X5206
Speaker Type	Party Speaker
Audio Output Mode	Stereo (2.0 channels)
Speaker Configuration	Two 8-inch Woofers, Two 3-inch Tweeters
Maximum Output Power	160 Watts
Connectivity Technology	Bluetooth 5.0, USB, Audio-in (AUX), Mic-in, Guitar-in, Line-out
Bluetooth Range	Up to 10 meters (33 feet)

<b>Feature</b>	<b>Detail</b>
<b>Power Source</b>	Battery Powered (Rechargeable) / AC Power
<b>Battery Capacity</b>	4400 mAh
<b>Charging Time</b>	Approximately 3 hours
<b>Playtime</b>	Up to 14 hours (on a single charge)
<b>Special Features</b>	Mic and guitar inputs, Speaker light and strobe, Special karaoke functions (Echo, Vocal Fader, Voice Changer), Trolley design with wheels and built-in handle, Bass & Treble controls.
<b>Product Dimensions (D x W x H)</b>	12.7" x 12.2" x 27.6" (32.3 cm x 31 cm x 70.1 cm)
<b>Item Weight</b>	28.11 Pounds (12.75 kg)
<b>Water Resistance Level</b>	Not Water Resistant

# Quality about the Details



Product dimension  
12.2 x 27.6 x 12.7 inch



Pull rod design



Built-in handle



Swivel wheels

*Image: The rear view of the Philips X5206 speaker, detailing its product dimensions, pull rod design, built-in handle, and swivel wheels for portability.*

## WARRANTY AND SUPPORT

### Warranty Information

Your Philips X5206 Bluetooth Party Speaker comes with a **Limited Warranty**. Please refer to the included "Safety and

Warranty Sheet" and "Warranty Certificate" for detailed terms and conditions, including coverage period and claim procedures.

## Customer Support

For technical assistance, product inquiries, or warranty claims, please contact Philips customer support. Contact information can typically be found on the Philips official website or in the documentation provided with your product.

