

[Manuals.plus](#) /

› [OSMON](#) /

› OSMON 3.2 Litre Digital Air Fryer User Manual

OSMON OS-AF-32

OSMON 3.2 Litre Digital Air Fryer User Manual

Model: OS-AF-32

PRODUCT OVERVIEW

The OSMON 3.2 Litre Digital Air Fryer (Model OS-AF-32) is designed to provide a healthier alternative to traditional frying methods by utilizing rapid hot air circulation. This versatile appliance allows you to grill, bake, roast, and fry your favorite foods with significantly less oil.



Image: Front view of the OSMON 3.2 Litre Digital Air Fryer, showcasing its sleek black and stainless steel design with a digital control panel.

Key Features:

- **4-in-1 Functions:** Grill, Bake, Roast, and Fry.
- **Rapid Hot Air Technology:** Ensures crispy and evenly cooked food with minimal oil.
- **3.2 Litre Capacity:** Spacious basket suitable for family-sized portions.
- **Adjustable Temperature Control:** Ranges from 175°F to 400°F (approx. 80°C to 200°C) with a 30-minute timer.
- **Intuitive Digital Display:** Provides precise time and temperature control.
- **Safety Features:** Includes overheating protection and automatic shut-off.
- **Design:** Sleek black and stainless steel exterior with a compact footprint.

SAFETY INSTRUCTIONS

Before using the appliance, please read all instructions carefully to ensure safe operation and prevent damage.

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances, to allow for proper air

circulation.

- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Keep children and pets away from the appliance during operation.
- Do not block the air inlet or outlet vents during operation.
- Unplug the air fryer from the outlet when not in use and before cleaning.
- Allow the appliance to cool down completely before handling or cleaning.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- The basket and inner pot will be hot during and immediately after use. Use oven mitts or the cool-touch handle when handling.
- Do not overfill the basket.
- This appliance is for household use only.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the air fryer and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Cleaning:** Before first use, clean the removable basket and inner pot with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a flat, stable, heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides, and above the appliance, for proper ventilation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 400°F (200°C) to eliminate any manufacturing odors. A slight odor or smoke may be present during this initial run; this is normal and will dissipate.

3D RAPID HEAT CIRCULATION

Reduces the use of oil while resulting in

Healthier food | **Lesser**-oil | **Crispier** food



Image: Diagram illustrating the 3D rapid heat circulation technology within the air fryer, showing how hot air moves to cook food evenly.

OPERATING INSTRUCTIONS

 
Digital Control Panel:

DIGITAL & TOUCH PANEL

Transform Your Kitchen with
Our State-of-the-Art Digital Air Fryer



ADJUSTABLE BUTTON

for temperature and timer

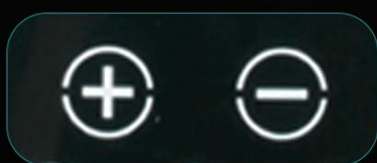

SWITCH BETWEEN

  temperature or timer control

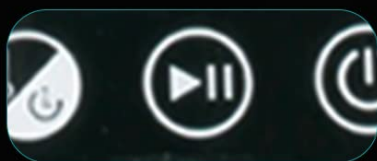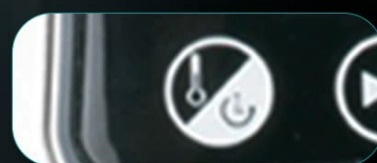

PAUSE/RESUME

button



ON/OFF

power button



Image: Close-up of the air fryer's digital control panel, highlighting the adjustable temperature/timer buttons, mode switch, pause/resume, and power button.

- **Power Button ():** Press to turn the appliance on or off.
- **Adjustable Buttons (+ / -):** Use to increase or decrease temperature and time settings.
- **Mode Switch Button ():** Toggles between temperature and timer control.
- **Pause/Resume Button ():** Pauses the cooking cycle; press again to resume.

Cooking Process:

1. Prepare your ingredients.
2. Pull out the basket from the air fryer.
3. Place the ingredients into the basket. Do not exceed the MAX fill line.
4. Slide the basket back into the air fryer.
5. Press the Power button to turn on the appliance.
6. Use the Mode Switch button to select either temperature or time adjustment.
7. Use the + and - buttons to set the desired temperature (175°F - 400°F) and cooking time (up to 30 minutes).

8. The air fryer will automatically start the cooking process after a few seconds.
9. Some recipes may require shaking the ingredients halfway through the cooking time. To do this, pull out the basket, shake gently, and then slide it back in. The air fryer will automatically resume cooking.
10. When the cooking time is complete, the air fryer will beep and automatically shut off.
11. Carefully pull out the basket and transfer the cooked food to a plate. Use tongs for smaller items.
12. Unplug the appliance after use.

OSMON

OS AF32

SIMPLIFY YOUR COOKING WITH OUR
4-IN-1 AIR FRYER

FRY

GRILL

ROAST

BAKE

A black and silver OSMON 4-in-1 Air Fryer is centered in the image. It has a digital display and several control buttons on the front panel. The background is dark with a subtle pattern of dots.

Image: Visual representation of the air fryer's versatility, showing examples of fried foods, grilled sandwiches, roasted chicken, and baked goods.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
2. **Basket and Inner Pot:** The removable basket and inner pot are non-stick coated. Clean them with warm water, a mild dish soap, and a non-abrasive sponge. For stubborn residue, soak them in warm soapy water for about 10-15 minutes before cleaning. Do not use metal utensils or abrasive cleaning materials as they can damage the non-stick coating. **Note:** The

basket and inner pot are not dishwasher safe.

- 3. **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Never immerse the main unit in water or any other liquid.
- 4. **Heating Element:** If necessary, gently clean the heating element with a cleaning brush to remove any food residue.
- 5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.



Image: Comparison showing the OSMON air fryer’s basket capacity versus a traditional deep fryer, emphasizing 95% less oil usage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet not working; main unit not properly assembled.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Ensure the basket is fully inserted into the main unit.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Basket is overfilled; temperature or time settings are incorrect; food not shaken.	Do not overfill the basket. Adjust temperature and time as per recipe. Shake or flip ingredients halfway through cooking.
White smoke coming from the appliance.	Greasy residue from previous use; cooking fatty foods; basket not cleaned properly.	Clean the basket and inner pot thoroughly after each use. For fatty foods, drain excess oil from the basket during cooking.
Appliance smells during first use.	New appliance odor.	This is normal. Run the air fryer empty for 10-15 minutes at 400°F (200°C) before first use. Ensure good ventilation.

SPECIFICATIONS

Feature	Detail
Model Number	OS-AF-32
Capacity	3.2 Litres
Power Output	1300 Watts
Voltage	220 Volts (AC)
Temperature Range	175°F - 400°F (approx. 80°C - 200°C)
Timer	Up to 30 minutes
Control Method	Touch Digital Display
Dimensions (D x W x H)	32D x 32W x 36H Centimeters
Item Weight	6 Kilograms
Inner Material	Stainless Steel with Nonstick Coating
Included Components	Air Fryer with Removable Basket
Country of Origin	China



BODY SIZE	32.2 X 32.2 X 36 CENTIMETRES
PAN CAPACITY	3.2L BIGGER SIZE THAN OTHERS
MATERIAL QUALITY	SUPERIOR PLASTIC AND METAL
NOISE LEVEL	WISPER QUIET TECHNOLOGY
PRICE	VALUE FOR MONEY

Image: Diagram detailing the physical dimensions and key specifications of the OSMON air fryer, including body size, pan capacity, and material quality.

WARRANTY AND SUPPORT

The OSMON 3.2 Litre Digital Air Fryer comes with a **1-year India Countrywide Warranty**.

For warranty support or any product-related questions, please contact:

- **Customer Support Request Form:** Visit www.americanmicronic.in for a response within 24 hours.
- **Phone Support:** Call 8882009988 (10 AM to 6 PM IST).
- **Manufacturer:** American Micronic Instruments, Inc., USA

Please retain your purchase receipt as proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question