

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VINABTY](#) /

› [VINABTY AH59-02147B Remote Control User Manual for Samsung Component Audio MM-G25 MM-G35](#)

VINABTY AH59-02147B

VINABTY AH59-02147B Remote Control User Manual

FOR SAMSUNG COMPONENT AUDIO MODELS MM-G25 & MM-G35

Brand: VINABTY

Introduction

This manual provides comprehensive instructions for the VINABTY AH59-02147B replacement remote control. This remote is designed to be fully compatible with Samsung Component Audio systems, specifically models MM-G25 and MM-G35. It operates using infrared (IR) technology and requires no programming for immediate use.



Image: Front view of the VINABTY AH59-02147B remote control, showing all buttons and their labels. The remote is black with various grey, blue, and red buttons.

Setup

The AH59-02147B remote control is designed for immediate use with compatible Samsung Component Audio systems without any complex setup or programming. Simply install the batteries, and the remote is ready to operate.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image: Back view of the VINABTY AH59-02147B remote control, highlighting the battery compartment cover. The cover is a rectangular panel that slides open.

No Programming Required

This remote is a direct replacement and does not require any programming or code setup. It will function immediately with your Samsung Component Audio MM-G25 or MM-G35 system once batteries are installed.

Operating Instructions

Point the remote control directly at your Samsung Component Audio system's IR receiver. Ensure there are no obstructions between the remote and the audio system.

- **POWER:** Press to turn the audio system on or off.
- **CD / TUNER / USB / AUX:** Select the desired audio input source.
- **TIMER / CLOCK / SLEEP:** Access timer, clock settings, or set the sleep function.
- **VOL +/-:** Adjust the master volume level.
- **MUTE:** Temporarily silence the audio output.
- **MIC VOL +/-:** Adjust the microphone volume (if applicable to your system).
- **ECHO:** Control the echo effect for microphone input (if applicable).
- **CD RIPPING:** Initiate CD ripping function (if supported by your system).
- **RDS DISPLAY / RDS PTY:** Control Radio Data System display and program type functions (for Tuner mode).

- **TUNING MODE:** Switch between manual and automatic tuning modes.
- **PROGRAM / SET:** Program radio stations or confirm settings.
- **PLAY/PAUSE (▶ / |), STOP (■), FAST FORWARD (▶ ▶), REWIND (◀ ◀), SKIP FORWARD (▶ ▶ |), SKIP BACKWARD (◀ ◀ |):** Control playback for CD/USB sources.
- **+10:** Jump forward by 10 tracks or units.
- **P.SOUND:** Access preset sound modes.
- **MP3-CD/CD TUNING:** Navigate specific functions for MP3 CDs or fine-tune radio.
- **EQ:** Adjust equalizer settings.
- **R.BASS:** Enhance bass levels.
- **REPEAT / REPEAT-A-B:** Control repeat playback modes.
- **TUNING (Up/Down Arrows):** Manually tune radio frequencies.
- **MENU Navigation (Directional Arrows & OK/Enter):** Navigate through system menus and confirm selections.

Maintenance

Proper care and maintenance will ensure the longevity and optimal performance of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage, which can damage the remote. Store in a cool, dry place away from direct sunlight.
- **Avoid Damage:** Do not drop the remote, expose it to extreme temperatures, or immerse it in water.

Troubleshooting

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:**
 - Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with fresh AAA batteries if necessary.
 - Ensure there is a clear line of sight between the remote's IR emitter and the audio system's IR receiver. Remove any obstructions.
 - Move closer to the audio system. The effective range for IR remotes is typically up to 20 feet (6 meters).
- **Buttons Not Working:**
 - Clean the remote's surface, especially around the buttons, to ensure no debris is interfering with button presses.
 - If only specific buttons are not working, it might indicate internal damage. Consider replacing the remote.
- **Interference:**
 - Bright light sources, especially fluorescent lights or direct sunlight, can sometimes interfere with IR signals. Try operating the remote in different lighting conditions.

Specifications

Model Number	AH59-02147B
Brand	VINABTY
Compatible Devices	Samsung Component Audio MM-G25, MM-G35
Connectivity Technology	Infrared (IR)
Battery Type	2 x AAA (not included)
Product Dimensions	7.5 x 2 x 0.7 inches (19.05 x 5.08 x 1.78 cm)
Item Weight	2.39 ounces (67.75 grams)
Special Feature	Ergonomic design

Warranty and Support

For any issues or questions regarding your VINABTY AH59-02147B remote control, please refer to the retailer or manufacturer's support channels. Keep your purchase receipt for warranty claims, if applicable.

This manual is for informational purposes only. Specifications are subject to change without notice.