

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Moulinex](#) /

> [Moulinex Powelix 4-Blade Foot for Opti Quick Chef Touch Infiny Blenders \(DD6, DD8, DD9 Series\) - Instruction Manual](#)

Moulinex DD6 series, DD8 series, DD9 series, HB series

Moulinex Powelix 4-Blade Foot Instruction Manual

For Opti Quick Chef, Touch, and Infiny Series Hand Blenders

1. INTRODUCTION

This document provides instructions for the Moulinex Powelix 4-Blade Foot, a genuine replacement part designed for specific Moulinex and Tefal hand blenders. This blade foot features a 4-blade Powelix design for efficient blending. Please read this manual carefully before installation and use to ensure proper function and safety.



Image 1: Moulinex Powelix 4-Blade Foot. This image shows the complete blade foot assembly, featuring a black plastic top connector, a stainless steel shaft, and a stainless steel blade guard with four blades visible underneath.

1.1. Compatible Models

This Powelix 4-Blade Foot is compatible with the following Moulinex and Tefal hand blender models. Always verify your appliance's identification plate for exact model numbers.

- **Moulinex Opti Quick Chef / Touch / Infiny Series:** DD64K8, DD6508, DD6528, DD6538, DD6558, DD655D, DD6568, DD6578, DD65A8, DD65CD, DD65H8, DD65J8, DD65L8, DD65S8, DD6A58, DD8338, DD873D, DD876D, DD877D, DD878D, DD9448, DD953D, DD95HD, DD95KD, DD95MD.
- **Tefal HB Series:** HB6435, HB6538, HB6558, HB6568, HB6588, HB6598, HB65L8, HB8331,

2. SAFETY INSTRUCTIONS

Before handling the blade foot, ensure the blender's motor unit is unplugged from the power outlet. The blades are sharp; handle with extreme care to prevent injury. Keep fingers, hair, clothing, and utensils away from the moving blades during operation. Do not immerse the motor unit in water or other liquids. This blade foot is designed for food preparation only.

3. SETUP AND INSTALLATION

1. **Unpack:** Carefully remove the new Powelix 4-Blade Foot from its packaging.
2. **Inspect:** Check the blade foot for any signs of damage. Do not use if damaged.
3. **Attach:** Align the top of the blade foot with the motor unit of your compatible Moulinex or Tefal hand blender. Push and twist gently until it clicks securely into place. Refer to your blender's main instruction manual for specific attachment details if needed.
4. **Verify:** Ensure the blade foot is firmly attached and does not wobble before plugging in the motor unit.

4. OPERATING INSTRUCTIONS

Once the Powelix 4-Blade Foot is securely attached to the motor unit, you can use your hand blender as described in its primary instruction manual. The 4-blade design is optimized for efficient blending of various ingredients. Always ensure the blade guard is fully submerged in the ingredients before starting the blender to prevent splashing.

5. CLEANING AND MAINTENANCE

Proper cleaning ensures hygiene and extends the life of your blade foot.

- **Disconnect:** Always unplug the motor unit from the power supply before cleaning.
- **Detach:** Carefully detach the blade foot from the motor unit.
- **Rinse:** Rinse the blade foot under running water immediately after use to prevent food from drying on the blades and guard.
- **Wash:** Wash the blade foot with warm, soapy water. Use a brush to clean around the blades carefully. The blade foot may also be dishwasher safe; consult your blender's main manual for confirmation.
- **Dry:** Thoroughly dry all parts before storing.
- **Storage:** Store the blade foot in a safe place, away from children, to prevent accidental injury from the sharp blades.

6. TROUBLESHOOTING

- **Blade Foot Does Not Attach Securely:** Ensure correct alignment with the motor unit. Check for any obstructions or damage to the connection points on both the blade foot and the motor unit.
- **Poor Blending Performance:** Ensure the blade foot is clean and free from dried food residue. Verify that the blades are not damaged or bent. If the issue persists, the motor unit may require servicing.

- **Unusual Noise During Operation:** Detach and reattach the blade foot to ensure it is properly secured. Inspect for any foreign objects caught in the blade guard.

If problems persist, refer to your blender's main instruction manual or contact Moulinex customer support.

7. SPECIFICATIONS

Brand	Moulinex
Part Type	Powelix 4-Blade Foot (Replacement Part)
Blade Configuration	4-Blade Powelix Technology
Compatibility	Moulinex Opti Quick Chef, Touch, Infiny series (DD6, DD8, DD9), Tefal HB series
ASIN	B09GM4RH64
Manufacturer	Moulinex
Date of Listing	May 27, 2022

8. WARRANTY AND SUPPORT

Information regarding the warranty for this specific spare part is not provided in the product details. For warranty inquiries or technical support, please refer to the original instruction manual of your Moulinex or Tefal hand blender or contact Moulinex customer service directly. You can often find contact information on the official Moulinex website: www.moulinex.com