

[Manuals.plus](#) /

› [SMAEL](#) /

› SMAEL 8007 Digital Sports Watch Instruction Manual

SMAEL 8007

SMAEL 8007 Digital Sports Watch Instruction Manual

Model: 8007

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your SMAEL 8007 Digital Sports Watch. Please read this manual carefully to ensure proper use and to maximize the lifespan of your watch. The SMAEL 8007 features a dual-display (analog and digital), multiple functions including alarm, stopwatch, date, week display, and LED backlight, all housed in a durable, water-resistant design.



Image: Front view of the SMAEL 8007 Digital Sports Watch, showcasing its dual analog and digital display with multiple indicators.

WATCH COMPONENTS AND BUTTONS

Familiarize yourself with the watch's buttons and display areas.



Image: Diagram illustrating the various buttons and display functions of the SMAEL 8007 watch, including Light, Mode, Start, Reset, Time Display, Week Display, Date Display, and Adjust Button.

- **LIGHT Button (Top Left):** Activates the LED backlight for the digital display.
- **MODE Button (Bottom Left):** Cycles through different digital modes (Time, Alarm, Stopwatch).
- **START Button (Top Right):** Used to start/stop functions in Stopwatch mode, or adjust settings in setting mode.
- **RESET Button (Bottom Right):** Used to reset functions in Stopwatch mode, or select items in setting mode.
- **Crown (Right Side):** Adjusts the analog time. Pull out to set, push in to start.

SETUP AND TIME SETTING

Setting Analog Time

1. Pull out the crown on the right side of the watch.
2. Rotate the crown to move the hour and minute hands to the desired time.
3. Push the crown back in to start the analog timekeeping.

Setting Digital Time, Date, and Day

1. From the normal time display mode, press the **MODE** button three times to enter the time setting mode. The seconds digits will flash.
2. Press the **RESET** button to cycle through the settings: Seconds → Hour → Minute → Month → Date → Day of Week.
3. While a setting is flashing, use the **START** button to adjust the value.
4. After setting all values, press the **MODE** button once to return to the normal time display.
5. To toggle between 12-hour and 24-hour format, press the **RESET** button while the hour setting is flashing.

OPERATING FUNCTIONS

Using the LED Backlight

Press the **LIGHT** button (top left) to illuminate the digital display for a few seconds, allowing for easy reading in low-light conditions.

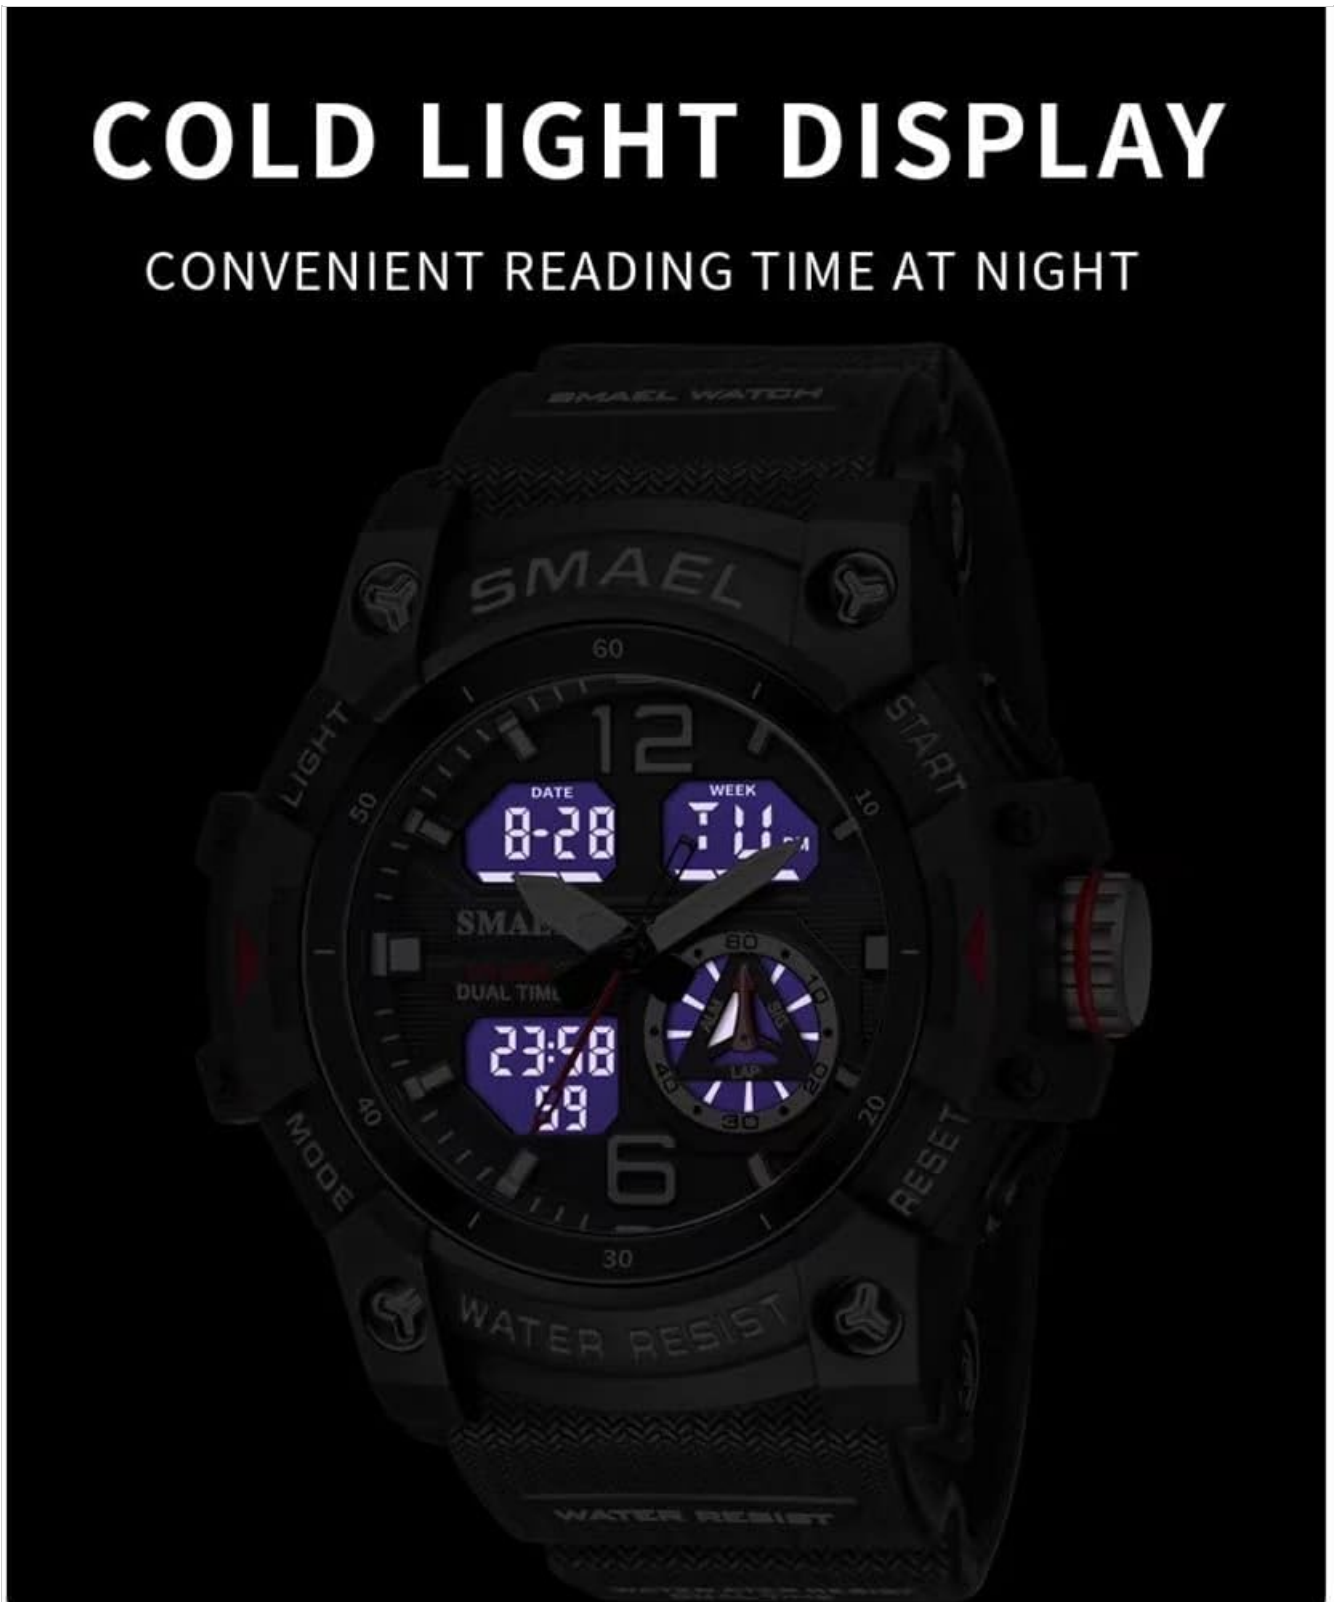


Image: The SMAEL 8007 watch with its cold light display activated, showing the digital time clearly visible in the dark.

Alarm Function

1. From the normal time display, press the **MODE** button once to enter Alarm mode.
2. Press the **RESET** button to select the hour or minute setting.
3. Use the **START** button to adjust the flashing hour or minute.

4. Press the **MODE** button to return to the normal time display.
5. To turn the alarm ON/OFF, press the **START** button while in Alarm mode. An alarm icon will appear/disappear.
6. To activate/deactivate the hourly chime, press the **RESET** button while in Alarm mode. A chime icon will appear/disappear.

Stopwatch Function

1. From the normal time display, press the **MODE** button twice to enter Stopwatch mode.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to zero.
5. To record split times, press **RESET** while the stopwatch is running. The display will show the split time, but the stopwatch continues to run in the background. Press **RESET** again to return to the running stopwatch display.
6. Press the **MODE** button to exit Stopwatch mode.

Dual Time Display

The watch features both analog and digital time displays. The analog time is set independently using the crown. The digital time can be set to a different time zone if desired, providing a dual time function.



Image: Close-up view of the SMAEL 8007 watch face, emphasizing the dual time display capability with both analog hands and digital readouts for time, date, and day.

MAINTENANCE AND CARE

- **Water Resistance (5ATM / 50m):** This watch is resistant to splashes, rain, and brief immersion in water (e.g., swimming in shallow water). **DO NOT** press any buttons while the watch is submerged in water. Avoid hot water, steam, and diving, as this can compromise the water seals.
- **Cleaning:** Wipe the watch with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and mild soap, then dry

thoroughly. Avoid harsh chemicals.

- **Battery Replacement:** The watch uses a button cell battery. When the display dims or functions become erratic, it's time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure water resistance is maintained.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) for extended periods.
- **Impact:** While shock-resistant, avoid severe impacts or dropping the watch to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace the battery.
Analog hands are not moving.	Crown is pulled out; low battery.	Push the crown in; replace the battery.
Time is incorrect.	Incorrect setting; low battery.	Reset the time (analog and digital); replace the battery.
Water inside the watch.	Buttons pressed underwater; exposure to hot water/steam; damaged seal.	Immediately take to a qualified watch technician for inspection and repair. Do not attempt to dry it yourself.

SPECIFICATIONS

Feature	Detail
Brand	SMAEL
Model Number	8007 (SM8007RES)
Movement	Quartz + Digital Electronics
Case Material	Rubber & Metal (Plastic)
Band Material	TPU Strap
Dial Window Material	Acrylic
Water Resistance	5ATM (50 meters / 164 feet)
Case Diameter	54mm
Case Thickness	18mm
Weight	78g
Functions	Dual Time, Date, Week, Alarm, Stopwatch, LED Backlight, Luminous Hands, Shock Resistant, 12/24H Format



Image: Detailed diagram of the SMAEL 8007 watch showing key dimensions and material specifications.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact the retailer. If you encounter any issues not covered in this manual or require further assistance, please contact SMAEL customer support through their official channels or the retailer where the watch was purchased.

© 2025 SMAEL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question