

## Owigift Washer Drain Pump

# Owigift Washer Drain Pump Instruction Manual

For Kenmore Elite Washing Machine Models

## 1. INTRODUCTION

---

This manual provides essential information for the Owigift Washer Drain Pump, a replacement component designed for various Kenmore Elite washing machine models. It includes details on product overview, compatibility, and general guidance for installation and maintenance. Please read this manual thoroughly before attempting any installation or repair.

## 2. SAFETY INFORMATION

---

Always prioritize safety when working with appliances. Disconnect the washing machine from its power source before beginning any repair or maintenance. Wear appropriate personal protective equipment, such as gloves and eye protection. If you are unsure about any step, consult a qualified technician.

- **Disconnect Power:** Ensure the washing machine is unplugged from the electrical outlet before servicing.
- **Water Shut-off:** Turn off the water supply to the washing machine.
- **Drain Water:** Drain any residual water from the washer before removing components.
- **Professional Assistance:** If you lack experience with appliance repair, consider seeking professional help.

## 3. PACKAGE CONTENTS

---

The package includes the following item:

- 1 x Owigift Washer Drain Pump

## 4. PRODUCT OVERVIEW



This image displays the Owigift Washer Drain Pump. It is a compact unit, primarily white plastic, featuring an inlet and outlet for water hoses, and two smaller ports for additional connections. The design indicates it is ready for installation into a washing machine.

The Owigift Washer Drain Pump is an aftermarket replacement part designed to restore proper drainage function to compatible washing machines. It is constructed from durable plastic and stainless steel components to ensure reliable performance.

## 5. COMPATIBILITY

---

This Owigift Washer Drain Pump is compatible with the following Kenmore Elite washing machine models:

- 796.31623310
- 796.31412310
- 796.31412410
- 796.31512210
- 796.31512211
- 796.31522210
- 796.31523210
- 796.31622310

- 796.31523211
- 79631623310
- 79631523210
- 79631622310

To verify compatibility, locate your washing machine's model number, typically found on a label inside the door frame or on the back of the appliance. If you are uncertain about compatibility, please contact customer support for assistance.

## 6. INSTALLATION

---

Replacing a washer drain pump typically involves several steps. While specific instructions may vary by washing machine model, the general process includes:

1. **Preparation:** Disconnect power and water supply. Drain any remaining water from the washer.
2. **Access:** Depending on your washer model, you may need to remove the front panel, back panel, or tilt the machine to access the drain pump.
3. **Disconnect Old Pump:** Carefully disconnect the hoses and electrical wiring from the old drain pump. Be prepared for some residual water.
4. **Remove Old Pump:** Unmount the old pump from its housing.
5. **Install New Pump:** Mount the new Owigift drain pump in the same position.
6. **Reconnect:** Reconnect the hoses and electrical wiring to the new pump, ensuring all connections are secure and watertight.
7. **Test:** Restore water and power, then run a short drain cycle to check for leaks and proper operation.

Refer to your specific washing machine's service manual for detailed, model-specific installation instructions.

## 7. OPERATING INSTRUCTIONS

---

The drain pump operates automatically as part of your washing machine's cycle. Once installed correctly, it will engage during the drain and spin phases to remove water from the wash tub. No manual operation of the pump itself is required.

## 8. MAINTENANCE

---

Regular maintenance of the drain pump is generally not required beyond ensuring clear pathways for water flow. Periodically check the drain hose for kinks or blockages. If your washing machine has a drain pump filter, clean it regularly according to your washer's user manual to prevent debris from reaching the pump.

## 9. TROUBLESHOOTING

---

If your washing machine is not draining properly after installing the new pump, consider the following:

- **Power Connection:** Ensure the pump's electrical connector is securely attached.
- **Hose Connections:** Verify that all hoses are properly connected and clamped, with no leaks.
- **Blockages:** Check the drain hose and the washer's internal drain paths for any obstructions.

- **Pump Filter:** If applicable, ensure the washer's drain pump filter is clean.
- **Washer Error Codes:** Consult your washing machine's user manual for specific error codes related to drainage issues.

If the problem persists, it may indicate an issue with another component of the washing machine or require professional diagnosis.

## 10. SPECIFICATIONS

Feature	Detail
Brand	Owgift
Color	White
Material	Plastic, Stainless Steel
Style	Drain Pump
Power Source	AC/DC
Manufacturer	Owgift
UPC	718997273573

## 11. SUPPORT AND CONTACT

If you have any questions regarding the Owgift Washer Drain Pump or require further assistance, please contact our customer support. We aim to resolve your inquiries within 24 hours.

For compatibility concerns or technical support, please reach out to the seller directly through the platform where the purchase was made.