

- Manuals.plus /
- › Owigift /
- › Washer Drain Pump Instruction Manual

Owigift B09GN5X8LR

Owigift Washer Drain Pump Instruction Manual

Model: B09GN5X8LR

INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your Owigift Washer Drain Pump. This component is designed as an aftermarket replacement part for specific LG and Kenmore washing machine models. Please read this manual thoroughly before attempting any installation or repair to ensure proper function and safety.

PRODUCT OVERVIEW



Image: The Owigift Washer Drain Pump, a light-colored plastic assembly with inlet and outlet ports, designed for efficient water drainage from washing machines.

The Owigift Washer Drain Pump is a critical component responsible for removing water from the washing machine tub during the drain and spin cycles. This replacement part is constructed from durable materials including stainless steel and polypropylene, ensuring longevity and reliable performance.

COMPATIBILITY

This aftermarket drain pump is compatible with a range of LG and Kenmore washing machine models. Please verify your washer's model number against the list below to ensure compatibility before installation.

Compatible LG Models:

- WT1201CV
- WT4870CW
- WT1201CW
- WT1101CW/00
- WT5170WH

Compatible Kenmore Models:

- 796.31513310

- 796.31513210
- 79631513310
- 79631513210

Note: If you are uncertain about compatibility, it is recommended to contact the seller for assistance.

SPECIFICATIONS

Attribute	Detail
Brand	Owigift
Color	White
Material	Stainless Steel, Polypropylene
Style	Drain Pump
Power Source	AC/DC
UPC	718997273344

INSTALLATION AND SETUP

Safety Warning:

Always disconnect the washing machine from the power supply and water supply before attempting any repair or installation. Failure to do so can result in electric shock, injury, or damage to the appliance.

Replacing a washer drain pump typically involves the following general steps. Specific procedures may vary by washing machine model. Refer to your washing machine's service manual for detailed instructions.

1. Preparation:

- Unplug the washing machine from the electrical outlet.
- Turn off the hot and cold water supply valves to the washer.
- Disconnect the water inlet hoses from the back of the washer.
- Drain any remaining water from the washer tub and hoses.
- Move the washer away from the wall to access the rear or bottom panel.

2. Accessing the Pump:

- Depending on your washer model, you may need to tilt the washer back, remove the front panel, or remove the rear panel to access the drain pump.
- Locate the drain pump, which is usually at the bottom of the washer, near the motor.

3. Disconnecting the Old Pump:

- Place towels or a shallow pan underneath the pump to catch any residual water.
- Disconnect the hoses attached to the old drain pump. These are typically secured with clamps.
- Disconnect any electrical wiring harnesses connected to the pump. Note their orientation for reinstallation.
- Remove the mounting screws or clips that secure the pump to the washer frame.
- Carefully remove the old drain pump.

4. Installing the New Pump:

- Align the new Owigift drain pump with the mounting points.
- Secure the new pump with the mounting screws or clips.
- Reconnect the electrical wiring harnesses to the new pump. Ensure connections are secure.
- Reconnect the hoses to the new pump, securing them with their clamps. Ensure hoses are properly seated to prevent leaks.

5. Reassembly and Testing:

- Reattach any panels removed during access.
- Reconnect the water inlet hoses and turn on the water supply.
- Plug the washing machine back into the electrical outlet.
- Run a short drain or rinse/spin cycle to check for proper operation and leaks.

MAINTENANCE

Regular maintenance of your washing machine, including the drain system, can extend the life of components like the drain pump. While the drain pump itself requires minimal maintenance, consider the following:

- **Check for Obstructions:** Periodically inspect the drain pump filter (if accessible on your washer model) for lint, coins, or other small objects that can clog the pump and impede drainage. Clean as necessary.
- **Avoid Overloading:** Overloading the washing machine can put undue stress on the drain pump and other components.
- **Proper Detergent Use:** Use the correct type and amount of detergent to prevent excessive suds, which can sometimes interfere with proper drainage.

TROUBLESHOOTING

If your washing machine is experiencing drainage issues after replacing the pump, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Washer not draining	◦ Clogged drain hose ◦ Kinked drain hose ◦ Drain pump filter clogged ◦ Faulty lid switch (if applicable)	◦ Check and clear the drain hose. ◦ Straighten any kinks in the drain hose. ◦ Clean the drain pump filter. ◦ Inspect or replace the lid switch.
Noisy drain pump	◦ Object stuck in pump impeller ◦ Worn pump bearings (less likely with new pump)	◦ Disconnect power, access pump, and check for foreign objects. ◦ If noise persists and no obstruction, re-verify installation or consider professional inspection.

Water leaking from pump area	◦ Loose hose clamps ◦ Damaged hoses ◦ Improperly seated pump	◦ Tighten all hose clamps. ◦ Inspect hoses for cracks or damage and replace if necessary. ◦ Ensure the pump is securely mounted and all connections are tight.
------------------------------	--	--

If troubleshooting steps do not resolve the issue, or if you are unsure about performing a repair, it is advisable to consult a qualified appliance technician.

CUSTOMER SUPPORT

For questions regarding product compatibility, installation, or any other concerns, please contact the seller or manufacturer. Provide your product model number (B09GN5X8LR) and a detailed description of your issue for prompt assistance.

The seller aims to resolve problems within 24 hours.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09GN5X8LR>

More documents and user manuals: <https://manuals.plus/>