

[Manuals.plus](#) /

> [Lenovo](#) /

> [Lenovo Tab M10 HD 2nd Gen User Manual](#)

Lenovo TB-X306F-CR

Lenovo Tab M10 HD 2nd Gen User Manual

Model: TB-X306F-CR | Brand: Lenovo

1. OVERVIEW

The Lenovo Tab M10 HD 2nd Gen is a 10.1-inch HD Android tablet designed for versatile use, from entertainment to educational applications. It features a durable full metal body and an immersive display, making it suitable for all family members. This manual provides essential information for setting up, operating, and maintaining your device.

Key Features:

- **Vivid Display:** 10.1-inch 1280 x 800 IPS Display for clear visuals.
- **Powerful Performance:** MediaTek Helio P22T Octa-Core Processor (2.3GHz).
- **Ample Storage:** 2GB RAM & 32GB ROM, expandable via microSD card.
- **Operating System:** Android 10 for a smooth user experience.
- **Long-lasting Battery:** Up to 11 hours of web browsing.
- **Connectivity:** Bluetooth 5.0 and 802.11ac WiFi.
- **Dual Cameras:** Front 5MP fixed-focus and Rear 8MP auto-focus.
- **Enhanced Audio:** Dual speakers tuned by Dolby Atmos.
- **Eye Protection:** TÜV Rheinland-certified for low blue light to reduce eye strain.

2. SETUP

2.1 Unboxing

Upon opening the package, ensure all components are present. The standard package includes the Lenovo Tab M10 HD 2nd Gen tablet and a charging cable.



Angled view of the Lenovo Tab M10 HD 2nd Gen tablet, showcasing its display with a vibrant wallpaper and app icons. The tablet is thin and has a dark gray back.

2.2 Initial Power On

1. Press and hold the power button located on the side of the tablet until the Lenovo logo appears.
2. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account.
3. You may be prompted to restore data from a previous Android device or set up as new.

2.3 Basic Configuration

After initial setup, personalize your tablet settings:

- **Screen Brightness:** Adjust in Settings > Display > Brightness level.
- **Sound Settings:** Configure volume and notification sounds in Settings > Sound.
- **Security:** Set up a screen lock (PIN, pattern, or password) in Settings > Security.
- **Google Kids Space:** Utilize parental controls and access teacher-approved content for children.

3. OPERATING INSTRUCTIONS

3.1 Navigation

Navigate your tablet using touch gestures:

- **Tap:** Select an item.
- **Swipe:** Scroll through screens or lists.
- **Pinch:** Zoom in or out on content.
- **Long Press:** Access contextual menus or move icons.

3.2 Connecting to Wi-Fi

To connect to a Wi-Fi network:

1. Go to Settings > Network & internet > Wi-Fi.
2. Toggle Wi-Fi on.
3. Select your desired network from the list and enter the password if prompted.

3.3 Using the Camera

The tablet features dual cameras for photos and videos.



Rear view of the Lenovo Tab M10 HD 2nd Gen tablet, featuring the "nook" logo prominently in the center and the Lenovo logo in the top right corner. The rear camera is visible in the top left.

- **Open Camera App:** Tap the Camera icon on the home screen.
- **Switch Cameras:** Use the camera switch icon to alternate between front (5MP) and rear (8MP) cameras.
- **Take Photo/Record Video:** Tap the shutter button to capture an image or start/stop video recording.

3.4 Audio/Video Playback

Enjoy enhanced audio with dual speakers tuned by Dolby Atmos.

- **Media Apps:** Use pre-installed apps like YouTube or Nook HD e-Reader for content.
- **Volume Control:** Use the physical volume buttons on the side or the on-screen controls.



Angled view of the Lenovo Tab M10 HD 2nd Gen tablet displaying the Nook e-reader interface with various book covers. The tablet's sleek design is visible.

3.5 Parental Controls (Google Kids Space)

The tablet integrates Google Kids Space, offering a safe environment for children.

- **Setup:** Configure Google Kids Space through the initial setup or via the Google Family Link app on your own device.
- **Content Management:** Access teacher-approved apps, games, and books.
- **Screen Time Limits:** Set daily limits and bedtime schedules for tablet usage.

4. MAINTENANCE

4.1 Battery Care

To maximize battery life:

- **Charging:** Use the provided charging cable. Avoid overcharging.
- **Brightness:** Reduce screen brightness when not needed.
- **Background Apps:** Close unused apps running in the background.
- **Power Saving Mode:** Enable power saving features in Settings > Battery.

4.2 Storage Management

The tablet comes with 32GB of internal storage. To manage storage:

- **Check Usage:** Go to Settings > Storage to see what is consuming space.
- **Clear Cache:** Regularly clear cache data from apps.
- **Expand Storage:** Insert a microSD card into the dedicated slot for additional storage.

4.3 Software Updates

Keep your tablet's software up-to-date for optimal performance and security.

- **Check for Updates:** Go to Settings > System > System update.
- **Install Updates:** Follow the on-screen instructions to download and install available updates. Ensure your device is charged and connected to Wi-Fi.

5. TROUBLESHOOTING

5.1 Common Issues

- **Tablet not turning on:** Ensure the battery is charged. Connect to the charger and try again.
- **Apps crashing:** Clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache) or reinstall the app.
- **Slow performance:** Close background apps, clear storage, or restart the tablet.
- **Wi-Fi connectivity issues:** Restart your Wi-Fi router and the tablet. Forget and reconnect to the network in Settings.

5.2 Contact Support

If you encounter issues not covered in this manual, please refer to the official Lenovo support website or contact customer service for assistance.

6. SPECIFICATIONS

Feature	Detail
Brand	Lenovo
Model Name	Lenovo Tab M10 HD 2nd Gen
Item Model Number	TB-X306F-CR
Operating System	Android 10
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 pixels (HD IPS Display)
Processor	MediaTek Helio P22T (Octa-Core, 2.3 GHz)
RAM	2 GB
Flash Memory Size	32 GB
Wireless Type	802.11ac (Wi-Fi), Bluetooth 5.0
Average Battery Life	Up to 11 Hours (web browsing)
Rear Webcam Resolution	8 MP (auto-focus)
Front Webcam Resolution	5 MP (fixed-focus)
Item Weight	1.45 pounds

Product Dimensions	9.51 x 6 x 0.21 inches
Color	Black

7. WARRANTY AND SUPPORT

This product is sold as a renewed item. Please refer to the Amazon Renewed program's terms and conditions for specific warranty details and return policies. Typically, Amazon Renewed products are fully functional and come with generic or original accessories and packaging, backed by a 90-day return/replacement policy.

For further support, visit the official Lenovo support website or the Amazon Renewed Store for product-specific information and assistance.

