

Sony CUH-1215A

Sony PlayStation 4 (PS4) CUH-1215A System Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and effective use of your Sony PlayStation 4 (PS4) CUH-1215A console. Please read this manual thoroughly before using the system and retain it for future reference. The PlayStation 4 system offers powerful processing and impressive graphics for an immersive gaming experience.

IMPORTANT SAFETY INFORMATION

Always observe the following safety precautions when using your PlayStation 4 system:

- **Ventilation:** Ensure adequate ventilation around the console. Do not block ventilation openings.
- **Power Supply:** Use only the power cord supplied with your system. Do not use damaged power cords.
- **Liquid Exposure:** Keep the system away from water and other liquids.
- **Cleaning:** Unplug the system before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Placement:** Place the system on a stable, level surface. Avoid placing it in direct sunlight or near heat sources.
- **Hearing Safety:** Avoid prolonged use at high volume levels to prevent hearing damage.
- **Seizures:** A small percentage of individuals may experience epileptic seizures when exposed to certain light patterns or flashing lights. If you or any family member has an epileptic condition, consult your doctor before playing.

PACKAGE CONTENTS

Verify that your package contains the following items:

- PlayStation 4 CUH-1215A Console
- DUALSHOCK 4 Wireless Controller
- HDMI Cable
- Power Cord
- USB Cable (for controller charging)
- Mono Headset



Image: The Sony PlayStation 4 CUH-1215A console shown alongside its DUALSHOCK 4 wireless controller, illustrating the primary components included in the package.

SETUP

1. Connecting the Console

1. **Connect the HDMI Cable:** Insert one end of the HDMI cable into the HDMI OUT port on the back of the PS4 console and the other end into the HDMI input on your TV or display.
2. **Connect the Power Cord:** Plug the power cord into the AC IN connector on the back of the PS4 console, then plug the other end into an electrical outlet.
3. **Connect to the Internet (Optional):** For a wired connection, connect an Ethernet cable to the LAN port on the back of the PS4 console and to your router. For a wireless connection, you will configure this during initial setup.



Image: Rear view of the Sony PlayStation 4 CUH-1215A console, highlighting the HDMI OUT, AC IN, and LAN ports for connection.

2. Connecting the DUALSHOCK 4 Wireless Controller

To pair your DUALSHOCK 4 controller with the PS4 system for the first time:

1. Connect the USB cable to the USB port on the front of the PS4 console.
2. Connect the other end of the USB cable to the DUALSHOCK 4 controller.
3. Press the PS button on the controller. The controller will pair with the system and begin charging.

3. Initial Setup Wizard

After connecting all cables and turning on the PS4 system, follow the on-screen instructions to complete the initial setup. This includes setting up your internet connection, date and time, and creating or logging into a PlayStation Network account.

OPERATING INSTRUCTIONS

Turning On/Off

- **To Turn On:** Press the power button on the front of the PS4 console or the PS button on a paired DUALSHOCK 4 controller.
- **To Turn Off:** From the function screen, select **(Power) > Turn Off PS4**. Alternatively, press and hold the power button on the console for at least 7 seconds until the system beeps twice.
- **Rest Mode:** To put the system into Rest Mode, select **(Power) > Enter Rest Mode**. The power indicator will turn orange.

Navigating the User Interface

Use the DUALSHOCK 4 controller to navigate the PS4's user interface. The main screen displays content

areas such as the Function Screen (top row for notifications, friends, settings) and the Content Area (for games, applications, and media).

Inserting and Ejecting Discs

- **Inserting a Disc:** Hold the disc with the label side facing up and gently slide it into the disc slot on the front of the console until it is pulled in automatically.
- **Ejecting a Disc:** Press the eject button located on the front of the console, or select the game icon from the Content Area and press the **OPTIONS** button, then select **Eject Disc**.

Connecting to PlayStation Network

To access online multiplayer, digital games, and other services, you need a PlayStation Network account. Go to **Settings > Account Management > Sign In to PlayStation Network** or **Create an Account**.

MAINTENANCE

Cleaning the Console

Regularly clean your PS4 console to ensure optimal performance and longevity.

- Unplug the power cord before cleaning.
- Use a soft, dry cloth to wipe down the exterior of the console.
- Do not use liquid cleaners, solvents, or abrasive cloths, as these can damage the finish.
- Ensure ventilation ports are free from dust accumulation. A can of compressed air can be used carefully to clear dust from vents.

Software Updates

Keep your PS4 system software updated to the latest version for improved features, security, and performance. The system can be set to update automatically or manually via **Settings > System Software Update**.

Storage Management

The CUH-1215A model includes 500GB of storage. To manage your storage, go to **Settings > Storage**. Here you can view used space and delete unwanted applications, saved data, or capture gallery items.

TROUBLESHOOTING

If you encounter issues with your PS4 system, refer to the following common solutions:

Problem	Solution
No Power	Ensure the power cord is securely connected to both the console and the electrical outlet. Try a different outlet.
No Video Output	Check HDMI cable connections. Ensure your TV is on the correct HDMI input. Try a different HDMI cable or port. Restart the console.
Controller Not Connecting	Connect the controller to the console with a USB cable and press the PS button to re-pair. Ensure the controller is charged.

Problem	Solution
Disc Read Error	Ensure the disc is clean and free of scratches. Try a different game disc. Restart the console.
System Freezes/Crashes	Press and hold the power button for 7 seconds until the system turns off. Restart the system. If issues persist, consider rebuilding the database from Safe Mode (turn off PS4, then press and hold power button until second beep).

SPECIFICATIONS

The following are key specifications for the Sony PlayStation 4 CUH-1215A system:

- **Model Number:** CUH-1215A
- **Internal Storage:** 500GB
- **Optical Drive:** Blu-ray Disc Drive
- **Connectivity:** HDMI, USB 3.0, Ethernet (LAN), Wi-Fi (802.11 b/g/n), Bluetooth 2.1 (EDR)
- **Dimensions (Approx.):** 23.62 x 19.69 x 15.75 inches
- **Weight (Approx.):** 15.4 pounds
- **Manufacturer:** Sony
- **First Available:** September 20, 2021 (for this renewed product listing)



Image: Front and side view of the Sony PlayStation 4 CUH-1215A console, showcasing its matte black finish and sleek design.

WARRANTY AND SUPPORT

This product is offered as an Amazon Renewed item. Amazon Renewed products are professionally inspected

and tested to work and look like new. If you are not satisfied with your purchase, renewed products are eligible for replacement or refund under the [Amazon Renewed Guarantee](#).

For further assistance or technical support, please refer to the Amazon Renewed support channels or the official Sony PlayStation support website.