

Wall Wahl Trimmer Replacement Backing Piece

Wahl Trimmer Replacement White Plastic Backing Piece Instruction Manual

For Wahl All in One Lithium Ion Trimmer Stainless Steel Standard / T Blade Models

1. OVERVIEW

This manual provides instructions for the installation and maintenance of the replacement white plastic backing piece for Wahl All in One Lithium Ion Trimmers. This component is crucial for maintaining proper blade function and tension. It is designed to replace worn or broken original parts, restoring your trimmer's performance.

2. PRODUCT COMPONENTS

Each package contains two (2) replacement white plastic backing pieces. These are genuine parts, not 3D printed, and feature pre-drilled screw holes for accurate installation.



Image 2.1: Two white plastic backing pieces, showing their shape and screw holes. These are essential for blade tension.

Genuine Part



NOT 3D Printed

Image 2.2: Emphasizes that the parts are genuine and not 3D printed, ensuring quality and fit.

Note: This product does not include screws or the spring. You will need to reuse these components from your existing trimmer blade assembly. Springs may be available upon request from the seller.

3. COMPATIBLE MODELS

This replacement part is compatible with Wahl All in One Lithium Ion Trimmers that use the detachable standard blade (59300/02145) or the wider T Blade (02144/02141). Compatible models include, but are not limited to:

- 3205, 3266, 5598, 5616, 5701, 9653, 9686
- 9816, 9818, 9818A, 9818L, 9837, 9854, 9854L, 9855
- 9860, 9864, 9864SS, 9867, 9869, 9870, 9876, 9876L
- 9880, 9880L, 9885, 9886, 9884, 9888, 9893, 9894
- 9896, 9898, 9899, 9937, 9953, 9984, 9994, SS2L, WSS3L

4. INSTALLATION GUIDE (SETUP)

Replacing the backing piece is a straightforward process. No instructions are included with the product, but the steps generally involve:

1. **Preparation:** Ensure your trimmer is turned off and unplugged (if corded). Remove the blade assembly from the trimmer body.
2. **Disassembly:** Carefully locate the two small screws holding the existing plastic backing piece to the blade. Use a fine Phillips head screwdriver to remove these screws.
3. **Remove Old Part:** Gently remove the old, broken plastic backing piece. Be careful to retain the small spring that sits underneath or within the backing piece, as this will be reused.
4. **Install New Part:** Position the spring correctly on the blade assembly. Place the new white plastic backing piece over the spring and align the pre-drilled screw holes with the corresponding holes on the blade assembly.
5. **Secure:** Reinsert the two screws and tighten them securely with the Phillips head screwdriver. Do not overtighten.
6. **Reassembly:** Reattach the blade assembly to your Wahl trimmer body.

This repair allows you to easily fix your blade without needing to purchase an entirely new blade assembly or trimmer.

5. OPERATION

Once the new backing piece is installed, the trimmer blade should operate as intended. The backing piece provides the necessary support and tension for the moving blade, ensuring a smooth and effective cut. If the blade was rattling or pulling hair before, this replacement should resolve those issues by restoring proper spring tension.

6. MAINTENANCE

To ensure the longevity of your trimmer and the new backing piece:

- **Regular Cleaning:** After each use, brush away loose hairs from the blade assembly.
- **Oiling Blades:** Periodically apply a few drops of clipper oil to the blades to keep them lubricated and reduce friction.
- **Inspect for Wear:** Occasionally inspect the plastic backing piece for signs of wear or cracking, especially if you frequently detach and reattach the blade head.
- **Proper Storage:** Store your trimmer in a clean, dry place to prevent dust and moisture buildup.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Blade rattling or pulling hair	Worn or broken plastic backing piece, or misplaced spring.	Ensure the new backing piece is installed correctly and the spring is properly seated. If the issue persists, check if the spring itself is damaged or if the blade needs sharpening/replacement.
Screws do not fit	Using incorrect screws or misaligned holes.	Ensure you are using the original screws from your trimmer blade. Verify that the backing piece is correctly aligned with the blade assembly's screw holes.
Blade not moving smoothly	Lack of lubrication or debris.	Clean the blade thoroughly and apply clipper oil. Ensure no hair or debris is obstructing the blade's movement.

8. SPECIFICATIONS

- **Product Type:** Replacement White Plastic Backing Piece
- **Quantity:** Two (2) pieces
- **Material:** Original plastic (not 3D printed)
- **Compatibility:** Wahl All in One Lithium Ion Trimmers with Standard (59300/02145) or T Blade (02144/02141)
- **Color:** White
- **Manufacturer:** Wall (as per product listing)

9. WARRANTY AND SUPPORT




As a replacement part, this product typically does not come with a separate manufacturer's warranty. The original warranty for your Wahl trimmer would apply to the trimmer unit itself, not necessarily to individual replacement components purchased separately.




For any issues regarding the quality or fit of this replacement part, please contact the seller directly through the platform where it was purchased. For general trimmer maintenance or issues unrelated to this specific part, refer to your original Wahl trimmer's instruction manual or visit the official Wahl website for support.



© 2024 Wall. All rights reserved. This manual is for informational purposes only.

Related Documents - Wahl Trimmer Replacement Backing Piece

	<p>Wahl Rechargeable Trimmer: User Manual and Operating Instructions</p> <p>Comprehensive guide to using, maintaining, and troubleshooting Wahl rechargeable trimmers. Covers important safety precautions, operating instructions for Lithium-Ion and NiMH models, cutting techniques, blade care, and warranty information.</p>
	<p>Wahl Rechargeable Trimmer: User Manual and Operating Instructions</p> <p>Comprehensive user manual for Wahl rechargeable trimmers, covering safety precautions, operating instructions, styling tips, care and cleaning, troubleshooting, product registration, and warranty information for models like 9860-800X, 9854-800, and others.</p>
	<p>Wahl Rechargeable Trimmer ZB333 User Manual and Instructions</p> <p>Comprehensive user manual for the Wahl Rechargeable Trimmer, model ZB333. Includes operating instructions, safety guidelines, care and cleaning tips, troubleshooting, and warranty information for models 9854-802, WM80801, 9864, 9854-800, and 9860-806.</p>

	<p>Wahl Guide Combs and Blades Compatibility Guide</p> <p>A comprehensive guide detailing Wahl's range of guide combs and detachable blades, including their sizes, types, and compatibility with various Wahl trimmer and clipper models. Information covers T-blade combs, precision blades, stubble combs, adjustable combs, and extreme precision stainless steel blades, along with relevant part numbers and model compatibility lists.</p>
	<p>Wahl Stainless Steel Lithium Ion Detachable Blade Trimmer User Manual</p> <p>Comprehensive user manual for the Wahl Stainless Steel Lithium Ion Detachable Blade Trimmer, covering important safety instructions, charging and LED indicators, troubleshooting, battery replacement, disposal, special features, cleaning and maintenance, and detailed usage instructions for various grooming tasks.</p>
	<p>Wahl Lithium Ion+ Stainless Steel Detachable Blade Trimmer - Operating Instructions and Guide</p> <p>Comprehensive operating instructions, troubleshooting guide, and warranty information for the Wahl Lithium Ion+ Stainless Steel Detachable Blade Trimmer (Model WSS3L). Learn how to recharge, trim beards, hair, and more.</p>