

Aokeyo AK-36

Aokeyo AK-36 Microphone Stand User Manual

Model: AK-36

INTRODUCTION

This user manual provides detailed instructions for the assembly, operation, and maintenance of your Aokeyo AK-36 Microphone Stand. Please read this manual thoroughly before using the product to ensure proper setup and safe operation. Keep this manual for future reference.

PRODUCT OVERVIEW

The Aokeyo AK-36 is a heavy-duty, adjustable desk microphone stand designed for professional streaming, voice-over, recording, gaming, and Discord use. It features a robust boom arm and a stable desk clamp base, compatible with various microphones including the Blue Yeti.



Figure 1: Aokeo AK-36 Microphone Stand components including the boom arm, desk clamp, and cable ties.

PACKAGE CONTENTS

Please verify that all components are present in the package:

- 1 x Aokeo AK-36 Microphone Boom Arm
- 1 x Desk Mounting Clamp
- 1 x Microphone Adapter (e.g., 3/8" to 5/8" screw adapter)
- 3 x Cable Ties (Velcro straps)

SPECIFICATIONS

Feature	Detail
Model Number	AK-36
Brand	Aokeo
Arm Length (each segment)	20.47 inches (520mm)
Max Load Capacity	1.2 KG (2.6 lbs)
Desk Clamp Thickness	Up to 60mm (2.36 inches)
Base Type	Leg (Desk Clamp)
UPC	854289008598

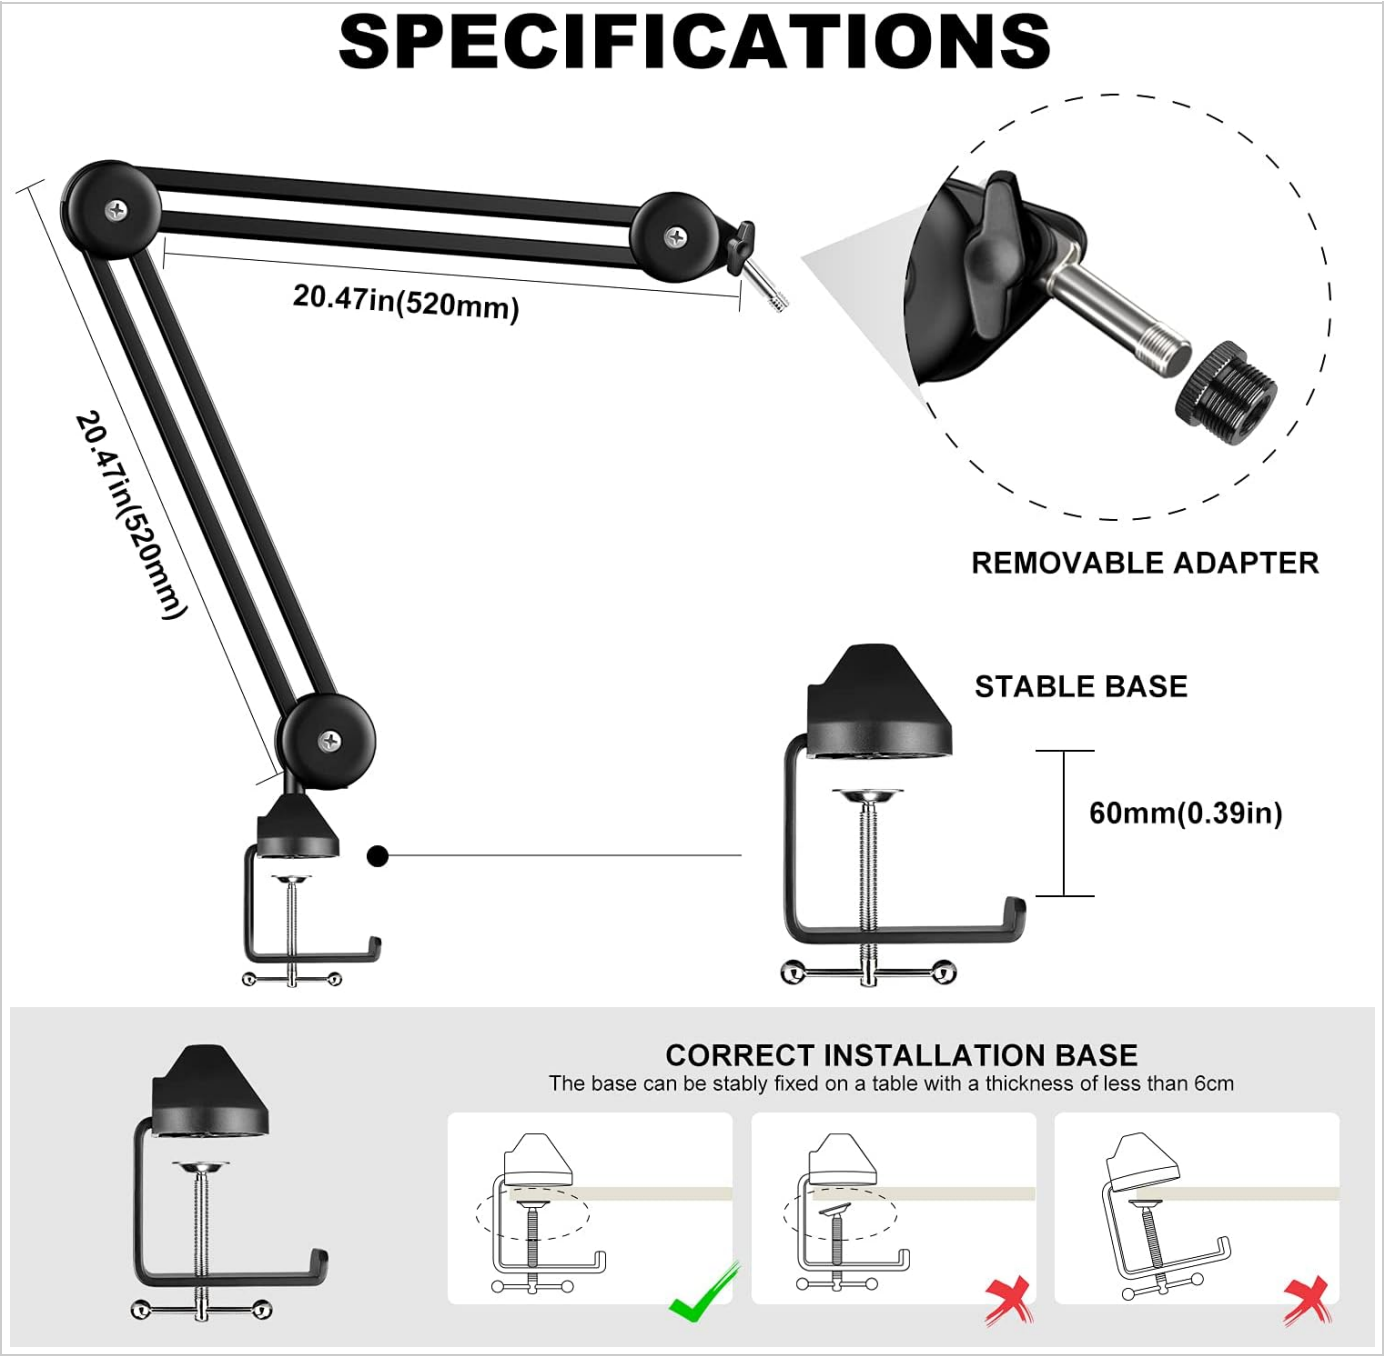


Figure 2: Detailed specifications and dimensions of the AK-36 stand, including arm length and clamp size.

SETUP INSTRUCTIONS

1. Attach the Desk Clamp:

Secure the desk mounting clamp to a stable surface, such as a desk or table, with a thickness of less than 6cm (2.36 inches). Ensure the clamp is tightened firmly to prevent movement. The base should be fully seated on the table surface for maximum stability.

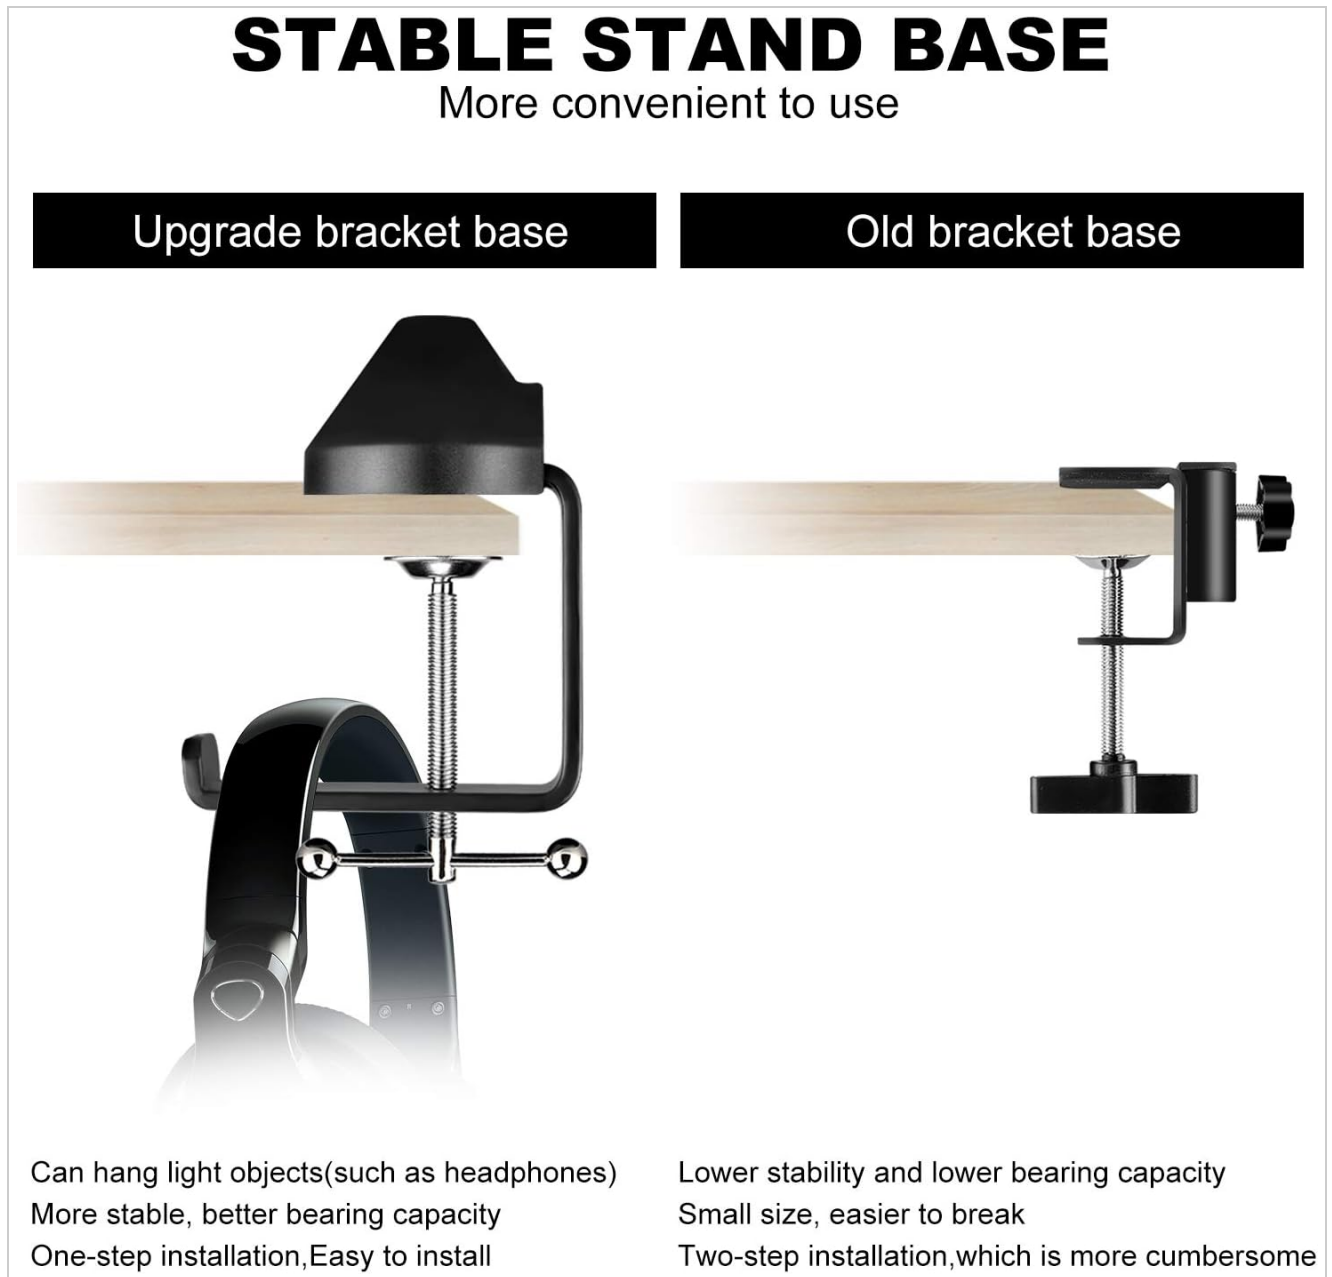


Figure 3: Proper installation of the stable desk clamp base, showing the correct and incorrect ways to attach it to a table.

2. Insert the Boom Arm:

Insert the base of the microphone boom arm into the hole on the desk clamp. Ensure it is fully seated and stable. The boom arm should rotate freely within the clamp.

3. Attach the Microphone Adapter:

Screw the provided microphone adapter (if needed for your microphone) onto the threaded end of the boom arm. Most standard microphones use a 5/8" thread, and many stands come with a 3/8" to 5/8" adapter.

4. Mount Your Microphone:

Carefully screw your microphone or microphone shock mount onto the adapter or directly onto the boom arm's thread. Ensure it is securely fastened.

5. Cable Management:

Use the included cable ties to secure your microphone cable along the boom arm. This helps maintain a tidy setup

and prevents the cable from interfering with arm movement.

OPERATING INSTRUCTIONS

The Aokeo AK-36 microphone stand offers flexible adjustment for optimal microphone positioning.

- **Arm Adjustment:**

The boom arm features multiple pivot points that allow for 180-degree adjustments. Loosen the adjustment knobs at each joint to reposition the arm, then tighten them firmly to lock the arm in place.

- **Base Rotation:**

The entire boom arm can rotate 360 degrees within the desk clamp, providing wide coverage and easy repositioning without needing to move the clamp.

- **Microphone Angle Adjustment:**

The microphone attachment point allows for up to 270 degrees of tilt, enabling precise angling of your microphone towards the sound source.

FLEXIBLE ADJUSTMENT

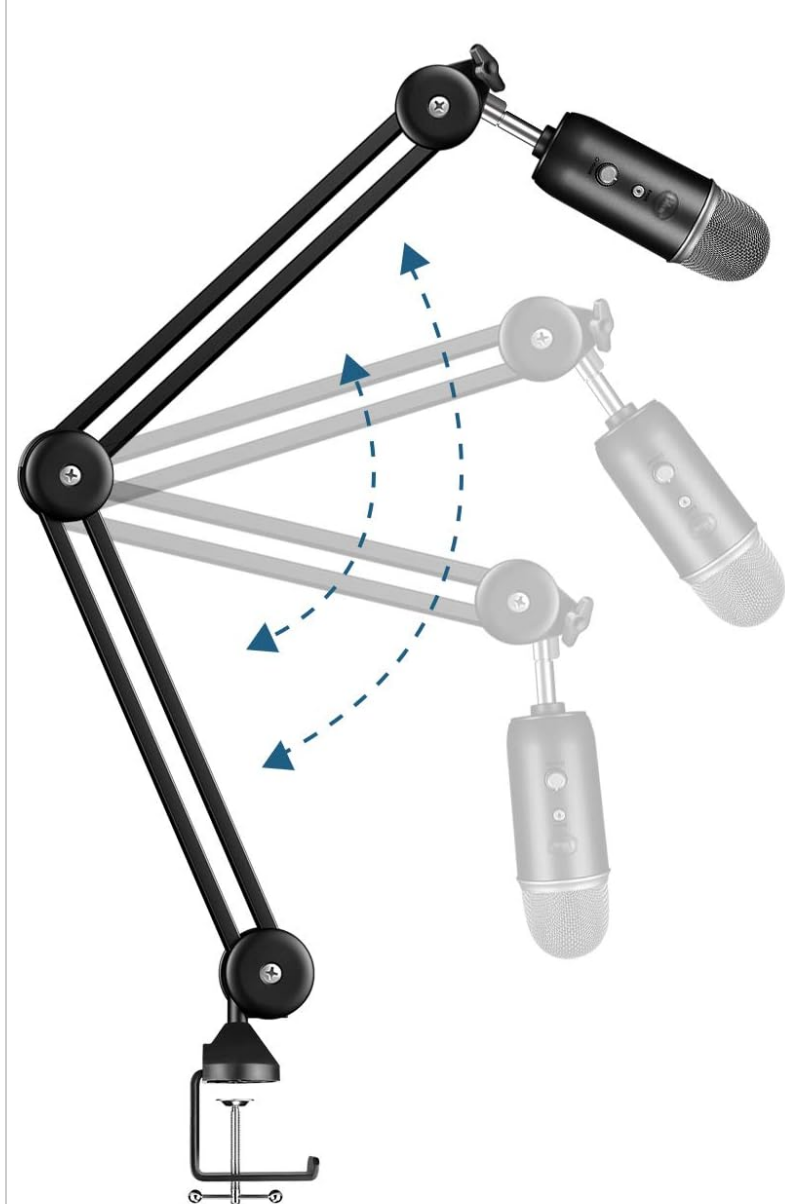
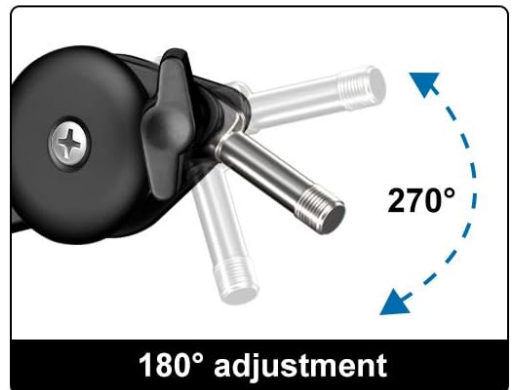
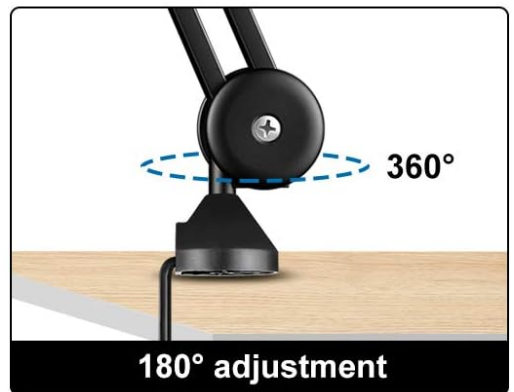
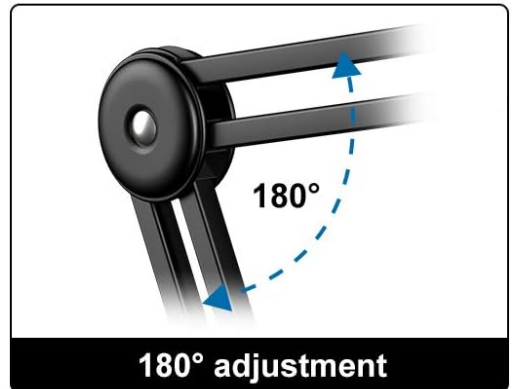


Figure 4: Visual guide to the flexible adjustment capabilities, including 180-degree arm movement, 360-degree base rotation, and 270-degree microphone tilt.

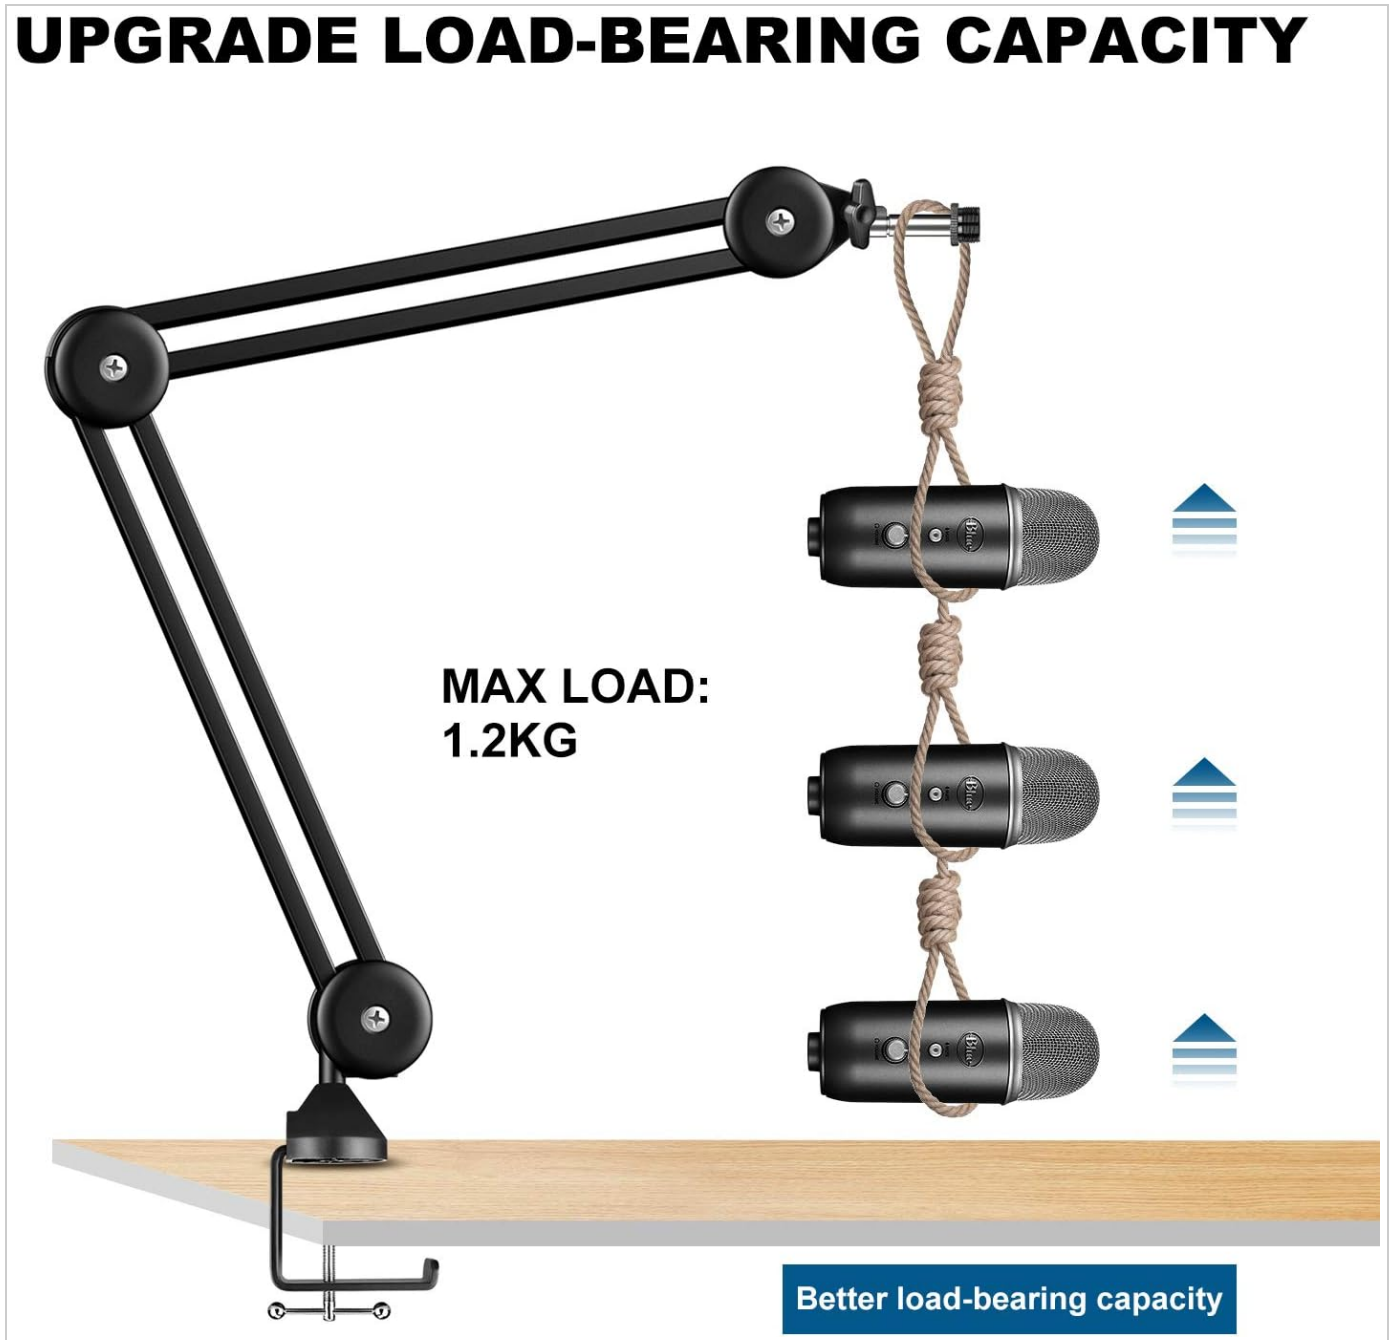 


Figure 5: The Aokeyo AK-36 stand demonstrating its upgraded load-bearing capacity of 1.2KG (2.6 lbs).

MAINTENANCE

To ensure the longevity and optimal performance of your Aokeyo AK-36 Microphone Stand, follow these maintenance guidelines:

- **Cleaning:** Wipe the stand with a soft, dry cloth to remove dust and debris. Avoid using abrasive cleaners or solvents, as they may damage the finish.
- **Joints and Knobs:** Periodically check all adjustment knobs and joints to ensure they are tight. If the arm feels loose, tighten the corresponding knob. Do not overtighten.
- **Lubrication:** The joints are designed for smooth operation and generally do not require lubrication. If any squeaking occurs, a small amount of silicone-based lubricant can be applied sparingly to the pivot points.
- **Storage:** When not in use for extended periods, store the stand in a clean, dry environment to prevent dust accumulation and potential corrosion.

TROUBLESHOOTING

If you encounter issues with your Aokey AK-36 Microphone Stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Desk clamp not tightened sufficiently or improperly installed.	Ensure the desk clamp is fully seated on the table and tightened securely. Verify the table thickness is within the clamp's capacity (max 6cm).
Boom arm sags or does not hold position.	Adjustment knobs are loose; microphone is too heavy.	Tighten all adjustment knobs firmly. Check if your microphone's weight exceeds the 1.2 KG (2.6 lbs) maximum load capacity.
Microphone cannot be attached.	Incorrect thread size; adapter missing.	Ensure you are using the correct microphone adapter (e.g., 3/8" to 5/8") if your microphone's thread does not match the stand's.

WARRANTY INFORMATION

Aokey products are designed for durability and performance. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Aokey website. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please contact Aokey customer support through the following channels:


- **Website:** Visit the official Aokey website for FAQs and support contact information.
- **Email:** Refer to your product packaging or the Aokey website for customer service email addresses.


When contacting support, please have your product model number (AK-36) and purchase details ready.



© 2023 Aokey. All rights reserved.
Aokey is a registered trademark.

Related Documents - AK-36

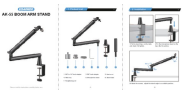	<p>Aokey AK-55 Boom Arm Stand Installation and Usage Guide</p> <p>A comprehensive guide to installing and using the Aokey AK-55 Boom Arm Stand, including product list, installation steps, and important notes for optimal microphone setup.</p>
---	---

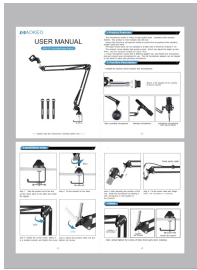

[Aoeko AK-35 Microphone Stand User Manual](#)

User manual for the Aoeko AK-35 microphone stand, detailing product features, function description, installation steps, and important notes for proper usage and setup.



[Aoeko PG58 Wireless Microphone User Manual](#)

User manual for the Aoeko PG58 wireless microphone, detailing product features, specifications, connection instructions, and customer notices.



[MAOKEO Microphone Boom Arm - Installation and Operation Guide](#)

A guide to installing and operating the MAOKEO Microphone Boom Arm, featuring a storage line design. Includes product diagram, installation steps, and usage instructions.