

Tristar MX-4820PR

Tristar MX-4820PR Blender User Manual

Model: MX-4820PR | Power: 1200W | Capacity: 700 ml

[Safety](#)[Overview](#)[Setup](#)[Operating](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty](#)[5](#)

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the Tristar MX-4820PR blender. Keep this manual for future reference.

- Always unplug the appliance from the power outlet before assembly, disassembly, or cleaning.
- Do not immerse the motor base in water or any other liquid. Clean with a damp cloth only.
- Keep hands and utensils out of the blending cup while blending to prevent injury.
- Ensure the blade assembly is securely attached to the blending cup before placing it on the motor base.
- Do not blend hot liquids, as pressure buildup can cause the cup to burst. Allow hot ingredients to cool before blending.
- Never operate the blender without ingredients in the cup.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

2. PRODUCT OVERVIEW

The Tristar MX-4820PR is a powerful personal blender designed for quick and efficient blending of smoothies, shakes, and more. Familiarize yourself with its components:

1. **Motor Base:** Contains the powerful 1200W motor and control buttons.
2. **Blade Assembly:** Features durable stainless steel blades for effective blending.

3. **Blending Cup (700 ml):** A portable cup for blending and drinking.
4. **Lid:** For sealing the blending cup, often with a drinking spout.



Image: Tristar MX-4820PR Blender with its main components. The motor base is at the bottom, the blending cup is above it, and the blade assembly is shown separately or attached to the cup.

3. SETUP AND ASSEMBLY

Before first use, wash all parts that will come into contact with food (blending cup, blade assembly, lid) in warm, soapy water. Rinse thoroughly and dry.

1. Place the motor base on a clean, dry, and stable surface.
2. Add your desired ingredients into the 700 ml blending cup. Do not overfill beyond the MAX fill line.
3. Attach the blade assembly to the open end of the blending cup. Twist clockwise until it is securely tightened. Ensure there are no leaks.
4. Invert the blending cup (with blade assembly attached) and place it onto the motor base. Align the tabs on the cup with the slots on the motor base.
5. Twist the blending cup clockwise to lock it into place on the motor base. The blender will not operate unless the cup is correctly locked.
6. Plug the power cord into a suitable electrical outlet.

4. OPERATING INSTRUCTIONS

The Tristar MX-4820PR blender is designed for simple operation. Always ensure the blender is properly assembled and plugged in before use.

- **Blending:** Once the cup is locked onto the motor base, press and hold the power button or twist the cup further (depending on model design) to activate the blending function. The 1200W motor will begin blending.
- **Pulse Function:** For controlled blending or to break up larger pieces, briefly press and release the power button. Repeat as needed.
- **Continuous Blending:** For smoother results, blend continuously for short intervals (e.g., 30-60 seconds), then release and repeat if necessary. Do not operate continuously for more than 1 minute to prevent motor overheating.
- **Stopping:** Release the power button or twist the cup counter-clockwise to unlock it from the motor base.
- **After Blending:** Unplug the blender. Twist the blending cup counter-clockwise to remove it from the motor base. Carefully detach the blade assembly by twisting it counter-clockwise. Attach the drinking lid if desired.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your Tristar MX-4820PR blender.

- **Motor Base:** Always unplug the blender before cleaning. Wipe the motor base with a damp cloth. Do not immerse it in water or any other liquid.
- **Blending Cup, Blade Assembly, and Lid:** These parts are generally dishwasher safe (top rack only) or can be washed by hand.
- **Hand Washing:** Wash immediately after use. Disassemble the cup, blade assembly, and lid. Wash with warm, soapy water using a brush for the blade area to ensure all residue is removed. Rinse thoroughly and allow to air dry. Handle blades with extreme care as they are sharp.
- **Storage:** Store the blender in a clean, dry place. Ensure all parts are completely dry before storing.

6. TROUBLESHOOTING

If you encounter issues with your Tristar MX-4820PR blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; cup not locked correctly; power outage.	Ensure power cord is securely plugged in. Twist cup clockwise until it locks into place. Check household circuit breaker.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients are too large.	Add more liquid. Reduce the amount of ingredients. Cut ingredients into smaller pieces. Use the pulse function.
Blender stops during operation.	Overheating; motor overload.	Unplug the blender and let it cool down for at least 15-20 minutes. Reduce the load or add more liquid before restarting.

Problem	Possible Cause	Solution
Leakage from the blending cup.	Blade assembly not tightened; cup overfilled; damaged gasket.	Ensure blade assembly is securely tightened. Do not exceed the MAX fill line. Check the gasket for damage and replace if necessary.

7. PRODUCT SPECIFICATIONS

- **Model:** Tristar MX-4820PR
- **Brand:** Tristar
- **Power:** 1200W
- **Capacity:** 700 ml blending cup
- **Color:** Black
- **Dimensions:** 8P x 8I x 20H cm (approximate)
- **Special Feature:** Compact design

8. WARRANTY INFORMATION

The Tristar MX-4820PR blender comes with a manufacturer's warranty. Please refer to the warranty card included in the product packaging for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

9. CUSTOMER SUPPORT

For further assistance, technical support, or spare parts, please contact Tristar customer service. Contact details can typically be found on the Tristar official website or on the product packaging.

Online Resources: Visit the official Tristar website for FAQs, product registration, and additional support materials.