

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Versuni](#) /
- › [Philips 3000 Series Steam Iron User Manual](#)

Versuni DST3011/20

Philips 3000 Series Steam Iron User Manual

Model: DST3011/20

INTRODUCTION

Thank you for choosing the Philips 3000 Series Steam Iron. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.



Figure 1: Philips 3000 Series Steam Iron, front-side view.

SAFETY INFORMATION

- Always ensure the voltage indicated on the iron corresponds to your local mains voltage before connecting.

- Do not leave the iron unattended while it is connected to the mains.
- Keep the iron and its cord out of reach of children when it is switched on or cooling down.
- Never immerse the iron in water or any other liquid.
- Do not use the iron if the plug, the mains cord, or the iron itself shows visible damage, or if it has been dropped.
- Always place the iron on a stable, heat-resistant surface when resting.
- Unplug the iron from the mains socket before filling it with water, emptying it, or cleaning it.

PARTS AND FEATURES

Familiarize yourself with the components of your Philips 3000 Series Steam Iron:

1. **Water Tank:** Transparent reservoir for water.
2. **Water Filling Hole:** Opening for adding water to the tank.
3. **Temperature Dial:** Used to select the appropriate temperature for different fabrics.
4. **Steam Control Slider:** Adjusts the steam output or selects dry ironing.
5. **Steam Boost Button:** Provides an extra burst of steam for stubborn creases.
6. **Spray Button:** Activates the fine mist spray function.
7. **Ceramic Soleplate:** The heated base that glides over fabrics.
8. **Power Cord:** Connects the iron to the electrical outlet.

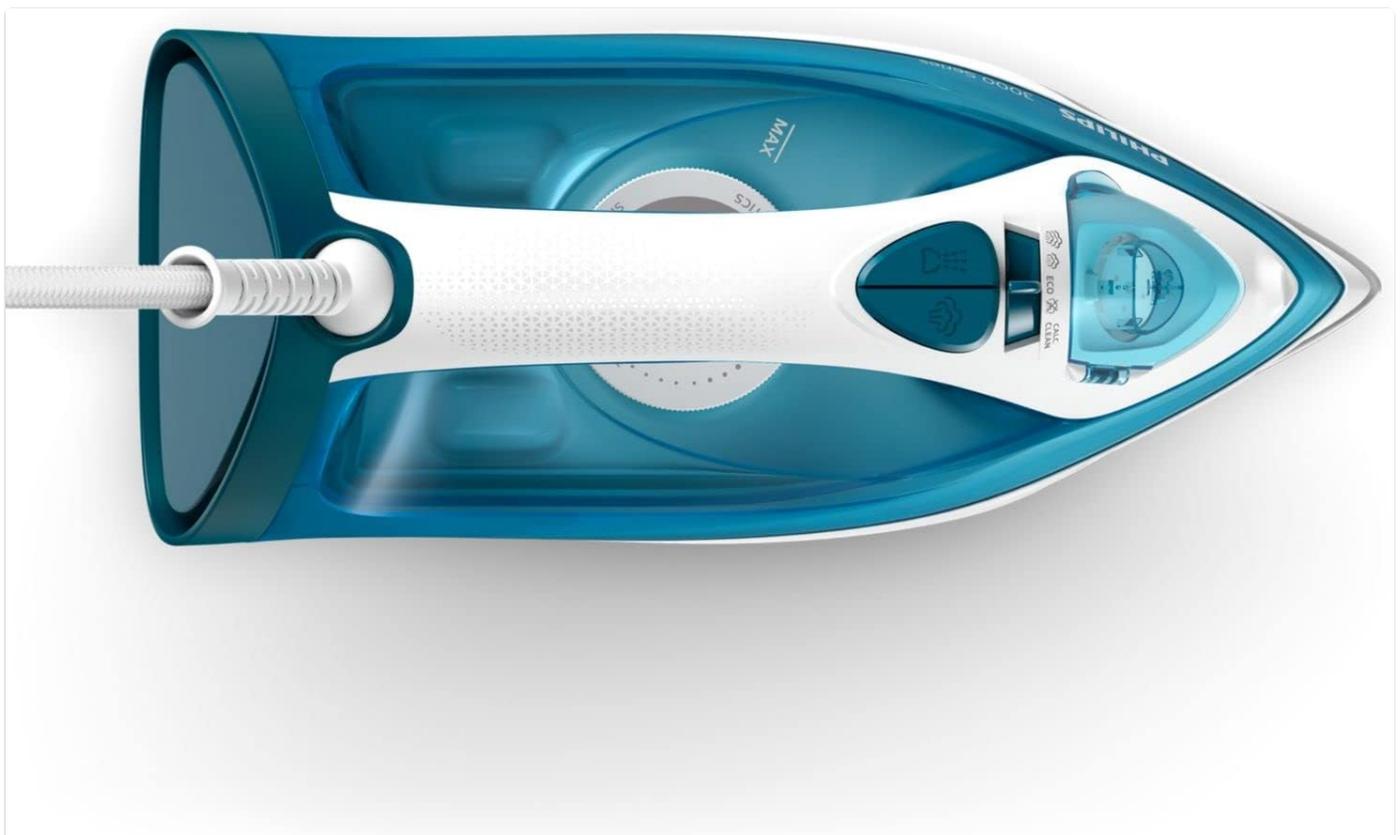


Figure 2: Top-down view highlighting the temperature dial and control buttons.

SETUP

Before First Use

- Remove any stickers or protective foil from the soleplate.
- It is normal for a slight odor or smoke to be emitted during the first few uses. This will disappear after a short time.

Filling the Water Tank

1. Ensure the iron is unplugged from the power outlet.
2. Set the steam control slider to the 'Dry Ironing' position (no steam).
3. Hold the iron in a slightly tilted position.
4. Open the water filling hole cover.
5. Pour tap water into the water tank up to the 'MAX' indication. Do not overfill.
6. Close the water filling hole cover securely.

OPERATING THE IRON

Temperature Setting

1. Plug the iron into a grounded wall socket.
2. Turn the temperature dial to the setting appropriate for your fabric type. Refer to the fabric care labels on your garments.
3. The indicator light will illuminate, indicating the iron is heating up. It will turn off when the selected temperature is reached.

Steam Ironing

Steam ironing is suitable for garments that can withstand high temperatures and moisture.

1. Ensure the water tank is filled.
2. Set the temperature dial to a steam-suitable setting (usually 3 dots or 'MAX').
3. Once the indicator light goes out, slide the steam control to the desired steam level.
4. For an extra burst of steam, press the steam boost button. Wait a few seconds between bursts to allow the iron to reheat.



Figure 3: Demonstrating steam ironing on a garment.



Figure 4: Close-up view of the iron's soleplate releasing steam during use.

Dry Ironing

For delicate fabrics or when steam is not required, use the dry ironing function.

- Set the steam control slider to the 'Dry Ironing' position (no steam).
- Select the appropriate temperature for your fabric.

Spray Function

The spray function helps to moisten stubborn creases.

- Ensure the water tank is filled.
- Press the spray button to release a fine mist onto the fabric.

Vertical Steaming

For quick touch-ups on hanging garments, curtains, or delicate items.

- Hang the garment on a hanger.
- Set the temperature dial to a steam-suitable setting.
- Hold the iron vertically a few centimeters away from the fabric and press the steam boost button.

MAINTENANCE

Cleaning the Soleplate

- Always unplug the iron and allow it to cool down completely before cleaning.
- Wipe the soleplate with a damp cloth and a non-abrasive (liquid) cleaner.
- Do not use scouring pads, abrasive cleaning agents, or harsh solvents, as these can damage the soleplate.



Figure 5: The ceramic soleplate of the iron.

Descaling (Calc-Clean)

Regular descaling helps maintain optimal steam performance and prolongs the life of your iron.

- Refer to the specific instructions in your iron's manual for the Calc-Clean function, if available.
- If your iron does not have a dedicated Calc-Clean function, you can periodically flush the steam vents by filling the tank with water and using the steam boost function over a sink until the tank is empty.

Storage

- Unplug the iron and allow it to cool down completely.
- Empty the water tank after each use to prevent limescale buildup.
- Store the iron in an upright position on its heel rest to protect the soleplate.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Iron is not plugged in or power outlet is faulty.	Check if the plug is securely inserted. Test the outlet with another appliance.
No steam or insufficient steam.	Water tank is empty; temperature is too low; steam control is set to 'dry ironing'; limescale buildup.	Fill the water tank. Set the temperature to a steam-suitable setting. Move the steam control slider to a steam position. Perform a Calc-Clean procedure.
Water leaking from the soleplate.	Temperature is too low for steam; water tank overfilled.	Ensure the iron has reached the correct temperature before using steam. Do not fill the water tank beyond the 'MAX' mark.

Problem	Possible Cause	Solution
Soleplate is sticking or not gliding smoothly.	Residue buildup on the soleplate; incorrect temperature setting for fabric.	Clean the soleplate as described in the maintenance section. Adjust the temperature dial according to the fabric type.

SPECIFICATIONS

Model Name: DST3011/20

Brand: Versuni (Philips)

Power: 2100 W

Soleplate Material: Ceramic

Color: Blue

Water Tank Capacity: 300 Milliliters

Special Feature: Steam Control

Item Weight: 2.64 pounds

Product Dimensions: 29 x 12.1 x 0.04 inches

Frequency: 50 Hz

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Versuni (Philips) support website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact customer service through the contact information provided on the product packaging or the official brand website.

