

Manuals.plus /

› **Toshiba** /

› Toshiba 32LA2063DG FHD Android TV User Manual

Toshiba 32LA2063DG

Toshiba 32LA2063DG FHD Android TV User Manual

Model: 32LA2063DG

1. INTRODUCTION

Thank you for choosing the Toshiba 32LA2063DG FHD Android TV. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new television. Please read this manual thoroughly before using the product to ensure safe and correct operation. Keep this manual for future reference.

2. SAFETY INFORMATION

Always observe the following safety precautions to avoid electric shock, fire, or damage to the TV.

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings. Ensure adequate space around the TV for proper airflow.
- Do not place the TV on an unstable cart, stand, tripod, bracket, or table.
- Protect the power cord from being walked on or pinched.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the box:

- Toshiba 32LA2063DG FHD Android TV
- Remote Control
- Power Cord
- TV Stand (2 pieces)
- Screws for Stand Installation
- Quick Start Guide
- Batteries for Remote Control (AAA x 2)

4. SETUP

4.1 Unpacking

Carefully remove the TV from its packaging. It is recommended to keep the original packaging for future transport or servicing.

4.2 Stand Installation

Place the TV face down on a soft, flat surface to prevent screen damage. Align the stand pieces with the corresponding slots on the bottom of the TV and secure them with the provided screws.



Image: Side view of the Toshiba 32LA2063DG TV, illustrating the slim profile and the attached stand feet. This view helps in understanding the TV's depth and how the stand supports it.

4.3 Wall Mounting (Optional)

This TV is VESA compliant. For wall mounting, use a compatible VESA wall mount kit (sold separately). Follow the instructions provided with your wall mount kit. Ensure proper ventilation when wall-mounted.

4.4 Connecting Peripherals

Connect your devices to the TV's ports:

- **HDMI:** For Blu-ray players, game consoles, set-top boxes.
- **USB:** For external storage devices (USB drives, external hard drives).
- **Antenna/Cable:** For terrestrial or cable TV signals.
- **Ethernet:** For a wired internet connection.
- **Optical Audio Out:** For connecting to soundbars or home theater systems.

4.5 Initial Power On and Setup Wizard

After connecting all cables, plug the power cord into an electrical outlet. Press the power button on the remote control or the TV. The initial setup wizard will guide you through language selection, network connection (Wi-Fi or

Ethernet), Google account sign-in, and channel scanning.



Image: Front view of the Toshiba 32LA2063DG TV, showcasing the Android TV interface with various app icons and content recommendations. This image demonstrates the user interface upon initial setup.

5. OPERATING INSTRUCTIONS

5.1 Remote Control Overview

Familiarize yourself with the remote control buttons for navigation, volume, channel selection, input source, and smart TV functions.

5.2 Basic Navigation (Android TV Interface)

Use the directional pad and 'OK' button on the remote to navigate the Android TV home screen. The home screen provides access to installed apps, recommended content, and settings.

5.3 Input Selection

Press the 'Input' or 'Source' button on the remote to switch between connected devices (HDMI 1, HDMI 2, AV, TV, etc.).

5.4 Smart TV Features

Your Toshiba Android TV allows you to:

- **Access Apps:** Download and use apps from the Google Play Store (e.g., Netflix, YouTube, Prime Video).
- **Stream Content:** Enjoy movies, TV shows, and music from various streaming services.
- **Internet Browsing:** Use a web browser to surf the internet.
- **Google Assistant:** Use voice commands for search, control, and information.

5.5 Picture and Sound Settings

Access the 'Settings' menu to adjust picture modes (Standard, Dynamic, Movie), brightness, contrast, color, and

sound modes (Standard, Music, Movie), equalizer settings, and surround sound options.

5.6 Channel Setup

If using an antenna or cable connection, navigate to 'Settings' > 'Channel' > 'Channel Scan' to automatically search for available channels.

6. MAINTENANCE

6.1 Cleaning the TV

Always unplug the TV before cleaning. Use a soft, dry cloth to wipe the screen and cabinet. For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Do not spray cleaner directly onto the screen.

6.2 Software Updates

Ensure your TV is connected to the internet. The TV may automatically prompt you for software updates. You can also manually check for updates in 'Settings' > 'Device Preferences' > 'About' > 'System update'. Keeping your software updated ensures optimal performance and security.

6.3 Storage and Handling

When moving or storing the TV, always handle it carefully, preferably in its original packaging. Avoid exposing the TV to extreme temperatures, direct sunlight, or high humidity.

7. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No Power	Ensure the power cord is securely plugged into the TV and the wall outlet. Check if the outlet is working.
No Picture / No Sound	Verify the correct input source is selected. Check cable connections (HDMI, antenna). Try a different channel or source.
Remote Control Not Working	Check and replace batteries. Ensure no obstructions between the remote and the TV's IR sensor.
Wi-Fi Connection Issues	Restart your router and the TV. Ensure the Wi-Fi password is correct. Move the TV closer to the router or use an Ethernet cable.
Apps Not Loading / Slow Performance	Clear app cache (Settings > Apps > [App Name] > Clear cache). Restart the TV. Ensure sufficient internet speed.

8. SPECIFICATIONS

Key technical specifications for the Toshiba 32LA2063DG TV:

- **Model Name:** 32LA2063DG
- **Screen Size:** 32 inches
- **Display Technology:** LED
- **Resolution:** 1080p (Full HD)
- **Aspect Ratio:** 16:9
- **Connectivity Technology:** Ethernet, Wi-Fi (built-in)
- **Supported Internet Services:** Netflix, YouTube, Prime Video, Google Play Store
- **Product Dimensions:** 10 x 48 x 50 cm (approx.)
- **Weight:** 2 kg (approx.)
- **Power:** 1 Lithium Ion batteries required (for remote)
- **Manufacturer:** Toshiba

9. WARRANTY AND SUPPORT

Your Toshiba TV comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details. Keep your proof of purchase for warranty claims.

For technical support, service, or further assistance, please visit the official Toshiba support website or contact their customer service hotline. Contact information can typically be found on the Toshiba website or in your warranty documentation.

Online Support: www.toshiba-tv.com/uk-en/support