Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Anderic /
- Anderic OEM NSRCFNA21 Smart Remote for Insignia TVs: Instruction Manual

Anderic NSRCFNA21

Anderic OEM NSRCFNA21 Smart Remote for Insignia TVs: Instruction Manual

Model: NSRCFNA21

1. PRODUCT OVERVIEW

The Anderic OEM NSRCFNA21 Smart Remote is an original equipment manufacturer (OEM) replacement remote control specifically designed for various Insignia TV models. This remote provides seamless functionality and user-friendly operation, ensuring reliable control over your television.



Image 1.1: The Anderic OEM NSRCFNA21 Smart Remote. This image displays the front view of the black remote control, featuring various buttons for power, voice control, navigation, volume, channel, and dedicated streaming service buttons.

Key features include:

Original Quality: An authentic OEM product, ensuring performance and reliability comparable to the remote
originally supplied with your TV.

- **User-Friendly Design:** Intuitive buttons and controls for easy navigation, volume adjustment, channel changes, and access to various TV functions.
- Reliable Performance: Provides a stable and responsive connection for accurate command execution.

2. SETUP AND PAIRING INSTRUCTIONS

To ensure proper functionality, the remote control must be paired with your Insignia TV. Follow these steps carefully:

- 1. Reset TV: Unplug your Insignia TV from its power source. Wait for approximately 30 seconds.
- 2. Power On TV: Plug the TV back into the power source and turn it on. Allow the TV to fully boot up.
- 3. **Initiate Pairing:** Once the TV has completely booted up and is displaying content, press and hold the **Home** button on the Anderic NSRCFNA21 remote control for up to 30 seconds.
- 4. Remote Update (if prompted): Your TV may display a message indicating that the remote needs an update. If prompted, allow the TV to proceed with the update. This process may take 1 to 3 minutes to complete.
- 5. **Verification:** After the update (if any) and pairing process, test the remote's functions (e.g., volume, channel, navigation) to confirm successful pairing.

If the remote does not pair after following these steps, repeat the process or refer to the troubleshooting section.

3. OPERATING THE REMOTE CONTROL

The Anderic NSRCFNA21 remote control features an intuitive layout for easy operation of your Insignia TV. Below are the general functions of the primary buttons:

- Power Button: Turns the TV on or off.
- Voice Control Button: Activates voice commands for searching content or controlling the TV.
- Navigation Pad (Directional Buttons and Select): Used to move through menus and select items.
- Home Button: Returns to the TV's main home screen.
- Back Button: Returns to the previous screen or menu.
- Menu/Options Button: Accesses additional menu options or settings.
- Volume Up/Down: Adjusts the TV's audio volume.
- Channel Up/Down: Changes TV channels.
- Mute Button: Mutes or unmutes the TV's audio.
- Settings Button: Opens the TV's settings menu.
- Input/Source Button: Changes the TV's input source (e.g., HDMI 1, HDMI 2).
- Dedicated Streaming Service Buttons: Provides quick access to popular streaming applications (e.g., Amazon Prime Video, Netflix).

4. COMPATIBILITY

The Anderic OEM NSRCFNA21 Smart Remote is compatible with the following Insignia TV models:

- NS24DF310NA21
- NS39DF310NA21
- NS50DF710NA21
- NS55DF710NA21

This remote also replaces the following models:

- NSRCFNA19 Rev B Fire
- NSRCFNA19revB
- NSRCFNA21 Fire
- NSRCFNA21 Rev E
- NSRCFNA21-Rev-E

Ensure your TV model is listed above for optimal performance.

5. MAINTENANCE

Proper maintenance can extend the life and functionality of your remote control.

- Battery Replacement: The remote requires two AAA batteries. Replace batteries when the remote's responsiveness decreases or it stops functioning. Ensure correct polarity when inserting new batteries.
- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. Avoid using liquid cleaners or abrasive materials, as these can damage the remote.
- Storage: Store the remote in a dry place, away from extreme temperatures and direct sunlight.

6. TROUBLESHOOTING

If you encounter issues with your Anderic NSRCFNA21 Smart Remote, try the following troubleshooting steps:

• Remote Not Responding:

- Check the batteries. Replace them with fresh AAA batteries, ensuring correct polarity.
- Ensure there are no obstructions between the remote and the TV's sensor.
- Re-attempt the pairing process as described in Section 2.

• Intermittent Functionality:

- This could indicate low battery power. Replace the batteries.
- Ensure you are within the effective range of the TV's sensor.

• Pairing Fails:

- Confirm your TV model is listed in the compatibility section (Section 4).
- Ensure the TV is fully booted up before attempting to hold the Home button.
- Try unplugging the TV for a longer period (e.g., 1-2 minutes) before plugging it back in and reattempting pairing.

If problems persist after attempting these steps, contact customer support for further assistance.

7. SPECIFICATIONS

Brand	Anderic
Model Number	NSRCFNA21 Rev B
Compatible Devices	Insignia Televisions
Power Source	2 AAA batteries (required)

Item Weight	1.76 ounces
Package Dimensions	6.3 x 2.95 x 0.67 inches
Color	Black
Manufacturer	Dan's Electronics Etc., Inc.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact the manufacturer, Anderic (Dan's Electronics Etc., Inc.). Refer to the product packaging or the official Anderic website for specific contact details and warranty terms. You can visit the Anderic Store on Amazon for more information.

Related Documents - NSRCFNA21



Anderic RR682M Remote Control Operating Manual and Code List

Comprehensive operating manual for the Anderic RR682M remote control. Includes setup instructions for Onkyo receivers and other AV components, detailed programming methods (code entry, code search), and an extensive list of remote control codes for various device types like DVD players, TVs, VCRs, and more.



ANDERIC® RRTX001R Remote Control User Manual

User manual for the ANDERIC® RRTX001R Remote Control, detailing battery installation, pairing instructions, product functions, and wall mount bracket installation.



Anderic RRU401.5 Universal Remote Control Operating Manual

Comprehensive guide to programming and using the Anderic RRU401.5 universal remote control, covering setup, features like macros and learning, and extensive code lists for various devices.



 
Anderic RRUR01 Universal Remote Control Programming Manual

This manual provides detailed instructions for programming and operating the Anderic RRUR01 universal remote control. It covers code input, auto search, one-button search methods, device lock, punch-through features, learning functions, backlight adjustments, and includes a comprehensive code list for various brands and device types.



Anderic FAN53T Remote Control Instructions and Code Settings

Comprehensive instructions for setting up and using the Anderic FAN53T remote control, including detailed steps for code configuration and a reference chart for all 16 code combinations.



Anderic FAN9T and FAN28R/UC7067FCRX Installation Instructions

Detailed installation guide for the Anderic FAN9T and FAN28R/UC7067FCRX ceiling fan remote control system, including receiver wiring, remote pairing, and battery installation.