

JINLICTE X20

JINLICTE Camping Fan with LED Lantern

USER MANUAL

Model: X20

Introduction

Thank you for choosing the JINLICTE Camping Fan with LED Lantern. This portable and versatile device is designed to provide powerful airflow and bright illumination for various outdoor and indoor activities, including camping, picnics, fishing, travel, and home use. Featuring a high-capacity rechargeable battery, stepless speed control, and multiple brightness settings, this fan ensures comfort and convenience wherever you go. Please read this manual thoroughly before use to ensure proper operation and maintenance.

Safety Information

- Do not immerse the fan in water or expose it to heavy rain. This product is not waterproof.
- Keep out of reach of small children.
- Do not block the fan grille or insert objects into the fan blades.
- Use only the provided charging cable or a certified USB-C cable with a 5V/2A adapter for charging.
- Avoid exposing the fan to extreme temperatures (hot or cold) or direct sunlight for prolonged periods.
- Do not attempt to disassemble or repair the fan yourself. Contact customer support for assistance.
- Ensure the fan is placed on a stable surface when in use to prevent tipping.

Package Contents

- JINLICTE Camping Fan with LED Lantern (Model: X20)
- USB-C Charging Cable
- User Manual

Product Diagram



Overall view of the JINLICTE Camping Fan with LED Lantern, highlighting its compact and portable design.

- 1. Fan Grille:** Protects the fan blades.
- 2. Fan Blades:** Generate airflow.
- 3. LED Lantern:** Provides illumination with adjustable brightness.
- 4. Control Knob:** Adjusts fan speed (stepless) and powers on/off.
- 5. Light Button:** Controls LED lantern brightness settings.
- 6. USB-C Charging Port:** For recharging the fan's internal battery.
- 7. Hanging Hook:** Integrated hook for suspending the fan.
- 8. Adjustable Stand:** Allows for 270-degree rotation and stable placement.

Setup

Initial Charging

Before first use, fully charge the fan. Connect the provided USB-C charging cable to the fan's USB-C port and plug the other end into a 5V/2A USB power adapter (not included), power bank, laptop, or car charger. The fan supports 2A fast charging and takes approximately 6 hours to fully charge the 10400 mAh battery. The battery indicator will show charging progress and full charge status.



The fan features a 10400mAh large battery capacity, providing extended working time and supporting USB charging.

Operating Instructions

Fan Operation

- Power On/Off and Speed Adjustment:** Rotate the control knob clockwise to turn on the fan. Continue rotating the knob to steplessly adjust the fan speed from low to high. Rotate the knob counter-clockwise until it clicks to turn off the fan.
- Adjustable Airflow:** The fan head can be manually rotated 270 degrees vertically to direct airflow precisely where needed.

LED Lantern Operation

1. **Brightness Control:** Press the dedicated light button to cycle through the three brightness settings: Low, Medium, High. Press again to turn off the light.



The integrated LED lantern offers three brightness levels, suitable for various lighting needs in a tent or outdoor setting.

Versatile Placement

- **Desktop Fan:** Place the fan on any flat, stable surface.
- **Hanging Fan:** Utilize the integrated hook to hang the fan inside a tent, on an umbrella, hammock, or RV ceiling to save space and provide overhead cooling/lighting.



Hanging Hook Design



The fan features a convenient hanging hook design, allowing it to be easily suspended from tent ceilings or other structures.



The fan's head can be adjusted 270 degrees, allowing for flexible airflow direction.

Maintenance

- Cleaning:** Ensure the fan is turned off and unplugged before cleaning. Use a soft, dry cloth to wipe the exterior of the fan. For the fan grille, use a soft brush or cotton swab to remove dust. Do not use abrasive cleaners or allow water to enter the fan's internal components.
- Storage:** When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to charge the battery every 3-6 months to maintain its health.

Troubleshooting

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan fully.

Problem	Possible Cause	Solution
Fan airflow is weak.	Low battery or fan grille is obstructed.	Recharge the fan. Clean any dust or debris from the fan grille.
LED lantern does not light up.	Battery is depleted or light button not pressed correctly.	Charge the fan. Ensure the light button is pressed firmly.
Fan makes unusual noise.	Obstruction in fan blades or internal issue.	Turn off the fan and check for any foreign objects in the blades. If the issue persists, contact customer support.


Specifications

- **Brand:** JINLICTE
- **Model:** X20
- **Battery Capacity:** 10400 mAh
- **Working Time:** 8-36 hours (depending on speed/light settings)
- **Charging Time:** Approx. 6 hours (with 5V/2A input)
- **Noise Level:** <27 dB
- **Fan Speed:** Up to 4000 RPM (stepless adjustment)
- **LED Brightness Settings:** 3 levels
- **Rotation Angle:** 270 degrees
- **Dimensions:** 4.7"D x 8.3"W x 9.1"H
- **Item Weight:** 0.054 ounces (approx. 1.54 grams)
- **Power Source:** Battery Powered (USB-C rechargeable)
- **Voltage:** 5 Volts
- **Material:** ABS Plastic

Strong & Stable Airflow

Work efficiently without interrupting your rest or work

30db Low Noise

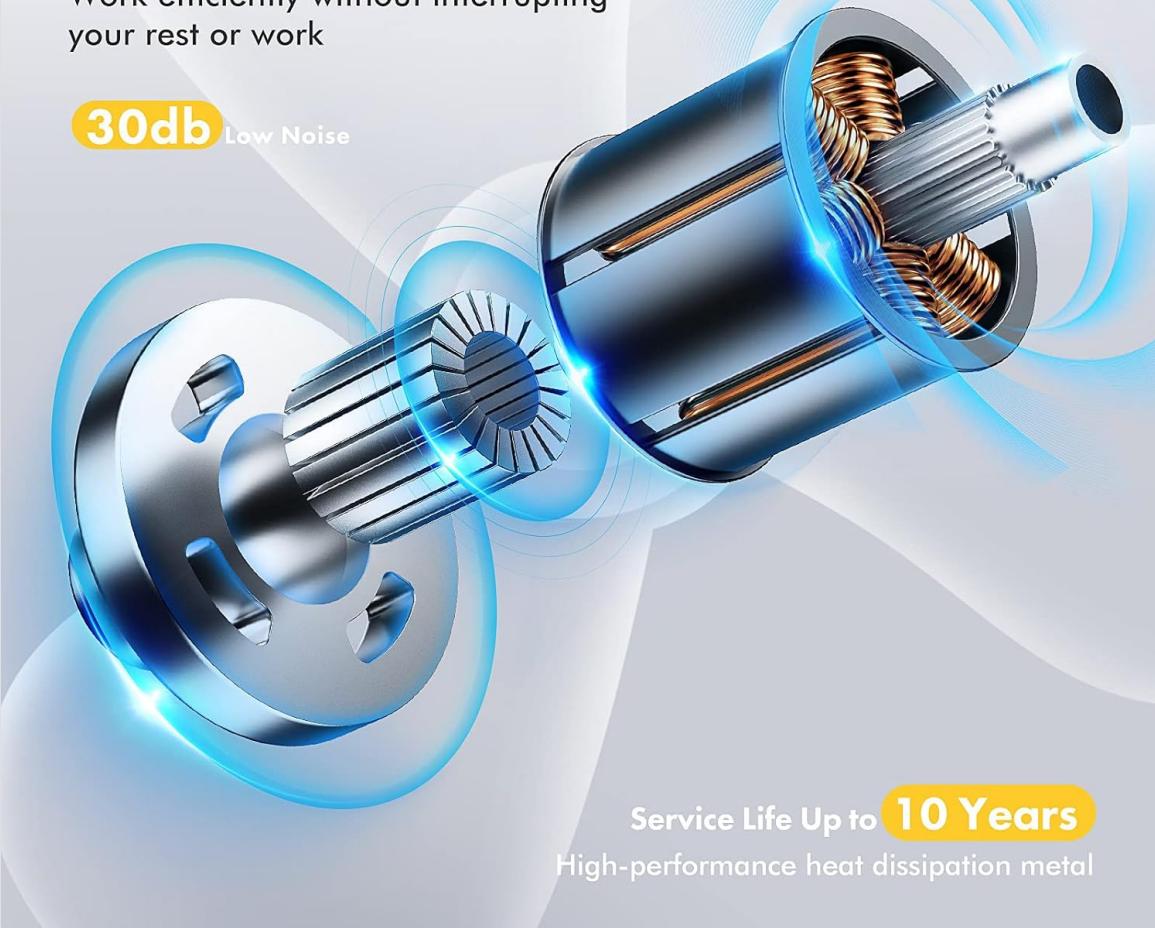

The fan utilizes a brushless motor for strong, stable airflow with low noise operation (below 30dB).

Warranty and Support

JINLICTE provides a two-year after-sales service for this product. If you encounter any questions or issues with your camping fan, please do not hesitate to contact our customer support team. We are available online 24 hours a day to assist you.



JINLICTE - Keep Cool, Enjoy Life!