

[manuals.plus](#) /

› [bamix](#) /

› **bamix M160 ONE Immersion Blender User Manual**

bamix M160 ONE

bamix M160 ONE Immersion Blender User Manual

Model: M160 ONE (1021.002)

1. INTRODUCTION

Thank you for choosing the bamix M160 ONE Immersion Blender. This versatile kitchen tool is designed for mixing, pureeing, and chopping a wide variety of ingredients with ease. Manufactured in Switzerland since 1954, bamix products are known for their quality and durability. Please read this manual carefully before first use to ensure safe and optimal operation.





Image 1.1: The bamix M160 ONE Immersion Blender with its multifunction blade.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or other liquids. Only the shaft and attachments are submersible.
- Always unplug the appliance from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Keep hands, hair, and clothing, as well as spatulas and other utensils, away from moving blades during operation to prevent injury.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Use only attachments and accessories recommended by the manufacturer.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Exercise extreme caution when handling sharp blades.

3. PACKAGE CONTENTS

Your bamix M160 ONE package should include the following items:

- 1 x bamix M160 ONE Immersion Blender (Red)
- 1 x Multifunction Blade (Stainless Steel)



4. SETUP

4.1 Unpacking

Carefully remove all components from the packaging. Retain the packaging for future storage or transport if needed. Before first use, clean all parts that will come into contact with food according to the "Cleaning and Maintenance" section.

4.2 Attaching the Blade

1. Ensure the immersion blender is unplugged from the power outlet.
2. Align the multifunction blade with the drive shaft at the bottom of the blender.
3. Push the blade firmly onto the shaft until it clicks into place. Ensure it is securely fastened before use.



Image 4.1: The multifunction blade, designed for various tasks.

5. OPERATING INSTRUCTIONS

5.1 Power and Speed Control

The bamix M160 ONE features a 160W motor with two speed settings for flexible control:

- **Speed I (10,000 RPM):** Ideal for lighter tasks such as whipping cream, mixing thin batters, or aerating liquids.
- **Speed II (16,000 RPM):** Suitable for heavier tasks like pureeing soups, chopping vegetables, or blending thicker mixtures.

To operate, immerse the blade into the ingredients, then press and hold the desired speed button. Release the button to stop the appliance.

5.2 Recommended Uses

The multifunction blade is designed for a wide range of applications:

- **Mixing:** Prepare sauces, dressings, and batters.
- **Pureeing:** Create smooth soups, baby food, and fruit purees directly in the pot or bowl.
- **Chopping:** Chop raw and cooked vegetables, fruits, and even ice cubes.



Image 5.1: The bamix blender can be used to create smooth soups.



Image 5.2: Prepare refreshing smoothies with ease.



Image 5.3: The bamix blender in action, preparing ingredients.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your bamix immersion blender.

6.1 Cleaning

- Always unplug the appliance before cleaning.
- **Motor Unit:** Wipe the motor unit with a damp cloth. *Do not immerse the motor unit in water or any other liquid.*
- **Shaft and Blades:** After use, rinse the shaft and blade under running water immediately. For thorough cleaning, detach the blade and wash it with warm soapy water. The shaft can also be cleaned by briefly running the blender in a container of warm soapy water.
- Dry all parts thoroughly before storing.

6.2 Storage

Store the bamix immersion blender and its accessories in a clean, dry place, away from direct sunlight and extreme temperatures. Ensure the blade is properly stored to prevent accidental injury.

7. TROUBLESHOOTING

If you encounter issues with your bamix M160 ONE, refer to the table below for common problems and solutions:

| Problem | Possible Cause | Solution |
|--------------------------------------|--|--|
| Appliance does not turn on. | Not plugged in; power outlet malfunction; damaged cord/plug. | Ensure appliance is securely plugged into a working outlet. Check for visible damage to cord/plug. If damaged, do not use and contact support. |
| Blade does not spin or spins slowly. | Blade not properly attached; food blockage; motor overload. | Unplug and re-attach blade securely. Remove any food debris obstructing the blade. Reduce the amount of ingredients or add more liquid. |
| Unusual noise or vibration. | Blade not properly attached; foreign object; worn parts. | Unplug and check blade attachment. Ensure no foreign objects are present. If problem persists, contact customer support. |

If the problem persists after trying these solutions, please contact bamix customer support.

8. TECHNICAL SPECIFICATIONS

| | |
|-------------------------|--|
| Brand | bamix |
| Model Name | M160 ONE |
| Model Number | 1021.002 |
| Power | 160 Watts |
| Voltage | 220 Volts |
| Number of Speeds | 2 (10,000 RPM / 16,000 RPM) |
| Material | Stainless Steel (blade), Durable Plastic (housing) |
| Color | Red |

| | |
|------------------------|-------------------------------|
| Dimensions (L x W x H) | 41 x 17.5 x 10.5 cm (approx.) |
| Weight | 1.18 Kilograms (approx.) |
| Origin | Made in Switzerland |

9. WARRANTY AND SUPPORT

9.1 Warranty Information

bamix offers a **lifetime warranty** on the high-quality AC motor of your immersion blender. This warranty covers defects in materials and workmanship under normal household use. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, warranty claims, or general inquiries, please visit the official bamix website or contact their authorized service centers. Refer to the product packaging or the official bamix website for the most up-to-date contact information.

Note: Availability of spare parts information is not provided in the product specifications.

© 2025 bamix. All rights reserved. Product specifications are subject to change without notice.