

BLACK+DECKER BXAR0001GB

BLACK+DECKER BXAR0001GB Electric Heated Clothes Dryer User Manual

Model: BXAR0001GB

1. INTRODUCTION

Thank you for choosing the BLACK+DECKER BXAR0001GB Electric Heated Clothes Dryer. This manual provides essential information for the safe and effective assembly, operation, and maintenance of your appliance. Please read these instructions thoroughly before first use and retain them for future reference.

2. SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

2.1 General Safety

- Read all instructions before using the appliance.
- This appliance is intended for indoor household use only. Do not use outdoors or for commercial purposes.
- Do not allow children to play with or operate the appliance. Close supervision is necessary when the appliance is used near children.
- Ensure the appliance is placed on a stable, level surface.
- Do not cover the appliance with clothes or other materials while in operation, as this may cause overheating.
- Do not use the appliance if it has been dropped, damaged, or is not working correctly.

2.2 Electrical Safety

- Before plugging in, ensure the voltage indicated on the appliance corresponds to the mains voltage in your home.
- Always plug the appliance into a grounded electrical outlet.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Do not operate the appliance with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not pull the cord to disconnect from the outlet; grasp the plug and pull.

3. PRODUCT OVERVIEW AND PACKAGE CONTENTS

The BLACK+DECKER BXAR0001GB is an electric heated clothes dryer designed to efficiently dry laundry indoors. It features 18 heated bars and two heated wings, providing 11.5 meters of drying space and a 10 kg drying capacity.

3.1 Package Contents

- BLACK+DECKER BXAR0001GB Electric Heated Clothes Dryer (main unit)
- Power Cord with Plug
- Instruction Manual

3.2 Product Components

The dryer consists of a main frame with multiple heated bars, two foldable heated wings, and an integrated power switch.




Image: The BLACK+DECKER BXAR0001GB Electric Heated Clothes Dryer shown in its fully unfolded position, ready for use. It features a central drying rack and two side wings, all with heated bars, and a power cord extending from one side.

4. ASSEMBLY AND SETUP

The BLACK+DECKER BXAR0001GB Electric Heated Clothes Dryer comes pre-assembled and requires minimal setup.

1. **Unfold the Dryer:** Carefully unfold the main frame of the dryer until it forms a stable A-frame structure.

2. **Extend the Wings:** Gently extend the two side wings outwards until they lock into position. Ensure all support legs are fully extended and stable.
3. **Positioning:** Place the dryer on a flat, stable, and heat-resistant surface, away from flammable materials and out of reach of children and pets. Ensure there is adequate ventilation around the dryer.

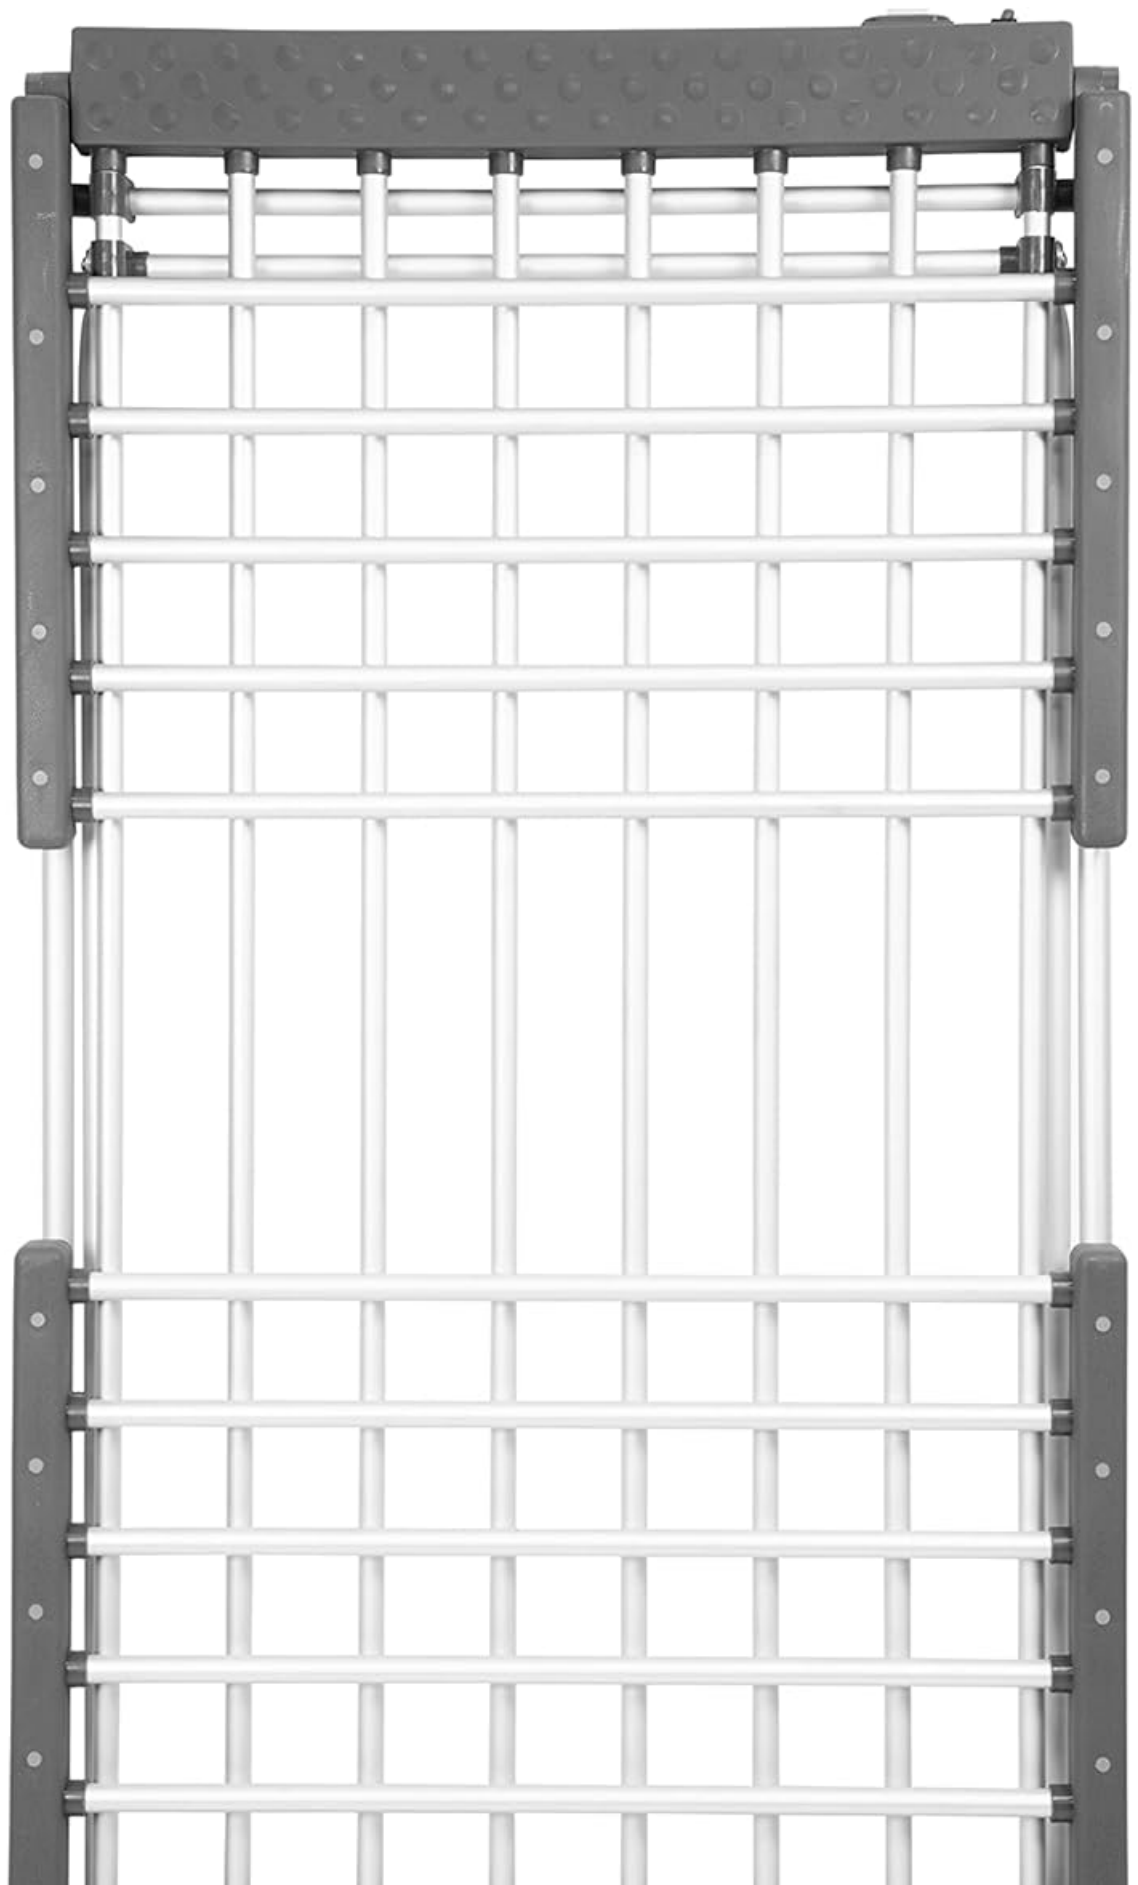

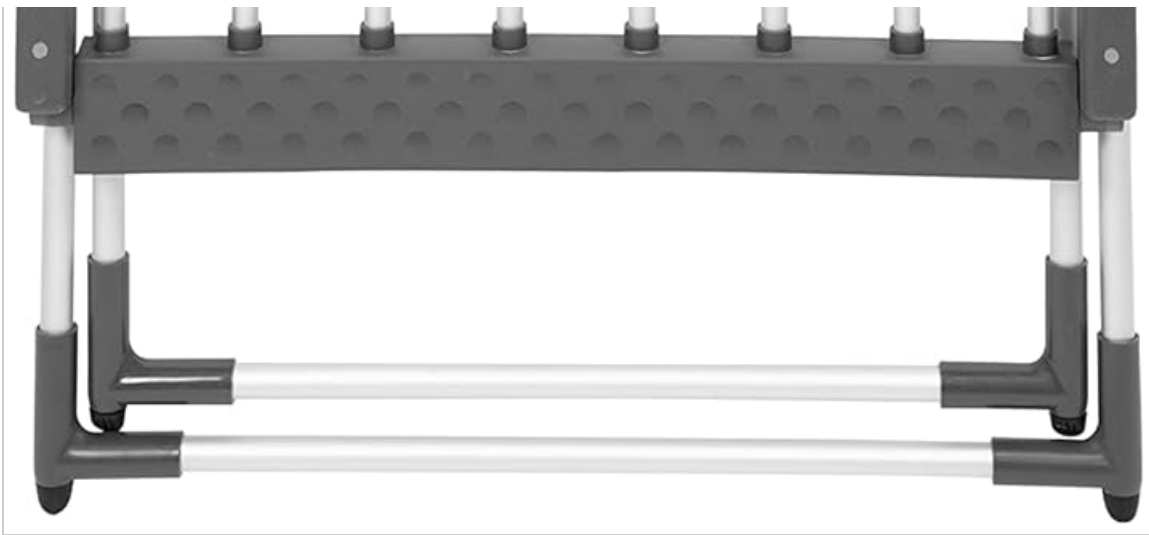


Image: A front view of the BLACK+DECKER BXAR0001GB Electric Heated Clothes Dryer, fully unfolded and ready for laundry. This image highlights the structure and the multiple heated bars.

5. OPERATING INSTRUCTIONS

Follow these steps to operate your electric heated clothes dryer safely and effectively.

1. **Plug In:** Insert the power plug into a suitable grounded electrical outlet.
2. **Power On:** Locate the power switch, typically on one of the side frames, and switch it to the 'ON' position. An indicator light may illuminate to show the dryer is active.



Image: A close-up view of a hand pressing the red illuminated power switch located on the frame of the BLACK+DECKER heated clothes dryer, indicating activation.

3. **Load Laundry:** Distribute your laundry evenly across the heated bars and wings. Avoid overcrowding to ensure optimal air circulation and drying efficiency. The dryer can hold up to 10 kg of laundry.



Image: A woman is shown hanging various items of clothing, including shirts and towels, onto the heated bars of the BLACK+DECKER BXAR0001GB Electric Heated Clothes Dryer in a laundry room setting.

4. **Drying Time:** Drying times will vary depending on the fabric type, thickness, and moisture content of the clothes, as well as ambient room temperature and humidity. For best results, turn clothes periodically to expose all sides to the heated bars.
5. **Power Off:** Once laundry is dry, switch the power button to the 'OFF' position and unplug the appliance from the wall socket.

6. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and efficient operation of your heated clothes dryer.

1. **Cleaning:** Always unplug the dryer before cleaning. Wipe the heated bars and frame with a soft, damp cloth. Do not use abrasive cleaners, solvents, or immerse the appliance in water.
2. **Storage:** When not in use, the dryer can be folded flat for convenient storage. Ensure the appliance is cool and dry before folding.



Image: The BLACK+DECKER BXAR0001GB Electric Heated Clothes Dryer is shown in its folded, compact state, demonstrating its space-saving design for storage.



Image: The BLACK+DECKER BXAR0001GB Electric Heated Clothes Dryer is shown folded flat and stored upright against a wall, illustrating its compact storage capability.

7. TROUBLESHOOTING

If you encounter issues with your heated clothes dryer, refer to the following common problems and solutions:

- **Dryer is not heating:**
 - Check if the power cord is securely plugged into a working electrical outlet.
 - Ensure the power switch on the dryer is in the 'ON' position.
 - Verify that the electrical outlet itself is functioning (test with another appliance).
- **Clothes are not drying efficiently:**
 - Avoid overloading the dryer. Distribute laundry evenly to allow air circulation.
 - Ensure the room is adequately ventilated.
 - Thicker fabrics or heavily saturated items will take longer to dry. Consider pre-spinning clothes in a washing machine to remove excess water.
 - Turn clothes periodically to expose all sides to the heated bars.

- **Appliance feels unstable:**

- Ensure all legs and wings are fully extended and locked into their stable positions.
- Place the dryer on a flat, level surface.

If problems persist, please contact customer support.

8. SPECIFICATIONS

Brand	BLACK+DECKER
Model Number	BXAR0001GB (also 63159)
Dimensions (L x W x H) Unfolded	74 x 50 x 94 cm
Weight	3.5 Kilograms
Drying Space	11.5 meters
Drying Capacity	10 kg
Material	Metal, Plastic
Color	Grey
Type of Fixing	Floor Mount

9. WARRANTY AND SUPPORT

Your BLACK+DECKER BXAR0001GB Electric Heated Clothes Dryer is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, spare parts, or warranty claims, please contact BLACK+DECKER customer service through their official website or the contact information provided in your product packaging.