

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [dynabook](#) /

› [dynabook 16 GB DDR4 Memory Expansion Module User Manual](#)

dynabook PS0098NA1MAG

dynabook 16 GB DDR4 Memory Expansion Module User Manual

Model: PS0098NA1MAG

INTRODUCTION

This user manual provides comprehensive instructions for the installation, operation, and maintenance of your dynabook 16 GB DDR4 Memory Expansion Module. Please read this manual thoroughly before attempting any installation or operation to ensure proper functionality and to prevent damage to your system or the module.

PRODUCT OVERVIEW



Figure 1: dynabook 16 GB DDR4 Memory Module. This image displays a green printed circuit board (PCB) with multiple black memory chips and a white label containing product information. Gold-plated contacts are visible along the bottom edge, designed for insertion into a compatible memory slot.

The dynabook 16 GB DDR4 Memory Expansion Module (Model: PS0098NA1MAG) is designed to enhance the performance of compatible computer systems by increasing the available Random Access Memory (RAM). This module utilizes DDR4 SDRAM technology, offering improved speed and efficiency over previous generations.

SETUP AND INSTALLATION

Before beginning the installation process, ensure your computer is powered off and disconnected from all power sources. It is recommended to wear an anti-static wrist strap to prevent electrostatic discharge (ESD) damage to components.

Required Tools:

- Small Phillips head screwdriver (if required to open computer case)
- Anti-static wrist strap (recommended)

Installation Steps:

1. **Power Off:** Shut down your computer completely and unplug the power cord from the wall outlet.
2. **Open Case:** Carefully open your computer's case. Refer to your computer's specific manual for instructions on how to access the internal components.
3. **Locate Memory Slots:** Identify the existing memory modules and available memory slots on your motherboard.
4. **Insert Module:** Align the notch on the new DDR4 memory module with the key in the memory slot. Gently push the module straight down into the slot until the clips on both sides snap into place, securing the module.
5. **Close Case:** Once the module is securely installed, close your computer's case.
6. **Power On:** Reconnect the power cord and turn on your computer. The system should automatically detect the new memory.

Note: If your computer does not boot or recognize the new memory, ensure the module is seated correctly and try reseating it. Consult your computer's motherboard manual for specific memory compatibility and slot configurations.

OPERATING CONSIDERATIONS

Once installed, the dynabook 16 GB DDR4 Memory Expansion Module operates automatically with your computer's operating system. No specific software installation is required for the memory module itself. The increased RAM will allow your system to handle more applications simultaneously and improve overall performance, especially for memory-intensive tasks.

Verifying Installation:

To verify that the new memory has been recognized by your system:

- **Windows:** Right-click on "This PC" or "My Computer," select "Properties." The installed RAM amount will be displayed.
- **macOS:** Click the Apple menu, select "About This Mac." The memory information will be listed.
- **Linux:** Open a terminal and type `free -h` or `cat /proc/meminfo`.

MAINTENANCE

Memory modules generally require minimal maintenance. However, proper care can extend their lifespan and ensure stable system operation.

- **Dust Prevention:** Regularly clean the interior of your computer case to prevent dust buildup, which can lead to overheating and component failure. Use compressed air to gently remove dust from around memory modules and slots.
- **Temperature Control:** Ensure adequate airflow within your computer case to maintain optimal operating temperatures for all components, including RAM.
- **Physical Handling:** When handling memory modules, always hold them by the edges to avoid touching the gold contacts or the chips, as static electricity or oils from your skin can cause damage.

TROUBLESHOOTING

If you encounter issues after installing the memory module, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Computer does not boot after installation.	Memory module not seated correctly.	Ensure the module is fully inserted into the slot and the clips are locked. Try reseating the module.

Problem	Possible Cause	Solution
System recognizes less RAM than installed.	Incorrect module placement or faulty slot/module.	Verify module is in the correct slot according to motherboard manual. Test modules individually if multiple are installed.
Frequent system crashes or "Blue Screen of Death" (BSOD).	Memory instability or faulty module.	Run a memory diagnostic tool (e.g., Windows Memory Diagnostic, MemTest86). Ensure BIOS/UEFI is updated.

If issues persist after attempting these steps, contact dynabook customer support or a qualified technician.

SPECIFICATIONS

Feature	Detail
Brand	dynabook
Manufacturer	DYNABOOK OPTIONS
Model Number	PS0098NA1MAG
RAM Size	16 GB
Computer Memory Type	DDR4 SDRAM
Product Dimensions	36.58 x 12.7 x 27.94 cm
Item Weight	80 g

WARRANTY AND SUPPORT

For information regarding the warranty terms and conditions for your dynabook 16 GB DDR4 Memory Expansion Module, please refer to the warranty card included with your purchase or visit the official dynabook support website. Keep your proof of purchase for warranty claims.

Customer Support:

If you require technical assistance or have questions not covered in this manual, please contact dynabook customer support through their official channels. Support contact information can typically be found on the dynabook website or on the product packaging.

Disclaimer: dynabook is not responsible for any damage to your computer system or the memory module caused by improper installation or misuse. Always follow safety precautions and consult a professional if unsure about any installation steps.

 <p>Manual del usuario dynabook TECRA A40-E / A40-G</p>	<p>Manual del Usuario Dynabook TECRA A40-E / A40-G Guía completa del usuario para el portátil Dynabook TECRA A40-E y A40-G, cubriendo configuración, uso, solución de problemas y especificaciones.</p>
	<p>Dynabook Satellite Pro C40-G Maintenance Manual: Hardware Overview and Troubleshooting Comprehensive maintenance manual for the Dynabook Satellite Pro C40-G and Satellite C40-G notebooks. Covers hardware overview, system features, troubleshooting steps, and replacement procedures for all components.</p>
	<p>Dynabook USB-C Dock [PA5356] Firmware Update Guide v1.0.0.1 Instructions for updating the firmware of the Dynabook USB-C Dock [PA5356] to version 1.0.0.1 to resolve external video connection issues. Includes applicable models, symptoms, solutions, and important notes.</p>
	<p>Dynabook Toshiba Satellite Pro C50-H User Manual Comprehensive user manual for the Dynabook Toshiba Satellite Pro C50-H laptop, detailing safety precautions, setup procedures, hardware components, functional key usage, and essential regulatory information for optimal and safe operation.</p>
	<p>dynabook USB-C Dock PA5356 Firmware Update Tool User Guide User guide for the dynabook USB-C Dock (PA5356) Firmware Update Tool, detailing the process to update the MST Hub firmware to version v5.07.000, including setup, launch, update, and troubleshooting steps.</p>
	<p>Dynabook Portege X30L-J Series User's Manual Comprehensive user's manual for the Dynabook Portege X30L-J Series, covering setup, operation, troubleshooting, and regulatory information.</p>

