

Fujifilm Instax Mini 7+

Fujifilm Instax Mini 7+ Camera User Manual

MODEL: INSTAX MINI 7+

Brand: Fujifilm

INTRODUCTION

The Fujifilm Instax Mini 7+ camera is a fun and easy-to-use instant film camera that lets you capture and print memories instantly. With its sleek and stylish design, it's sure to turn heads and spark conversation wherever you go. The camera produces credit-card sized prints in seconds, making it perfect for capturing those special moments and sharing them with friends and family. Its automatic exposure control and built-in flash ensure great shots every time, even in low light conditions. And with a handy selfie mirror, taking self-portraits has never been easier. The Fujifilm Instax Mini 7+ camera is also lightweight and portable, making it perfect for on-the-go photography. And with Fujifilm Instax Mini film, which is widely available and affordable, you can keep capturing memories without breaking the bank. The camera also features a brightness adjustment dial, allowing for greater creative control over your shots. And its easy-to-operate design makes it perfect for beginners and experts alike.



Figure 1: Front view of the Fujifilm Instax Mini 7+ camera in light blue.

SETUP

1. Installing Batteries

The Instax Mini 7+ camera requires four AA batteries for operation. To install them, open the battery compartment located on the side of the camera. Insert the batteries according to the polarity indicators (+/-) inside the compartment. Close the cover securely.



Figure 2: Rear view of the camera showing the film compartment. The battery compartment is located on the side, typically near the grip.

2. Loading Film Pack

To load the film, open the film compartment door on the back of the camera. Align the yellow mark on the film pack with the yellow mark inside the camera's film compartment. Gently push the film pack in until it clicks into place. Close the compartment door. The camera will automatically eject the dark protective sheet from the film pack. Do not open the film compartment door until all exposures are used, as this will expose the film and render it unusable.

OPERATING THE CAMERA

1. Turning On/Off

To turn on the camera, simply pull out the lens barrel. The power lamp will light up. To turn off the camera, push the lens barrel back into the camera body.



Figure 3: Camera with lens extended, ready for use.

2. Adjusting Exposure Settings

The Instax Mini 7+ features a brightness adjustment dial around the lens. Rotate this dial to select the appropriate lighting mode for your environment: Indoor/Dark, Cloudy/Shady, Fine, or Clear. The camera will indicate the recommended setting with a lit LED next to the corresponding icon.



Figure 4: Close-up of the exposure adjustment dial.

3. Taking a Picture

Look through the viewfinder to compose your shot. Press the shutter button located on the front of the camera. The built-in flash will fire automatically, and the instant print will eject from the top slot of the camera. Allow the print to develop for a few minutes; do not shake or bend the print during development.



Figure 5: The camera in use, with an instant print emerging.

MAINTENANCE

To ensure the longevity of your Fujifilm Instax Mini 7+ camera, keep it clean and free from dust. Use a soft, dry cloth to wipe the camera body and lens. Avoid using abrasive cleaners or solvents. Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, remove the batteries to prevent leakage.

TROUBLESHOOTING

If your camera is not functioning as expected, please refer to the following common issues:

- **Camera does not turn on:** Check if the batteries are inserted correctly and are not depleted. Replace with fresh AA batteries if necessary.
- **Film does not eject:** Ensure the film pack is correctly loaded and that there are still exposures remaining. The counter on the back of the camera indicates the number of remaining shots.
- **Pictures are too dark/light:** Adjust the brightness dial on the lens to match the ambient lighting conditions.
- **Flash does not fire:** The flash fires automatically. Ensure the camera is powered on and the batteries have sufficient charge.

For further assistance, please contact Fujifilm customer support.

SPECIFICATIONS

Feature	Detail
Brand	Fujifilm
Model Name	Instax Mini 7+
Special Feature	Auto Exposure
Film Format Type	Instant
Item Weight	458 Grams (1.01 pounds)
Included Components	Camera Body & Accessories
Compatible Devices	camera
Exposure Control Type	Manual
Package Dimensions	6.69 x 5.51 x 3.5 inches

WHAT'S IN THE BOX

- Camera Body
- Accessories (as included in original retail package)

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were available for embedding based on the provided data. Please refer to the text instructions and images for guidance.

© 2024 Fujifilm. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question