

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [beFree Sound](#) /
- › [beFree Sound Portable Rechargeable 14 Inch LED TV User Manual](#)

beFree Sound 14 Inch LED TV

beFree Sound Portable Rechargeable 14 Inch LED TV User Manual

Model: 14 Inch LED TV

Brand: beFree Sound

INTRODUCTION

Thank you for purchasing the beFree Sound Portable Rechargeable 14 Inch LED TV. This manual provides essential information for the safe and efficient operation of your new television. Please read this manual thoroughly before use and retain it for future reference.

This portable LED TV offers high-quality entertainment on the go, featuring HDMI, SD Card, USB, VGA, AV In/Out, and a built-in digital tuner. Its compact design and rechargeable battery make it ideal for various uses.

SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not block ventilation openings. Ensure adequate space around the unit for proper airflow.
- Use only the power adapters provided with the unit (AC adapter and car adapter).
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not open the casing. There are no user-serviceable parts inside.
- Keep the unit away from direct sunlight, heat sources, and extreme temperatures.

PACKAGE CONTENTS

Verify that all items are present in the package:

- beFree Sound Portable 14 Inch LED TV

- Remote Control
- AC Power Adapter
- Car Power Adapter
- A/V Cables
- Detachable Telescope Antenna





Image: Package contents including the portable TV, remote control, AC adapter, car adapter, A/V cables, and detachable antenna.

PRODUCT OVERVIEW

Familiarize yourself with the various parts and connections of your portable TV.

Front View



Image: Front view of the beFree Sound 14 Inch LED TV, showing the screen, integrated stand, and the beFree Sound logo.

Side and Rear Connections

The TV features multiple input and output ports for versatile connectivity.



Image: Side view detailing the VGA, AV In/Out, HDMI (HD-IN), USB, DC-12V power input, charge indicator, and power switch.



Image: Additional side view showing the antenna input and other AV In/Out ports.

Bottom Controls

The physical control buttons are located on the bottom edge of the TV.



Image: Bottom view displaying the SD Card slot and control buttons: MENU, Volume Down, Volume Up, Channel Down, Channel Up, Source, and Enter.

SETUP

1. Charging the TV

Before first use, fully charge the TV's built-in lithium-ion battery. Connect the AC power adapter to the DC-12V input port on the side of the TV and plug it into a wall outlet. The charge indicator light will illuminate during charging and turn off when fully charged. You can also use the car power adapter for charging on the go.

2. Connecting the Antenna

For receiving over-the-air digital TV broadcasts, connect the included detachable telescope antenna to the SA (Antenna) port on the side of the TV. Extend the antenna fully for optimal signal reception.

3. Powering On/Off

Locate the Off/On switch on the side of the TV. Slide it to the "On" position to power on the unit. To power off, slide the switch to the "Off" position.

4. Initial Setup and Channel Scan

Upon first power-on, the TV may prompt you to perform an initial setup, including language selection and channel scanning. Follow the on-screen instructions. To manually scan for channels:

1. Press the **MENU** button on the TV or remote.
2. Navigate to the "Channel" or "Setup" menu.
3. Select "Auto Scan" or "Auto Tuning" and confirm. The TV will search for available digital channels.
4. Once the scan is complete, the TV will save the found channels.

5. Connecting External Devices

The TV supports various external devices:

- **HDMI (HD-IN):** Connect Blu-ray players, game consoles, or other HDMI-enabled devices for high-definition video and audio.
- **AV In/Out:** Use the included A/V cables to connect older devices like DVD players or VCRs. These ports can also be used for audio/video output.
- **VGA:** Connect a computer or laptop to use the TV as a monitor.
- **USB:** Insert a USB flash drive for media playback (photos, music, videos).
- **SD/MMC Card:** Insert an SD or MMC memory card for media playback.

OPERATING INSTRUCTIONS

Using the Remote Control

The included remote control provides full functionality for your TV. Ensure batteries are inserted correctly.



Image: The remote control for the beFree Sound Portable TV, detailing its button layout.

- **Power Button:** Turns the TV on or off (standby mode).
- **VOL+/-:** Adjusts the volume level.
- **CH+/-:** Changes the channel.
- **INPUT/SOURCE:** Selects the input source (TV, HDMI, AV, VGA, USB, SD).
- **MENU:** Accesses the main menu for settings adjustments.
- **Navigation Buttons (Arrows & ENTER):** Navigate through menus and confirm selections.
- **Number Pad:** Directly enter channel numbers.
- **Playback Controls:** (Play, Pause, Stop, Fast Forward, Rewind) for USB/SD media.

Selecting Input Source

To switch between different connected devices or TV mode:

1. Press the **INPUT** or **SOURCE** button on the remote or the TV's bottom panel.
2. Use the **CH+/-** or arrow buttons to highlight the desired input (e.g., DTV, HDMI, AV, VGA, USB, SD).
3. Press **ENTER** to confirm your selection.

Media Playback (USB/SD)

To play media files from a USB drive or SD card:

1. Insert your USB flash drive into the USB port or SD/MMC card into the SD Card slot.
2. Select "USB" or "SD" as the input source using the **SOURCE** button.
3. The TV will display a media browser. Navigate through your files (photos, music, videos) using the arrow buttons

and press **ENTER** to play.

4. Use the playback control buttons on the remote (Play, Pause, Stop, etc.) to manage media.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the TV screen and casing. For stubborn marks, slightly dampen the cloth with water. Do not use abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing the TV for an extended period, charge the battery to about 50% and recharge every few months.
- **Storage:** Store the TV in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery drained; Power adapter not connected; Power switch off.	Charge the TV; Ensure power adapter is securely connected; Slide power switch to "On".
No signal / Poor picture (TV mode)	Antenna not connected or positioned correctly; No channels scanned; Weak signal.	Connect and extend antenna; Perform auto channel scan; Adjust antenna position for better reception.
No picture (External device)	Incorrect input source selected; Device not powered on or connected properly.	Select correct input source (HDMI, AV, VGA); Ensure external device is on and cables are secure.
No sound	Volume too low or muted; Audio cables not connected properly.	Increase volume; Check mute status; Ensure audio cables are securely connected.
Remote control not working	Batteries drained or inserted incorrectly; Obstruction between remote and TV.	Replace batteries; Check battery polarity; Remove any obstructions.

SPECIFICATIONS

Feature	Detail
Panel	14" LED Widescreen
Resolution	1366 x 768 (Native), 720p supported
Aspect Ratio	16:9
Peak Brightness	350cd/m2
Contrast Ratio	300:1
Item Weight	2.2 pounds
Product Dimensions	13.5 x 9 x 1.25 inches
Batteries	1 Lithium Ion battery (included)
Color	Gray

Feature	Detail
Connectivity Technology	HDMI, USB, SD/MMC, VGA, AV In/Out, Antenna
Speaker Type	Built-In
Voltage	5 Volts (DC-12V input)
Refresh Rate	60Hz

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact beFree Sound customer service directly. Keep your purchase receipt as proof of purchase.

For the most up-to-date support information, please visit the official beFree Sound website or contact their customer service department. Contact details are typically found on the product packaging or their official website.

