



Manuals.plus /

› Hisense /

› Hisense BSA66334PX Pyrolytic Steam Oven User Manual

## Hisense BSA66334PX

# Hisense BSA66334PX Pyrolytic Steam Oven User Manual

Model: BSA66334PX

---

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Hisense BSA66334PX Pyrolytic Steam Oven. Please read these instructions carefully before using the appliance and retain them for future reference.



Figure 1: Front view of the Hisense BSA66334PX Pyrolytic Steam Oven, showcasing its sleek design and control panel.

## IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the oven.
- Ensure the oven is properly installed and grounded by a qualified technician.
- Do not touch hot surfaces. Use oven mitts or pot holders.
- Never use the oven for heating the room.
- Supervise children closely when the oven is in use.
- Do not store flammable materials in or near the oven.
- Disconnect power before servicing.

## SETUP AND INSTALLATION

The Hisense BSA66334PX oven is designed for built-in installation. Proper installation is crucial for safety and optimal performance.

## Unpacking

Carefully remove all packaging materials. Inspect the oven for any damage. Report any damage to your retailer immediately.

## Placement and Dimensions

Ensure the installation cavity meets the required dimensions. The oven dimensions are 56.4 cm (L) x 59.5 cm (W) x 59.5 cm (H). Allow adequate ventilation space around the appliance.



Figure 2: Dimensional diagram of the oven, indicating its 77-liter capacity, Even Bake technology, simultaneous cooking capability, and Steam Add technology.

## Electrical Connection

The oven requires a 220V electrical supply with a power rating of 3500 Watts. The connection must be performed by a qualified electrician in accordance with local wiring regulations.

## OPERATING INSTRUCTIONS

Your Hisense BSA66334PX oven offers various cooking functions for versatile meal preparation.

## Control Panel Overview

The oven features an intuitive control panel with a central knob and touch controls for selecting functions, temperature, and time. Refer to the detailed diagram in your printed manual for specific button layouts.

## Cooking Functions

- **Convection Baking:** Utilizes a fan for even heat distribution, ideal for roasting and baking multiple dishes simultaneously.
- **Pyrolytic Steam Program:** Combines pyrolytic cleaning with steam for enhanced cooking results and easier cleaning.
- **Air Fry Function:** An intensive hot air cooking method that requires no oil, producing crispy, golden results.
- **Pizza Mode (300°C):** Reaches up to 300°C for a crispy finish. Features rapid preheating to 200°C in 5 minutes.
- **Even Bake:** Inspired by traditional wood-fired ovens, ensuring uniform cooking across all 77 liters of capacity.
- **Automatic Cooking:** Pre-set programs for various dishes.
- **Timer and Programmable Functions:** Set cooking duration and delay start times.

## Preheating

For most cooking functions, preheating the oven to the desired temperature is recommended. The Pizza Mode offers a rapid preheat feature.

## Using the Steam Function

Fill the water reservoir (if applicable, refer to your specific model's design) before selecting a steam cooking program. Steam cooking is ideal for retaining moisture and nutrients in food.

## CARE AND MAINTENANCE

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

### Pyrolytic Cleaning

The pyrolytic cleaning function heats the oven to a very high temperature, turning food residues into ash. Once the cycle is complete and the oven has cooled, simply wipe away the ash with a damp cloth.

### Aqua Clean

The Aqua Clean function uses steam to loosen dirt and grease, making manual cleaning easier. Pour water into the oven cavity and select the Aqua Clean program. After the cycle, wipe the interior clean.

### Exterior Cleaning

Clean the exterior surfaces with a soft cloth and mild detergent. Avoid abrasive cleaners or scouring pads that can damage the stainless steel and glass finish.

### Removable Door

The quadruple glass door with a removable heat reflector can be disassembled for thorough cleaning. Refer to the detailed instructions in your full manual for safe removal and reassembly.

## TROUBLESHOOTING

---

Before contacting customer service, please refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
Oven does not heat.	No power supply; incorrect settings.	Check circuit breaker. Ensure oven is plugged in. Verify cooking mode and temperature settings.
Uneven cooking.	Improper rack position; overloaded oven; door not fully closed.	Use recommended rack positions. Avoid overcrowding. Ensure door is sealed.
Smoke or odor during first use.	Residues from manufacturing process.	This is normal. Run the oven empty at high temperature for 30 minutes to burn off residues. Ensure good ventilation.
Pyrolytic cleaning not effective.	Excessive food residue; door not locked.	Scrape off large food particles before starting. Ensure door is securely locked for the cycle.

## TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Hisense
Model Number	BSA66334PX
Dimensions (L x W x H)	56.4 x 59.5 x 59.5 cm
Weight	29 Kilograms
Capacity	77 Liters
Energy Efficiency	A+
Installation Type	Built-in
Cooking Mode	Convection
Power	3500 Watts
Voltage	220V
Material	Stainless Steel, Glass
Color	Metallic Silver

## WARRANTY INFORMATION

For detailed warranty terms and conditions, please refer to the warranty card included with your product or contact your retailer. Hisense provides a manufacturer's warranty covering defects in materials and workmanship under normal use.

Information regarding the availability of spare parts is not provided in the product details. Please contact Hisense customer support or your retailer for inquiries about spare parts.

## CUSTOMER SUPPORT

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact Hisense customer support. You can typically find contact information on the Hisense official website or in your product documentation.

When contacting support, please have your oven's model number (BSA66334PX) and serial number ready.