

Bestron ARG150BW

Bestron ARG150BW Mini Raclette Grill User Manual

Model: ARG150BW

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the voltage on the rating label corresponds to your mains voltage.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool completely before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors. This appliance is designed for indoor household use only.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off" (if applicable), then remove the plug from the wall outlet.
- Do not use the appliance for purposes other than its intended use.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- The temperature of accessible surfaces may be high when the appliance is operating. Exercise caution to avoid burns.

PRODUCT COMPONENTS

The Bestron ARG150BW Mini Raclette Grill includes the following parts:

- Raclette Grill Base with Heating Element
- Non-stick Grooved Grill Plate (approx. 20 x 10 cm)
- 2 Non-stick Raclette Pans with Wooden Handles
- 2 Wooden Scrapers
- 2 Coasters



Image: The Bestron ARG150BW Mini Raclette Grill, showcasing the main unit with its grill plate and two raclette pans, one filled with melted cheese and the other with a cooked egg dish. A piece of grilled meat and shrimp are visible on the top grill plate.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials from the raclette grill and its accessories.
2. **Clean:** Before first use, wipe the grill plate and raclette pans with a damp cloth. Wash the wooden scrapers and coasters with warm soapy water, then rinse and dry thoroughly.
3. **Position:** Place the raclette grill on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the appliance and that it is not near flammable materials.
4. **Initial Heating (Burn-off):** Plug the appliance into a suitable power outlet. The grill will begin to heat up. During the first use, a slight odor or smoke may occur as manufacturing residues burn off. This is normal and will dissipate. Operate the grill for approximately 10-15 minutes without food in a well-

ventilated area.

5. **Cool Down:** Unplug the appliance and allow it to cool completely before proceeding with cooking.



Image: The Bestron ARG150BW Mini Raclette Grill set up on a surface, with one raclette pan removed and placed on a coaster with a wooden scraper. This illustrates the individual components ready for use.

OPERATING INSTRUCTIONS

General Use

1. **Preparation:** Prepare your desired ingredients such as sliced meats, vegetables, seafood, cheese, and bread.
2. **Preheating:** Plug the raclette grill into a power outlet. The appliance will immediately begin to heat up. Allow approximately 5-10 minutes for the grill plate and heating element to reach optimal temperature.
3. **Grilling on Top Plate:** Place ingredients like meat, vegetables, or seafood directly onto the non-stick grooved grill plate. Cook until desired doneness.
4. **Using Raclette Pans:** Place cheese, pre-cooked potatoes, or other small ingredients into the non-stick raclette pans. Slide the pans under the heating element to melt the cheese or warm the food.
5. **Serving:** Use the wooden scrapers to remove food from the raclette pans and grill plate. The coasters can be used to rest hot pans safely.
6. **After Use:** Once cooking is complete, unplug the appliance from the power outlet.

Tips for Best Results

- For optimal grilling, lightly brush the grill plate with a small amount of cooking oil before preheating.
- Cut ingredients into small, uniform pieces for even cooking.
- Avoid overcrowding the grill plate to maintain consistent temperature and ensure even cooking.

- Use only wooden or heat-resistant plastic utensils to prevent scratching the non-stick surfaces.



Image: An overhead view of the Bestron ARG150BW Mini Raclette Grill in operation, showing a piece of grilled meat and shrimp on the top grill plate, and a raclette pan with melted cheese and a small garnish underneath.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your raclette grill.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Clean Grill Plate and Pans:** The non-stick grill plate and raclette pans can be easily cleaned under running water with a soft sponge and mild dish soap. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
3. **Clean Base Unit:** Wipe the exterior of the grill base with a damp cloth. Do not immerse the base unit in water or any other liquid.
4. **Dry Thoroughly:** Ensure all parts are completely dry before storing or next use.
5. **Storage:** Store the raclette grill and its accessories in a dry place, away from direct sunlight and moisture.

TROUBLESHOOTING

Appliance does not heat up.

- Check if the power cord is securely plugged into a working electrical outlet.
- Ensure the power outlet is functional by testing it with another appliance.

Smoke or odor during first use.

- This is normal for the first use as manufacturing residues burn off. Ensure good ventilation. The odor will dissipate after a short period.

Food sticks to the grill plate/pans.

- Ensure the non-stick surfaces are clean and free from food residues before use.
- Lightly brush the grill plate with a small amount of cooking oil before preheating.
- Avoid using metal utensils that can damage the non-stick coating.

TECHNICAL SPECIFICATIONS













Feature	Specification
Model Number	ARG150BW
Brand	Bestron
Power	350 Watts
Voltage	220V
Material	Stainless Steel (Base), Cast Iron (Grill Plate), Wood/Plastic (Handles)
Grill Plate Dimensions	Approx. 20 x 10 cm
Product Dimensions (L x W x H)	32 x 11 x 12 cm (approx. 12.6"D x 4.33"W x 4.72"H)
Item Weight	1 kg (approx. 2.2 pounds)
Special Features	Lightweight, Non-Stick Coating

WARRANTY AND SUPPORT

This Bestron appliance comes with a limited warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or visit the official Bestron website for detailed information.

For technical assistance, spare parts, or further inquiries regarding your Bestron ARG150BW Mini Raclette Grill, please visit the official Bestron website or contact their customer service department directly.

Please retain your proof of purchase for any warranty claims.

 	<p>Bestron ARG200BW Raclette Grill - Instruction Manual</p> <p>Comprehensive instruction manual for the Bestron ARG200BW raclette grill, covering safety, operation, cleaning, and warranty information.</p>
 	<p>Bestron APM123W Panini Grill Instruction Manual</p> <p>Read the Bestron APM123W Panini Grill instruction manual for safe and effective operation, cleaning, maintenance, and warranty information. Learn how to use your Bestron FunCooking appliance.</p>
 	<p>Bestron Panini Maker ASW113 Instruction Manual - Safe Use, Operation, and Maintenance Guide</p> <p>Comprehensive instruction manual for the Bestron Panini Maker ASW113. Learn about safe operation, cleaning, maintenance, and technical specifications for your grill.</p>
 	<p>Bestron AEC2000 Egg Boiler Instruction Manual</p> <p>Comprehensive instruction manual for the Bestron AEC2000 Egg Boiler, covering safety, operation, cleaning, and technical specifications. Learn how to perfectly boil eggs with this user-friendly appliance.</p>
 	<p>Bestron AOV45 Oven and Grill: Instruction Manual</p> <p>Comprehensive guide for the Bestron AOV45 oven and grill, detailing operation, safety, cleaning, and warranty. Learn to use baking, grilling, and rotisserie functions effectively.</p>
 	<p>Bestron Fritteuse AF357B Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für die Bestron Fritteuse AF357B. Enthält Sicherheitshinweise, Bedienung, Reinigung und technische Daten für den sicheren und effektiven Gebrauch.</p>

