

[manuals.plus](#) /

› [Trexonic](#) /

› [User Manual for Trexonic 12.5 Inch Portable TV+DVD Player](#)

Trexonic TRX-125PDVD

User Manual

TREXONIC 12.5 INCH PORTABLE TV+DVD PLAYER

Model: TRX-125PDVD

Introduction

Thank you for purchasing the Trexonic 12.5 Inch Portable TV+DVD Player. This versatile device allows you to enjoy your favorite movies, TV shows, and digital media on the go. Featuring a high-resolution TFT LED screen, a long-lasting rechargeable battery, and multiple input options, it is designed for convenient entertainment during travel, camping, or at home. Please read this manual thoroughly to understand the features and proper operation of your new device.



Image: The Trexonic 12.5 Inch Portable TV+DVD Player in an open position, showcasing its screen and control panel. The screen displays a vibrant image of a white rabbit in a wooden box, smelling a yellow dandelion in a green field.

What's Included

- Trexonic 12.5 Inch Portable TV+DVD Player
- AC Adapter
- AV Line
- Remote Control
- Antenna
- User Manual (this document)

Setup

1. **Charging the Battery:** Before first use, fully charge the built-in Lithium Ion battery. Connect the included AC Adapter to the DC Input port on the player and plug it into a standard wall outlet. The charging indicator light will typically show the charging status.
2. **Powering On/Off:** Press and hold the **POWER** button to turn the device on or off.
3. **Connecting to Power (Car):** For use in a vehicle, connect the included Car Adapter to the DC Input port and to your vehicle's 12V power outlet.
4. **Connecting Antenna:** For TV reception, connect the included Antenna to the appropriate antenna input port on the

player. Extend the antenna fully for best reception.

5. **Connecting External Devices (AV Input):** Use the included AV Line to connect external video sources (e.g., game consoles, older camcorders) to the AV Input port.
6. **Connecting to External Display (AV Output):** Use the AV Output port to connect the player to a larger TV or monitor using an AV cable (not always included).

Operating Instructions

Basic Controls

- **Power Button:** Turns the unit on or off.
- **Volume Controls (VOL+/-):** Adjusts the audio output level.
- **Mute Button:** Temporarily silences the audio.
- **Play/Pause Button:** Starts or pauses playback of media.
- **Stop Button:** Stops media playback.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Used for menu navigation and selection.
- **Input/Source Button:** Switches between different input sources (DVD, USB, SD, AV, TV).
- **Setup Button:** Accesses the system settings menu.

Media Playback

1. DVD Playback:

Open the disc tray, insert a DVD or CD with the label side facing up, and close the tray. The player should automatically detect the disc and begin playback. If not, select the DVD source using the Input button.

2. USB/SD Card Playback:

Insert a USB flash drive into the USB port or an SD card into the SD card slot. Use the Input button to select the USB or SD source. Navigate through the files using the navigation buttons and press OK to play.

3. TV Functionality:

Ensure the antenna is connected. Select the TV source using the Input button. Perform a channel scan in the setup menu to find available digital TV channels.

Screen Adjustment

The 12.5-inch TFT LED screen offers flexible viewing angles. It can rotate 90 degrees to the left and 180 degrees to the right, allowing you to swivel the screen for optimal viewing or fold it flat with the screen facing outwards.

Remote Control

The included remote control provides full functionality for operating the player from a distance. Ensure batteries are inserted correctly. Point the remote control directly at the infrared sensor on the player for best performance.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the screen, use a soft, lint-free cloth specifically designed for electronics screens. Do not use liquid cleaners or abrasive materials.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches. Store discs in their cases when not in use.
- **Storage:** When not in use for extended periods, store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use.

Troubleshooting

Problem	Possible Cause	Solution
No power	Battery discharged; AC adapter not connected or faulty.	Charge the battery; ensure AC adapter is securely connected to player and power outlet.
No disc playback	Disc inserted incorrectly; disc is dirty or scratched; incorrect source selected.	Reinsert disc correctly; clean disc; select DVD source.
No sound	Volume too low; Mute function active; headphones connected.	Increase volume; press Mute button; disconnect headphones if using speakers.
Poor TV reception	Antenna not connected or extended; weak signal area.	Connect and fully extend antenna; try repositioning the player; perform channel scan.

Specifications





Feature	Detail
Brand	Trexonic
Model	TRX-125PDVD
Screen Size	12.5 inches
Display Type	TFT LED
Resolution	1366x768
Panel Driver	LED
DVD Solution	Sunplus 8202V
DTV Solution	Master3553
Loader	Sanyo 870A
Supported Media	DVD, CD, SD Card, USB Flash Drive
Inputs	SD, USB, AV Input, DC Input
Outputs	Earphones Input, AV Output
Battery	1 Lithium Ion battery (included)
Item Weight	2 pounds
Color	Black

Warranty and Support

For warranty information, please refer to the documentation included with your purchase or contact Trexonic customer support. Details regarding product registration, warranty claims, and technical assistance can typically be found on the official Trexonic website or by contacting their customer service department.

No official product videos are available for embedding based on the provided information.

Related Documents - TRX-125PDVD

 <p>15.4" PORTABLE DVD PLAYER WITH ATSC DIGITAL TV</p> <p>MODEL #TR-D154</p> <p>USER MANUAL</p>	<p>Trexonic TR-D154 15.4" Portable DVD Player with ATSC Digital TV User Manual</p> <p>User manual for the Trexonic TR-D154 portable DVD player with ATSC digital TV. Includes features, operation instructions for DVD, USB, memory card, and HDMI, as well as troubleshooting and specifications.</p>
 <p>14" PORTABLE LED TELEVISION</p> <p>MODEL #TR-14D</p> <p>USER MANUAL</p>	<p>Trexonic 14" Portable LED Television User Manual</p> <p>User manual for the Trexonic 14" Portable LED Television (Model TRX-14D), covering important safeguards, package contents, input/output interface, remote control operation, menu functions (channel, picture, sound, time, options, lock), input source selection, multimedia mode, troubleshooting, and specifications.</p>
 <p>TV Auto Scan Guide</p>	<p>Trexonic TV Auto Scan Guide</p> <p>Instructions for performing an auto scan on a Trexonic TV to find channels, including preparation and step-by-step guidance.</p>
 <p>Channel Scan Guide</p>	<p>Trexonic Channel Scan Guide: How to Auto Scan TV Channels</p> <p>Learn how to perform an automatic channel scan on your Trexonic device with this simple guide. Covers selecting AIR/CABLE and initiating the scan for digital and analog channels.</p>