

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm Instax Link Wide Printer User Manual

Fujifilm 16719562

Fujifilm Instax Link Wide Printer User Manual

Model: 16719562 | Brand: Fujifilm

INTRODUCTION

The Fujifilm Instax Link Wide Smartphone Printer allows you to print wide-format instant photos directly from your smartphone. This portable printer connects wirelessly via Bluetooth and offers various in-app features to enhance your printing experience, including editing, templates, and QR code integration.



Image: The Instax Link Wide Printer in Mocha Gray, showcasing its compact design and a wide instant photo being printed.

WHAT'S IN THE BOX

Upon unboxing your Fujifilm Instax Link Wide Printer, ensure all the following components are present:

- Instax Link Wide Printer Unit
- USB Charging Cable
- Printer Stand
- Wrist Strap
- User Manual (this document)



Image: All included accessories laid out: the printer, USB cable, printer stand, and the user manual.

SETUP

1. Charging the Printer

Before initial use, fully charge the printer using the provided USB charging cable. Connect the small end of the USB cable to the charging port on the printer and the larger end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status.

2. Loading Instax Wide Film

To load film, open the film compartment cover on the back of the printer. Align the yellow mark on the film pack with the yellow mark inside the printer, then gently insert the film pack. Close the cover firmly until it clicks. The dark slide will

automatically eject. Do not open the film compartment cover until all 10 photos have been printed, as this will expose the film and render it unusable.

3. Installing the Instax Link Wide App

Download the free "Instax Link Wide" app from your smartphone's app store (available for iOS and Android). Ensure your smartphone's Bluetooth is enabled.


4. Connecting to Your Smartphone

Turn on the Instax Link Wide printer. Open the Instax Link Wide app on your smartphone. The app will guide you through the Bluetooth pairing process. Once connected, the printer's LED indicator will show a steady blue light.

instax Link WIDE™ Smartphone App



**Print INSTAX
photos from your
Smartphone**

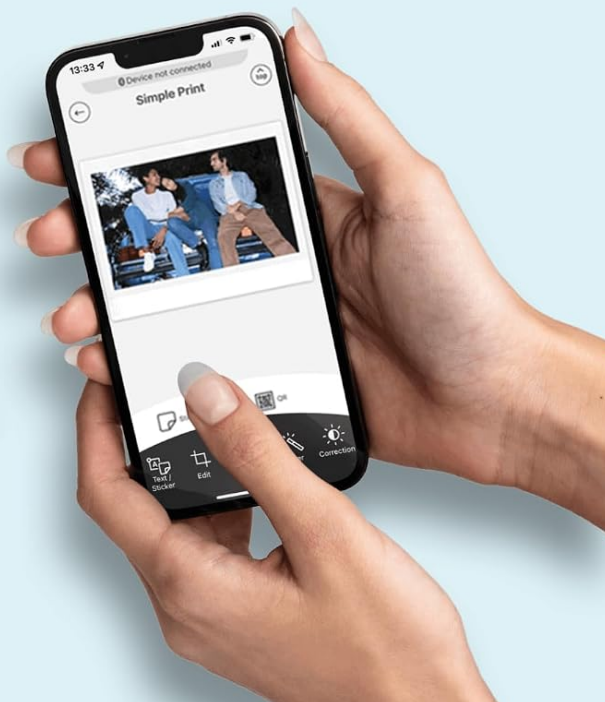

Simulated images. Develops in approx. 90 seconds. Download of free App required

Image: A smartphone displaying the Instax Link Wide app, ready to print a photo to the connected printer.

OPERATING THE PRINTER

1. Basic Printing

Select an image from your smartphone's gallery within the Instax Link Wide app. You can then choose to print directly or utilize the various editing features before printing. Swipe up on the image in the app to initiate printing.



Image: The app's interface confirming a print job is in progress, indicating the number of film sheets remaining.

2. Image Color Modes

The app offers two image color modes:

- **Instax-Rich Mode:** For vibrant colors and enhanced saturation.
- **Instax-Natural Mode:** For a more natural and softer image quality.

Color Modes

**Natural
Mode**



Rich Mode



Image: Two Instax Wide prints side-by-side, illustrating the visual difference between Natural Mode and Rich Mode color processing.

 
3. App Features

The Instax Link Wide app provides extensive features to customize your prints:

- **Editing Tools:** Resize, apply filters, adjust contrast, and more.
- **Templates:** Choose from over 30 editable templates for greeting cards, invitations, etc.
- **Stickers:** Access over 1,600 in-app stickers to personalize your photos.
- **Collage Print:** Combine multiple images into a single wide print.
- **Sketch, Edit & Print:** Import text and sketches to customize photos.
- **QR Code Mode:** Embed QR codes that link to URLs, recorded sounds, secret messages, or locations.

App Features

**Video
Print**

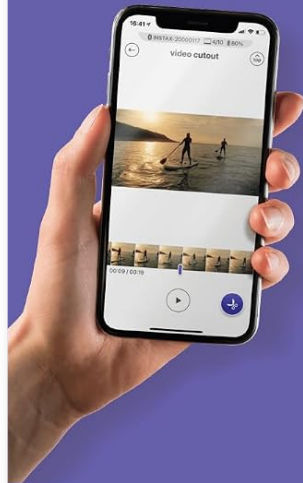

**Editable
Templates**

Collage Print



Stickers



Image: A visual representation of the app's creative features, including options for video printing, editable templates, collage creation, and adding stickers.

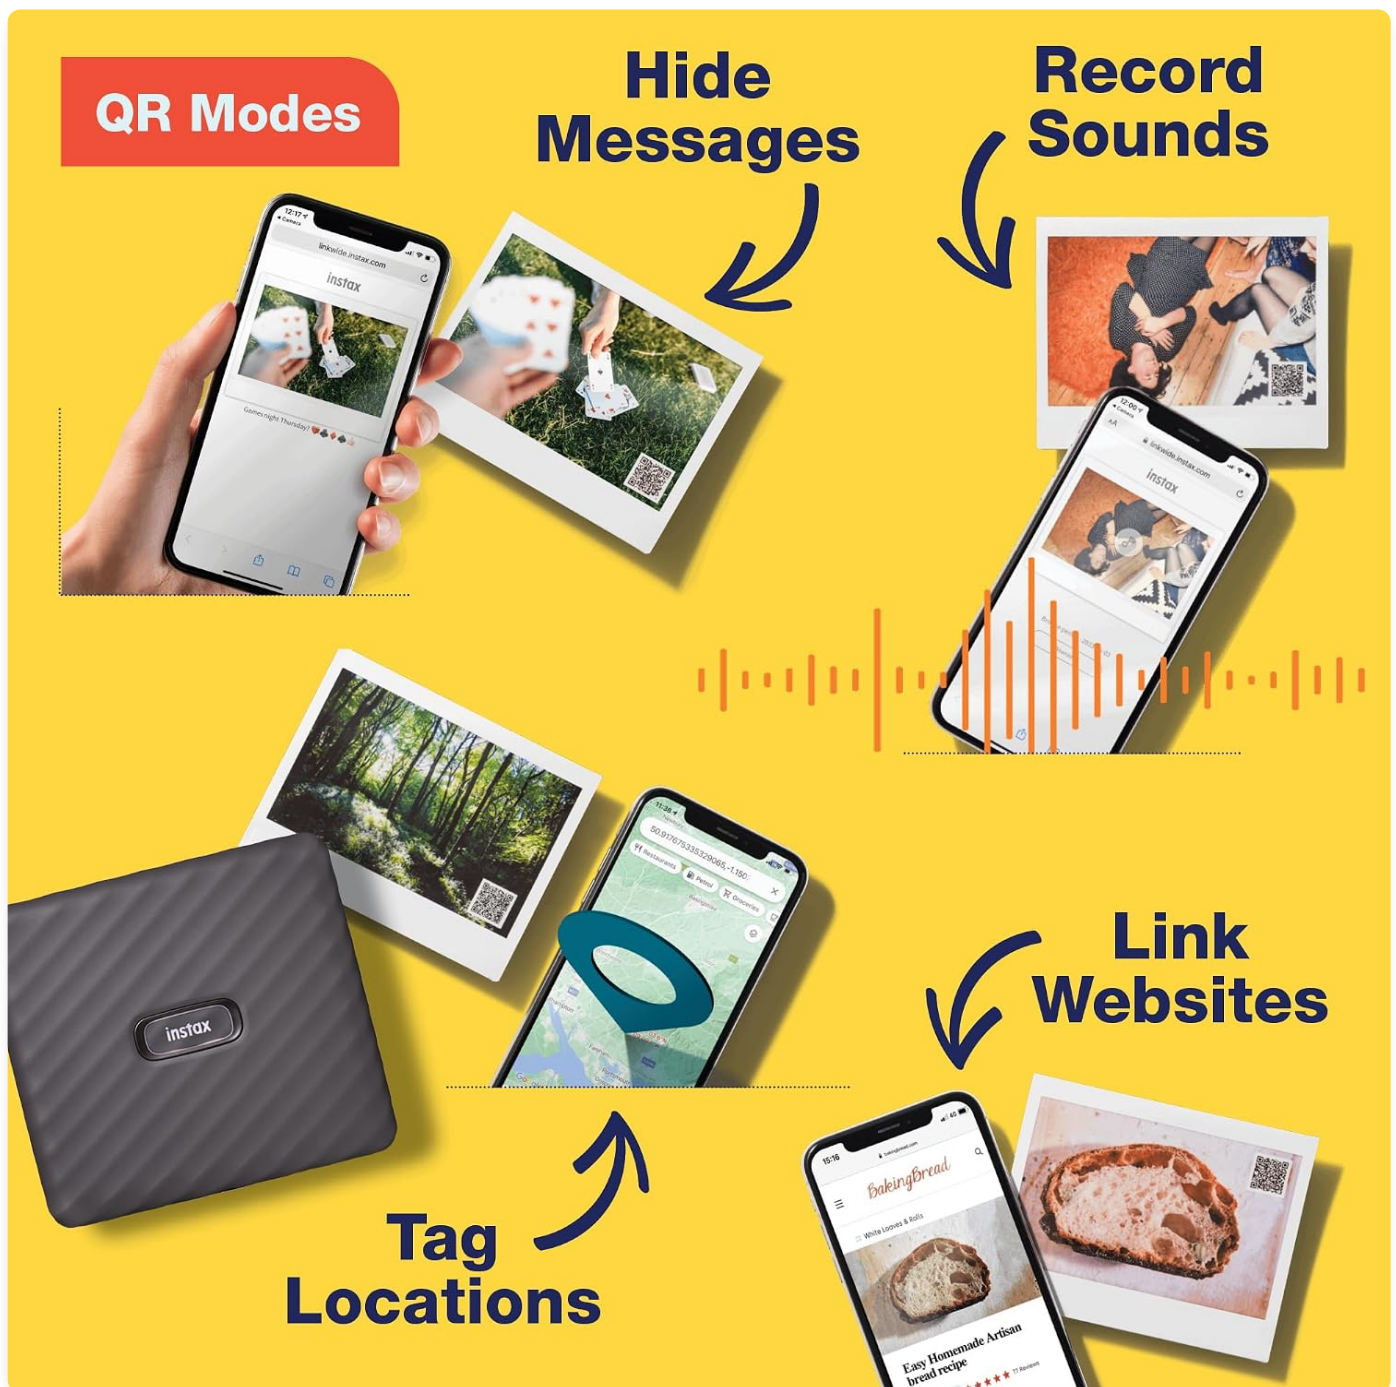 


Image: Examples of QR code functionality, showing how they can be used to hide messages, record sounds, link to websites, or tag locations on prints.

4. Official Product Video

Your browser does not support the video tag.

Video: "Don't just take, give - Wide Link" - An official product video from Fujifilm showcasing the Instax Link Wide printer's features and the joy of sharing instant prints.

MAINTENANCE

- Keep the printer clean by wiping it with a soft, dry cloth.
- Avoid exposing the printer to extreme temperatures, direct sunlight, or high humidity.

- Store film packs in a cool, dry place.
- Charge the battery regularly, even if not in frequent use, to maintain battery health.

TROUBLESHOOTING

Printer Not Turning On

- Ensure the battery is charged. Connect the printer to a power source and allow it to charge for at least 30 minutes before attempting to turn it on.

Cannot Connect via Bluetooth

- Make sure Bluetooth is enabled on your smartphone.
- Ensure the printer is within range (typically 10 meters or 33 feet).
- Restart both your smartphone and the printer.
- If previously paired, try unpairing and re-pairing the device in your smartphone's Bluetooth settings.

Film Not Ejecting or Poor Print Quality

- Check if the film pack is correctly loaded and not expired.
- Ensure there is enough film remaining in the pack.
- Do not open the film compartment cover once film is loaded until all exposures are used.
- Avoid shaking or bending the film after it ejects, as this can affect development.

SPECIFICATIONS

Feature	Detail
Product Dimensions	1.3"D x 5.5"W x 5"H
Connectivity Technology	Bluetooth
Printing Technology	Photographic print
Printer Media Size Maximum	2.4 x 3.9 inches (Instax Wide Film)
Maximum Color Print Resolution	1260 x 800 dpi
Item Weight	12 ounces (0.75 Pounds)
Batteries	1 C battery required (included)
Model Name	FJ16719562

Manufacturer	Fujifilm
--------------	----------

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Fujifilm website or contact their customer service. Keep your proof of purchase for warranty claims.

For additional resources and FAQs, visit the [Fujifilm Store on Amazon](#).

© 2024 Fujifilm. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question