

Dell PN7320A

Dell Active Stylus PN7320A Instruction Manual

1. PRODUCT OVERVIEW

The Dell Active Stylus PN7320A is designed to provide a natural and precise writing and drawing experience on compatible touch-enabled devices, such as the Dell Latitude 7320 Detachable. This active pen offers enhanced functionality for note-taking, sketching, and navigating your device with ease.



Image: Dell Latitude 7320 Detachable laptop with the Dell Active Stylus PN7320A.

2. PACKAGE CONTENTS

- Dell Active Stylus PN7320A

3. PRODUCT FEATURES

- **Natural Handwriting:** Designed to mimic the feel of a traditional pen for comfortable and intuitive use.
- **Precision Tip:** Offers accurate input for detailed tasks like drawing, writing, and signing documents.
- **Magnetic Attachment:** Securely attaches to compatible devices for convenient storage and transport.
- **Programmable Buttons:** Features customizable buttons for quick access to functions like erasing or right-clicking.
- **Pressure Sensitivity:** Provides varying line thickness and opacity based on pressure applied, enhancing creative control.

4. SETUP

4.1 Battery Installation

The Dell Active Stylus PN7320A requires AAAA batteries for operation. Follow these steps to install the batteries:

1. Gently twist and pull the top cap of the stylus to remove it.
2. Insert the AAAA battery(ies) into the stylus body, ensuring the positive (+) and negative (-) terminals are correctly aligned.
3. Replace the top cap by aligning it and twisting until it is secure.

Video: Demonstrates battery installation for a Dell Active Pen (PN557W model shown, but the AAAA battery installation process is similar).

4.2 Bluetooth Pairing

To enable full functionality, pair your Dell Active Stylus with your compatible device via Bluetooth:

1. Ensure your device's Bluetooth is turned on.
2. Press and hold the top button of the stylus for approximately 3 seconds until the indicator light blinks blue, indicating it's in pairing mode.
3. On your device, go to Bluetooth settings and select the Dell Active Stylus from the list of available devices to complete the pairing process.

Video: Demonstrates Bluetooth pairing for a Dell Active Pen (PN7522W model shown, but the pairing process is similar).

5. OPERATING INSTRUCTIONS

5.1 Basic Usage

Hold the stylus as you would a regular pen. The precision tip allows for accurate interaction with your device's touchscreen. Rest your palm on the screen naturally; the stylus supports palm rejection to prevent unintended inputs.

5.2 Button Functions

The Dell Active Stylus features customizable buttons on its barrel. These buttons can be configured through your device's settings or Dell's peripheral software to perform various actions, such as:

- **Eraser Function:** Press and hold a designated button to activate the eraser, allowing you to correct drawings or notes directly on the screen.
- **Right-Click Function:** Use another button to perform a right-click action, similar to a mouse, for accessing context menus.
- **Lasso Tool:** Some configurations allow a button to activate a lasso tool for selecting content.

Video: Demonstrates general usage, including drawing, eraser, and lasso functions of a Dell Active Pen.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the stylus body. Avoid abrasive materials or harsh chemicals.
- **Tip Replacement:** If the stylus tip becomes worn or damaged, it can be replaced. Refer to Dell's official support for compatible replacement tips and instructions.
- **Storage:** Store the stylus in a safe place when not in use, ideally magnetically attached to your device or in a protective case, to prevent loss or damage.

7. TROUBLESHOOTING

- **Stylus Not Responding:**

- Check if the battery is correctly installed and has sufficient charge. Replace batteries if necessary.
- Ensure Bluetooth is enabled on your device and the stylus is properly paired. Try re-pairing if connection issues persist.
- Restart your device.

- **Inaccurate Tracking:**

- Ensure the stylus tip is clean and undamaged. Replace if worn.
- Calibrate the stylus through your device's settings if available.

- **Buttons Not Working:**

- Verify button assignments in your device's pen settings or Dell's peripheral software.
- Ensure the stylus is properly paired via Bluetooth.

8. SPECIFICATIONS

Brand	Dell
Model Number	DELL-PN7320A
Product Type	Active Stylus
Compatible Devices	Notebook (e.g., Dell Latitude 7320 Detachable)
Material	Aluminum
Item Weight	0.32 ounces (approx. 9 grams)
Product Dimensions (LxWxH)	5.5 x 0.4 x 0.3 inches (approx. 140 x 10 x 7.6 mm)
Batteries Required	Yes (AAAA batteries, not included)

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts and accessories, please visit the official Dell support website or contact Dell customer service. Keep your purchase receipt for warranty claims.