

Manuals.plus /

› ciciglow /

› ciciglow USB C to HDMI Adapter Instruction Manual (Model: ciciglowtd91mpsgv72304)

ciciglow ciciglowtd91mpsgv72304

ciciglow USB C to HDMI Adapter Instruction Manual

Model: ciciglowtd91mpsgv72304

Brand: ciciglow

1. INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your ciciglow USB C to HDMI Adapter. Please read this manual thoroughly before using the product to ensure optimal performance and safety. This adapter allows you to connect a USB 3.1 Type-C enabled device (with MHL support) to an HDMI display, such as an HDTV, monitor, or projector.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Compact and Portable:** Small size and lightweight design for easy portability.
- **Plug and Play:** No drivers required for installation.
- **High-Performance:** Equipped with a high-performance digital chip for reliable signal processing.
- **USB Powered:** Draws power directly from the mini USB interface.
- **Perfect Audio and Video Output:** Delivers clear audio and high-definition video.
- **High-Speed Transmission:** Supports USB 3.1 ultra-high-speed standard up to 10 Gbps.
- **HD Video Output:** Enables HD video output from compatible USB 3.1 (MHL-enabled) phones to HDTVs, monitors, and projectors.
- **Reversible USB-C:** Features the latest USB 3.1 Type-C interface, allowing for convenient connection in any orientation.

2.2 Components

The ciciglow USB C to HDMI Adapter consists of the following main components:

- **USB 3.1 Type-C Connector:** Connects to your source device (phone, tablet).
- **HDMI Female Port:** Connects to an HDMI cable for display output.
- **Micro USB (Female) Power Port:** For optional external power supply if needed.
- **LED Power Indicator:** Indicates power status.
- **ABS Plastic Shell:** Durable and anti-scratch housing.



Image 2.2.1: Overview of the ciciglow USB C to HDMI Adapter components. This image displays the USB-C input, HDMI output, micro USB power input, and the power indicator light on the adapter's matte black casing.



Image 2.2.2: The adapter's compact size, shown resting in a hand, highlighting its portability.

3. SETUP

Follow these steps to set up your cigiglow USB C to HDMI Adapter:

1. **Verify Device Compatibility:** Ensure your source device (smartphone, tablet) has a USB 3.1 Type-C port and supports MHL (Mobile High-Definition Link) functionality for video output. Not all USB-C ports support video output.
2. **Connect HDMI Cable:** Plug one end of a standard HDMI cable (not included) into the HDMI female port of the cigiglow adapter.
3. **Connect to Display:** Plug the other end of the HDMI cable into an available HDMI input port on your HDTV, monitor, or projector.
4. **Connect Adapter to Source Device:** Insert the USB 3.1 Type-C connector of the adapter into the USB-C port of your compatible smartphone or tablet.
5. **Optional Power Connection:** If your source device requires additional power or if the display signal is unstable, connect a standard Micro USB cable (not included) to the Micro USB power port on the adapter and then to a USB power source (e.g., wall adapter, power bank).
6. **Select Input on Display:** Switch your HDTV, monitor, or projector to the correct HDMI input source.

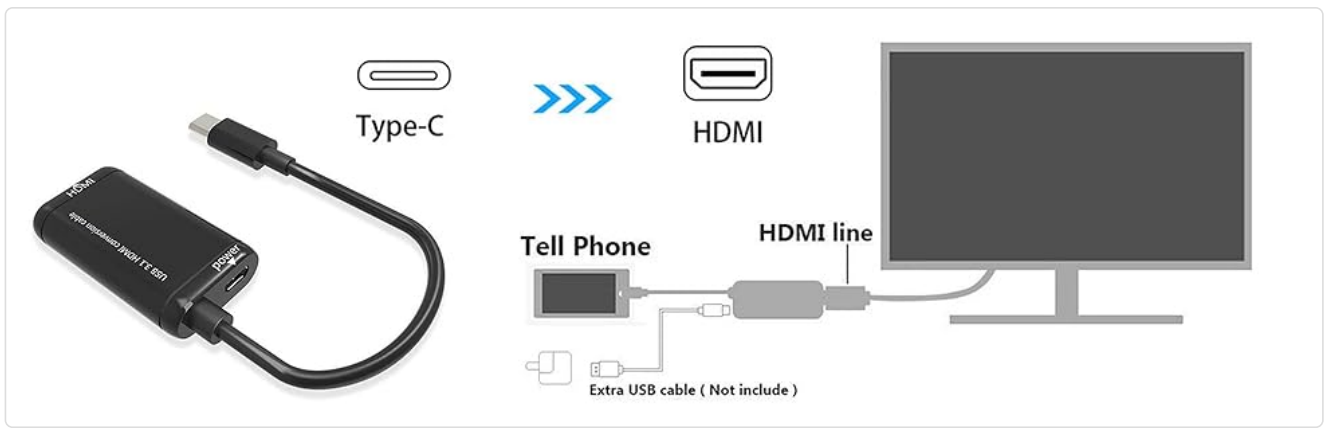


Image 3.1.1: Connection diagram. This image shows a USB-C device (labeled 'Tell Phone') connected to the adapter, which is then connected via an HDMI cable (labeled 'HDMI line') to a display. An optional extra USB cable for power is also indicated.

4. OPERATING INSTRUCTIONS

Once the adapter is correctly set up, your device's screen should automatically mirror or extend to the connected display.

- **Automatic Detection:** Most compatible devices will automatically detect the external display and begin outputting video.
- **Display Settings:** If the display does not appear automatically, check your device's display settings. You may need to enable screen mirroring or extend display options.
- **Audio Output:** Audio will typically be transmitted through the HDMI cable to the display. You can adjust audio settings on your source device or the display.
- **Power Indicator:** The LED on the adapter will illuminate when it is receiving power and functioning correctly.



Image 4.1.1: Example of a smartphone connected to a display via the USB C to HDMI adapter, showing content mirrored on a larger screen.

5. MAINTENANCE

To ensure the longevity and proper functioning of your ciciglow USB C to HDMI Adapter, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the adapter. Do not use liquid cleaners or aerosols.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid bending or twisting the cable excessively. Do not pull on the cable to disconnect; always grasp the connector housing.
- **Protection:** Keep the adapter away from water, moisture, and corrosive substances.

6. TROUBLESHOOTING

If you encounter issues with your ciciglow USB C to HDMI Adapter, refer to the following troubleshooting tips:

Problem	Possible Cause	Solution
No display on TV/monitor.	<ul style="list-style-type: none">◦ Source device not MHL compatible.◦ Incorrect HDMI input selected on display.◦ Loose cable connections.◦ Insufficient power to adapter/device.◦ Faulty HDMI cable.	<ul style="list-style-type: none">◦ Verify your device's USB-C port supports video output (MHL).◦ Ensure the display is set to the correct HDMI input.◦ Check all cable connections (USB-C, HDMI, Micro USB power) are secure.◦ Connect an external Micro USB power source to the adapter.◦ Try a different HDMI cable.
Flickering or unstable display.	<ul style="list-style-type: none">◦ Insufficient power.◦ Long or low-quality HDMI cable.◦ Interference.	<ul style="list-style-type: none">◦ Connect an external Micro USB power source to the adapter.◦ Use a shorter, high-quality HDMI cable.◦ Ensure no strong electromagnetic interference sources are nearby.
No audio output.	<ul style="list-style-type: none">◦ Audio settings on source device or display.◦ Faulty HDMI cable.	<ul style="list-style-type: none">◦ Check audio output settings on your phone/tablet and TV/monitor.◦ Try a different HDMI cable.

7. SPECIFICATIONS

Feature	Detail
Model Number	ciciglowtd91mpsgv72304
Brand	ciciglow
Connector Type	USB Type-C (Male), HDMI (Female), Micro USB (Female)
USB Standard	USB 3.1 (10 Gbps)
Video Output Support	MHL-enabled devices to HDMI displays (HDTV, Monitor, Projector)
Dimensions (L x W x H)	45 x 25 x 10 mm (approximate, adapter body)
Color	Black (Matte Finish)
Power Source	USB powered (optional Micro USB input for additional power)
Country of Origin	China

8. WARRANTY AND SUPPORT

Information regarding warranty coverage and customer support for this ciciglow product is typically provided at the point of purchase or on the official ciciglow website. Please refer to your purchase documentation or the manufacturer's website for specific details on warranty periods, return policies, and how to contact customer service for technical assistance. For further assistance, please visit the [ciciglow Brand Store on Amazon](#).