

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Smeg](#) /
- › [Smeg BCC01BLUS Fully Automatic Coffee Machine User Manual](#)

Smeg BCC01BLMUS

Smeg BCC01BLUS Fully Automatic Coffee Machine User Manual

Model: BCC01BLMUS

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Smeg BCC01BLUS Fully Automatic Coffee Machine. Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

WARNING:

- Always ensure the appliance is unplugged before cleaning or maintenance.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep out of reach of children.
- Use only whole coffee beans in the bean hopper. Do not use ground coffee, instant coffee, or other substances.
- Refer to the Proposition 65 warning if applicable for your region.

PRODUCT OVERVIEW

The Smeg BCC01BLUS is a fully automatic bean-to-cup coffee machine designed for ease of use and exceptional coffee quality. It features an integrated conical burr grinder, a high-performance 19-bar pump, and a fast thermoblock heating system.



Figure 1: Front-side view of the Smeg BCC01BLUS Fully Automatic Coffee Machine, showcasing its sleek black and brushed aluminum design with a glass cup of espresso on the drip tray.



Figure 2: Dimensions of the Smeg BCC01BLUS Fully Automatic Coffee Machine, measuring 13.25 inches in height, 17 inches in length, and 7 inches in width.



Figure 3: Top-down view of the control panel on the Smeg BCC01BLUS, showing LED-lit buttons for various coffee selections and machine status indicators.

SETUP

1. **Unpacking:** Carefully remove the coffee machine and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the machine on a stable, flat, and dry surface, away from heat sources and direct sunlight. Ensure adequate ventilation around the appliance.
3. **Water Tank Installation:** Remove the water tank (47 oz capacity) from the back of the machine. Rinse it with fresh water and fill it to the MAX line with potable water. Reinsert the tank securely.
4. **Bean Hopper:** Open the lid of the bean hopper located on top of the machine. Fill with your preferred whole coffee beans. Do not overfill.
5. **Drip Tray:** Ensure the drip tray is correctly positioned.
6. **Power Connection:** Plug the power cord into a suitable electrical outlet (220V).
7. **First Use Cycle:** Upon first power-on, the machine may perform an initial rinse cycle. Follow any on-screen prompts or indicator lights.

OPERATING INSTRUCTIONS

Brewing Coffee:

1. **Power On:** Press the power button to turn on the machine. Wait for the machine to heat up and perform any automatic rinsing cycles.
2. **Select Beverage:** Use the LED-lit buttons on the control panel to select your desired beverage:
 - Ristretto
 - Espresso

- Full Coffee
 - Hot Water
 - Light Ristretto
 - Light Espresso
 - Long Coffee
 - Americano
3. **Adjust Strength/Volume (if applicable):** Some beverages may allow for adjustment of coffee strength or volume. Refer to the specific button's function for details. For a regular cup, hold the coffee button down until it beeps twice.
 4. **Place Cup:** Position your cup under the coffee dispenser.
 5. **Start Brewing:** Press the selected beverage button to start the brewing process. The machine will automatically grind the beans and dispense the coffee.
 6. **Completion:** The machine will stop automatically when the brewing cycle is complete.

Adjusting Grind Coarseness:

The integrated conical burr grinder allows for adjustment of grind coarseness to suit your taste. Consult the specific instructions for your model on how to access and adjust the grinder settings, typically located within the bean hopper.

MAINTENANCE

Regular cleaning and maintenance are crucial for the longevity and optimal performance of your Smeg coffee machine. The machine features easily accessible and removable components for simple cleaning.

Daily Cleaning:

- **Drip Tray:** Empty and rinse the drip tray daily.

Your browser does not support the video tag.

Video 1: Instructions on how to clean the drip tray of the Smeg Fully Automatic Coffee Machine. The video demonstrates removing the drip tray and rinsing it under running water with mild washing-up liquid, then drying it.

- **Coffee Grounds Container:** Empty the coffee grounds container when indicated by the machine or daily, whichever comes first.
- **Water Tank:** Rinse the water tank with fresh water daily.

Weekly/Regular Cleaning:

- **Steam Wand (if applicable):** If your model includes a steam wand, rotate it anti-clockwise to release, pull down, clean under running water, and dry.

Your browser does not support the video tag.

Video 2: Demonstrates cleaning the steam wand of the Smeg Fully Automatic Coffee Machine. The video shows how to detach the wand, clean it, and reattach it.

- **Brew Group:** The brew group should be removed and cleaned regularly.
 - a. Ensure the appliance is switched on.
 - b. Open the service door on the side of the machine.
 - c. Remove the brew group by pressing the release buttons and pulling it out.
 - d. Wash the brew group under running water and dry thoroughly.
 - e. Clean the brew chamber inside the machine with a damp cloth.
 - f. Reinsert the brew group until it clicks into place.

Your browser does not support the video tag.

Video 3: Guide on cleaning the brew group and brew chamber of the Smeg Fully Automatic Coffee Machine. The video illustrates the removal, cleaning,

and reinstallation process for the brew group.

- **Machine Circuits Cleaning:** Periodically clean the internal circuits of the machine.
 - a. Select the white menu option (often indicated by a water droplet icon).
 - b. Hold the corresponding button for 3 seconds to start the cleaning cycle.
 - c. The machine will perform a cleaning cycle to wash the circuits.

Your browser does not support the video tag.

Video 4: Instructions for cleaning the internal circuits of the Smeg Fully Automatic Coffee Machine. The video shows how to initiate the cleaning cycle via the control panel.

Descaling:

The machine will indicate when descaling is required. Use a descaling solution recommended by Smeg and follow the instructions provided with the descaling product and in the machine's display.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	No power supply.	Check power cord connection and electrical outlet.
Coffee is too weak or watery.	Incorrect grind setting; insufficient coffee dose; bean hopper empty.	Adjust grind to finer setting; check bean hopper and refill; adjust coffee strength setting if available.
Machine indicates "empty water tank" but it's full.	Water tank not properly seated; sensor issue.	Remove and reinsert water tank firmly. If issue persists, contact support.
Coffee grounds container full warning persists after emptying.	Sensor needs cleaning or reset.	Ensure container is completely empty and clean. Power cycle the machine.
Brewing stops mid-cycle.	Insufficient water; brew group issue.	Check water tank and refill. Clean or re-seat brew group.

SPECIFICATIONS

- **Brand:** Smeg
- **Model Name:** BCC01BLMUS
- **Color:** Black
- **Product Dimensions:** 17"D x 7"W x 13.25"H
- **Special Features:** Integrated Coffee Grinder, Removable Tank, Auto Clean Function
- **Coffee Maker Type:** Espresso Machine
- **Filter Type:** Reusable
- **Style:** Retro
- **Specific Uses For Product:** Ristretto, Espresso, Full Coffee, Hot Water, Light Ristretto, Light Espresso, Long Coffee, Americano
- **Operation Mode:** Fully Automatic
- **Voltage:** 220V
- **Item Weight:** 15 pounds

- UPC: 812895022223

WARRANTY AND SUPPORT

The Smeg BCC01BLUS Fully Automatic Coffee Machine comes with a manufacturer's 1-year limited warranty. For warranty claims, technical support, or service inquiries, please contact Smeg customer service. US-based Smeg experts are available throughout the lifespan of your machine.

For more information, visit the official [Smeg Store on Amazon](#).