



Manuals.plus /

› Wahl /

› Moser 1877 Kuno Professional premium Cord/Cordless Hair Clipper 1887-0050 User Manual

## Wahl 1887-0050

# Moser 1877 Kuno Professional Cord/Cordless Hair Clipper User Manual

Model: 1887-0050

Brand: Moser

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the safe and effective use of your Moser 1877 Kuno Professional Cord/Cordless Hair Clipper. Please read this manual thoroughly before operating the device and retain it for future reference. This professional-grade hair clipper is designed for precise cutting and features a durable brushless motor and versatile blade sets.

## 2. SAFETY INFORMATION

---

For your safety and to prevent damage to the device, observe the following precautions:

- Avoid contact with eyes, skin, and water.
- Always follow proper cleaning and maintenance procedures as outlined in this manual.
- Always unplug the clipper when not in use, before cleaning, or before performing any maintenance.
- Do not charge the device near water sources or in damp environments.
- Keep the device out of reach of children.
- Avoid use on infants.
- Do not operate the clipper if it has a damaged cord or plug, or if it is not working properly.
- Do not attempt to disassemble or repair the clipper yourself. Refer all servicing to qualified personnel.

## 3. PRODUCT OVERVIEW

---

The Moser 1877 Kuno Professional Hair Clipper is a high-performance tool designed for professional and home use. Key features include:

- **Dual Blade System:** Includes a BLENDING BLADE (0.5-2 mm) for natural transitions and skin-close results, and a MAGIC BLADE (0.7-3 mm) for use with attachment combs and clipper-over-comb techniques.

- **Quick Change Blade Set:** Easily removable blade set for simple cleaning and quick interchangeability with other optional Moser blade sets.
- **High Performance Motor:** Equipped with an approximate 7200 rpm long-life brushless DC-Motor for consistent power and precise cutting.
- **Cord/Cordless Operation:** Features a highly efficient and durable Li-Ion battery, offering up to 2 hours of operating time and a quick charge time of approximately 1 hour and 10 minutes.
- **Ergonomic Design:** Compact and lightweight at only 210g, with a non-slip grip element for comfortable and fatigue-free handling.
- **Included Accessories:** Comes with 6 premium magnetic attachment combs (1.5/3/4.5/6/9/12 mm), a charging stand, plug-in transformer (EU Socket + EU to US Plug Converter), cleaning brush, and oil.



Figure 1: Moser 1877 Kuno Professional Cord/Cordless Hair Clipper. This image displays the black and silver clipper, highlighting its ergonomic shape, the Moser logo, and the power button.

## 4. SETUP

---

## 4.1 Initial Charging

1. Connect the plug-in transformer to the charging stand.
2. If using in the US, attach the EU to US Plug Converter to the EU socket transformer.
3. Plug the transformer into a suitable electrical outlet (100-240 V, 50/60 Hz).
4. Place the hair clipper into the charging stand. Ensure it is seated correctly.
5. The integrated charge control light on the push button will indicate charging status. A full charge takes approximately 1 hour and 10 minutes.
6. For optimal battery life, allow the clipper to fully charge before its first use.

## 4.2 Attaching Combs

1. Ensure the clipper is turned off.
2. Select the desired premium magnetic attachment comb (1.5/3/4.5/6/9/12 mm).
3. Align the comb with the clipper blade. The magnetic design ensures a secure hold.
4. Gently push the comb onto the blade until it clicks into place.
5. To remove, gently pull the comb away from the blade.

## 4.3 Changing Blade Sets

1. Ensure the clipper is turned off and unplugged.
2. Gently push the existing blade set forward and away from the clipper body until it detaches.
3. Align the new blade set (e.g., BLENDING BLADE or MAGIC BLADE) with the clipper body.
4. Push the new blade set firmly onto the clipper until it clicks securely into place.

# 5. OPERATING INSTRUCTIONS

---

## 5.1 Powering On/Off

- To turn the clipper on, press the power button located on the front of the device.
- To turn the clipper off, press the power button again.

## 5.2 Hair Cutting Techniques

Always ensure hair is clean and dry before clipping. For best results, comb hair in the direction of growth before cutting.

- **Using Attachment Combs:** Select the desired comb length. Hold the clipper with the blade flat against the head and move it slowly against the direction of hair growth. Overlap strokes to ensure an even cut.
- **Blending and Fading (with BLENDING BLADE):** Use the BLENDING BLADE for seamless transitions. Start with a longer comb and gradually switch to shorter combs or use the blade directly for skin-close results.
- **Clipper Over Comb (with MAGIC BLADE):** Use a barber comb to lift sections of hair away from the scalp. Glide the clipper over the comb, using the comb as a guide for the desired length.
- **Detailing and Edging:** Remove the attachment comb. Use the edge of the blade to create clean lines around the neckline, sideburns, and ears.

# 6. MAINTENANCE

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your clipper.

## 6.1 Cleaning the Blades

1. Turn off and unplug the clipper.

2. Remove the blade set as described in Section 4.3.
3. Use the provided cleaning brush to remove any loose hair from the blades and the clipper body.
4. For thorough cleaning, you may use a damp cloth to wipe the blades, ensuring they are completely dry before reattaching. Do not rinse the entire clipper under water.

## 6.2 Oiling the Blades

It is crucial to oil the blades regularly (after every few uses or as needed) to maintain cutting efficiency and prevent rust.

1. Ensure the clipper is clean and dry.
2. Apply 2-3 drops of the provided clipper oil across the top of the blades.
3. Turn the clipper on for a few seconds to allow the oil to distribute evenly across the blade teeth.
4. Wipe off any excess oil with a clean, dry cloth.

## 6.3 Storage

Store the clipper in a cool, dry place, away from direct sunlight and moisture. Keep it in its original packaging or a protective case when not in use.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper fully.
Clipper pulls hair or cuts unevenly.	Blades are dull or dirty; insufficient oiling.	Clean and oil the blades. If problem persists, consider replacing the blade set.
Clipper makes unusual noise.	Blades are not properly aligned or secured; internal issue.	Ensure blade set is securely attached. If noise continues, contact customer support.
Battery life is shorter than expected.	Battery not fully charged; aging battery.	Ensure full charge cycles. Over time, battery capacity may decrease.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	1887-0050
Type	Professional Cord/Cordless Hair Clipper
Operating Voltage	100-240 V, 50/60 Hz
Cable Length	3 m (Plug-In transformer)
Operation Time	Up to 2 hours
Charging Time	Approx. 1 hour 10 minutes (quick charge)
Dimensions	159 × 47 × 48 mm (6.22 x 1.85 x 2.09 inches)
Weight	210 g (7.41 ounces)
Color	Black-silver
Blade Set (Standard)	MAGIC BLADE (0.7-3 mm cutting length)
Blade Set (Included)	BLENDING BLADE (0.5-2 mm cutting length)
Top Blade Width	46 mm
Drive	Brushless DC-Motor, Approx. 7200 rpm
Battery Type	1 Lithium Ion battery

## 9. WARRANTY AND SUPPORT

---

For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Moser website. For technical support, replacement parts, or service inquiries, please contact Moser customer service through their official channels. Keep your purchase receipt as proof of purchase for warranty claims.

While the product is listed under the Wahl brand on Amazon, the manufacturer is Moser. For specific product support, it is recommended to contact Moser directly.