

Manuals.plus /

› emerio /

› Emerio Eco VCE-108278.10 Cyclonic Vacuum Cleaner User Manual

emerio VCE-108278.10

Emerio Eco VCE-108278.10 Cyclonic Vacuum Cleaner

User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Incorrect use may result in injury or damage to the appliance.

- Always ensure the voltage on the rating label corresponds to the mains voltage in your home.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug the appliance from the power outlet when not in use, before cleaning, or before changing accessories.
- Do not use the appliance if the power cord or plug is damaged. Contact qualified service personnel for repair.
- Do not vacuum liquids, hot ashes, burning cigarettes, or sharp objects.
- Ensure all filters are correctly installed before operation.
- Use only manufacturer-recommended attachments.

2. PRODUCT OVERVIEW

The Emerio Eco VCE-108278.10 is a compact and powerful cyclonic vacuum cleaner designed for efficient household cleaning. It features a bagless design, a HEPA filter, and a metal telescopic tube for versatile use.



Figure 2.1: Main unit of the Emerio Eco VCE-108278.10 cyclonic vacuum cleaner, showing the dust container, hose, and telescopic tube with floor nozzle.

Components:

- Main Unit with Dust Container
- Flexible Hose
- Metal Telescopic Tube
- Floor Nozzle
- Crevice Nozzle with Brush



Figure 2.2: The standard floor nozzle and the 2-in-1 crevice nozzle with integrated brush for various cleaning tasks.

3. SETUP AND ASSEMBLY

1. **Attach the Flexible Hose:** Insert the end of the flexible hose into the air inlet opening on the main unit until it clicks securely into place.
2. **Connect the Telescopic Tube:** Attach the other end of the flexible hose to the wider end of the metal telescopic tube.
3. **Adjust Telescopic Tube Length:** Press the release button on the telescopic tube and extend or retract it to your desired length. Release the button to lock it in position.

4. **Attach the Nozzle:** Connect the desired cleaning nozzle (floor nozzle or crevice nozzle) to the end of the telescopic tube. Ensure it is firmly attached.
5. **Power Cord:** Unwind the power cord to the required length. The appliance has a 7-meter operating radius.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

1. Plug the power cord into a suitable mains outlet (240V).
2. Press the On/Off button located on the main unit to start the vacuum cleaner.
3. To switch off, press the On/Off button again.
4. After use, unplug the appliance and press the cord rewind button to retract the power cord.

4.2 Using the Attachments

- **Floor Nozzle:** Use for general cleaning of hard floors and carpets. Some floor nozzles have a switch to adjust for different floor types.
- **Crevice Nozzle with Brush:** Ideal for cleaning corners, crevices, upholstery, and delicate surfaces. The brush can be extended or retracted as needed.

4.3 Suction Power Control

This model features 3 power levels. Adjust the suction power using the control method (Tactile) on the unit to suit different cleaning tasks and surfaces.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dust Container

Empty the dust container regularly, especially when the MAX fill line is reached, to maintain strong suction.

1. Ensure the vacuum cleaner is unplugged from the power outlet.
2. Press the release button to detach the dust container from the main unit.
3. Hold the dust container over a waste bin and open the bottom lid to empty the contents.
4. Close the lid securely and reattach the dust container to the main unit until it clicks into place.



Figure 5.1: The dust container detached from the vacuum cleaner, showing the open bottom for easy emptying.

5.2 Cleaning the Filters

The vacuum cleaner is equipped with a HEPA filter and other filters. Clean them regularly to prevent clogging and maintain suction power.

- **Pre-Motor Filter:** Located inside the dust container. Remove and tap out dust. Rinse with water if heavily soiled and allow to air dry completely before reinserting.
- **HEPA Filter:** Located at the air outlet. Remove and tap out dust. Do not wash the HEPA filter unless specified by the manufacturer. Replace if heavily soiled or damaged.

Important: Never operate the vacuum cleaner without all filters properly installed.

6. TROUBLESHOOTING

If you encounter any issues with your vacuum cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply.	Check if the plug is securely inserted into the outlet. Check the circuit breaker.
Low suction power.	Dust container full. Clogged filters. Obstruction in hose/nozzle.	Empty the dust container. Clean or replace filters. Remove any obstructions.
Unusual noise during operation.	Obstruction in fan or motor area.	Turn off and unplug the unit. Inspect for and remove any foreign objects. If noise persists, contact customer support.
Dust escaping from the unit.	Filters not properly installed or damaged. Dust container not closed correctly.	Ensure all filters are correctly seated. Check that the dust container is securely closed. Replace damaged filters.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	VCE-108278.10
Power	900 Watts
Voltage	240 Volts
Dust Container Capacity	2 Litres
Operating Radius	7 Meters
Filter Type	HEPA, Cartridge
Special Features	Compact, Lightweight, Portable, Bagless
Control Method	Tactile
Dimensions (L x W x H)	33 x 25 x 29 cm
Weight	5 Kilograms
Hose Length	4.5 Meters
Number of Power Levels	3
Color	Black/Blue

8. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. Keep your proof of purchase for any warranty claims.

For technical support, spare parts, or service inquiries, please contact your retailer or the Emerio customer service department. Contact information can typically be found on the manufacturer's website or in the product packaging.

Availability of spare parts: 1 Year.