

Goozii GZ21-0001

Goozii Portable Pet Playpen Instruction Manual

Model: GZ21-0001

1. INTRODUCTION

Thank you for choosing the Goozii Portable Pet Playpen. This manual provides essential information for the safe and effective use, setup, and maintenance of your pet playpen. Please read these instructions carefully before use and retain them for future reference.

The Goozii Portable Pet Playpen is designed to provide a secure and comfortable space for small to medium pets, suitable for both indoor and outdoor environments. Its collapsible design ensures easy portability and storage.

2. SAFETY INSTRUCTIONS

- This playpen is intended for small to medium pets weighing up to 25 lbs (for M size). Ensure your pet's size and temperament are suitable for this enclosure.
- Do not use this playpen as a restraining device for dangerous or aggressive animals.
- Always supervise your pet while they are inside the playpen. Do not leave your pet unattended for extended periods.
- Regularly inspect the playpen for any damage, tears, or loose parts. Discontinue use if any damage is found to prevent injury to your pet.
- Keep the playpen away from open flames, heat sources, and sharp objects.
- Ensure all zippers are fully closed when your pet is inside to prevent escape.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Goozii Portable Pet Playpen (Model GZ21-0001)

- 1 x Travel Carrying Bag

4. SETUP INSTRUCTIONS

The Goozii Portable Pet Playpen is designed for quick and easy setup without the need for tools.

1. Remove the folded playpen from its carrying bag.
2. Locate the elastic straps holding the playpen closed. Pull on these straps to release the folded structure.
3. Allow the playpen to spring open. Gently unfold the sides and pull them outwards.
4. Push the sides outward until they snap into place, forming the octagonal shape. Ensure all panels are fully extended and stable.



Note:

- 🐾 This playpen is only suitable for small and medium pets.
- 🐾 Do not use as a restraining device for dangerous or aggressive animals.
- 🐾 Do not leave your pet unattended.

Figure 4.1: Steps for unfolding the pet playpen. The playpen expands from a flat disc to its full octagonal shape.

5. OPERATING INSTRUCTIONS

5.1 Using the Playpen

- **Placement:** The playpen can be used indoors or outdoors. For outdoor use, place it on a flat,

stable surface.

- **Pet Entry/Exit:** The playpen features a zippered door for easy access. Unzip the door to allow your pet to enter or exit. The door can be rolled up and secured with a hook-and-loop fastener.
- **Top Cover:** A removable zippered top cover provides shade and security. Zip it closed to prevent pets from jumping out or to offer protection from the elements.
- **Comfort:** You may place a pet bed, blanket, or toys inside the playpen to enhance your pet's comfort and enjoyment. This can also help reduce friction between the bottom and your pet, making the playpen more stable.



Figure 5.1: Key features of the playpen, including the roll-up door, removable zippered top, and mesh panels.

5.2 Important Considerations

- The playpen's bottom is made of waterproof 600D oxford fabric. However, for spills or accidents, it is recommended to place a towel or absorbent pad inside to protect underlying surfaces, as prolonged exposure to liquids may lead to leakage.
- Ensure the playpen is adequately sized for your pet. Refer to the specifications section for dimensions.

6. FOLDING AND STORAGE

To fold the playpen for compact storage or travel:

1. Unzip and remove the top cover if it is attached.
2. Unzip the main door.
3. Gently push the sides of the playpen inward. The flexible frame will allow it to collapse.
4. Continue folding the playpen into a 'W' shape, then flatten it into a compact disc.
5. Use the integrated strap to secure the folded playpen.
6. Place the folded playpen into the provided travel carrying bag.



Figure 6.1: Steps for collapsing the pet playpen into a compact form for storage in the carrying bag.

7. MAINTENANCE AND CLEANING

To ensure the longevity and hygiene of your Goozii Portable Pet Playpen:

- **Spot Cleaning:** For minor spills or dirt, wipe the affected area with a damp cloth and mild soap. Rinse thoroughly with a clean, damp cloth.
- **Deep Cleaning:** For more extensive cleaning, the waterproof 600D oxford fabric can be hand-washed with mild detergent. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** Air dry the playpen completely before folding and storing to prevent mold or mildew. Do

not machine wash or tumble dry.

- **Mesh Panels:** The mesh panels can be gently wiped clean. Avoid excessive scrubbing that could damage the mesh.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Playpen does not stay open/stable.	Sides not fully extended and locked into place.	Ensure all eight panels are pushed outwards until they snap into their octagonal shape.
Pet escapes from the playpen.	Zippers are not fully closed; pet is too large or aggressive for the playpen.	Verify all zippers (door and top cover) are securely closed. Ensure the playpen size is appropriate for your pet's weight and temperament.
Liquid leaks through the bottom.	While the fabric is waterproof, seams or prolonged liquid exposure can lead to leakage.	Place an absorbent pad or towel inside the playpen to catch spills and protect underlying surfaces. Clean spills immediately.
Difficulty folding the playpen.	Incorrect folding technique.	Follow the folding instructions carefully, ensuring you push the sides inward and create the 'W' shape before flattening.

9. SPECIFICATIONS

- **Model Name:** Puppy Dog Playpen for Small Dogs
- **Model Number:** GZ21-0001
- **Dimensions (M Size):** 35.5"L x 35.5"W x 23.1"H
- **Item Weight:** 2.34 pounds
- **Material:** Polyester (600D Oxford Fabric)
- **Color:** Blue
- **Recommended Pet Weight (M Size):** Up to 25 lbs
- **Manufacturer:** GOOZII



AVAILABLE IN PLUS SIZE

S

Recommended for

PETS HOLD UP TO 10lbs



29x29x17"

M

Recommended for

PETS HOLD UP TO 25lbs



35.5x35.5x23.1"

L

Recommended for

PETS HOLD UP TO 50+lbs



44.8x44.8x23.5"

Please measure your pets firstly before purchasing.
All dimension are measured manually, please allow 1 inch deviation.

Figure 9.1: Size chart for Goozii Portable Pet Playpens, indicating dimensions and recommended pet weights for S, M, and L sizes.

10. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the Goozii official website or contact your retailer. Keep your purchase receipt as proof of purchase.

For additional information or to explore other Goozii products, please visit the [Goozii Store](#).