

[manuals.plus](#) /

› [BRUNO](#) /

› [BRUNO Multi-Stick Blender BOE034 with Ceramic Storage Containers User Manual](#)

BRUNO BOE034

BRUNO Multi-Stick Blender with Ceramic Storage Containers

Model: BOE034

Brand: BRUNO

1. INTRODUCTION

Thank you for purchasing the BRUNO Multi-Stick Blender with Ceramic Storage Containers. This versatile kitchen appliance is designed to simplify your cooking process with its 5-in-1 functionality: blending, mashing, chopping, crushing ice, and whipping. The accompanying ceramic storage containers offer convenient food preservation and preparation, being safe for freezer, microwave, and dishwasher use.



Image: The BRUNO Multi-Stick Blender set, including the blender unit, whisk, chopper, and ceramic containers, arranged on a table.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance to prevent injury or damage.

- Always unplug the appliance from the power outlet before assembly, disassembly, or cleaning.
- Keep hands, hair, clothing, and utensils away from moving blades during operation to prevent personal injury.
- Blades are sharp. Handle with care when assembling, disassembling, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- This appliance is not intended for use by children. Keep out of reach of children.

- Do not operate the appliance with a damaged cord or plug. Contact customer support for repairs.
- Ensure all attachments are securely locked in place before operation.
- Do not overload the appliance. Refer to the maximum capacity for each attachment.

3. PRODUCT COMPONENTS

The BRUNO Multi-Stick Blender set includes the following components:

- **Motor Unit:** The main power unit for all attachments.
- **Blender Stick:** For blending and mashing directly in pots or tall containers.
- **Whipper:** For whipping cream, egg whites, and other light mixtures.
- **Chopper Bottle:** A container for chopping and crushing.
- **Chopper Bottle Dedicated Cutter:** Blade assembly for the chopper bottle.
- **Blender Cup (500ml):** A measuring cup suitable for blending.
- **Cleaning Brush:** For easy cleaning of blades and attachments.
- **Ceramic Storage Containers (3 pieces):** With lids, suitable for freezer, microwave, and dishwasher.
- **Dedicated Recipe Leaflet:** For culinary inspiration.



Image: Overview of the BRUNO Multi-Stick Blender's main components, including the motor unit, blender stick, whisk, and chopper.



Image: Close-up of the blender stick attachment.



Image: Close-up of the whipper attachment.



Image: Close-up of the chopper attachment with its blade.



Image: Three ceramic storage containers with transparent lids, part of the 'Cool' set.

4. SETUP AND ASSEMBLY

Before first use, wash all parts that will come into contact with food. Ensure the motor unit is unplugged.

1. **Attaching the Blender Stick:** Align the blender stick with the motor unit and twist until it locks securely into place.
2. **Attaching the Whipper:** Insert the whisk into the whipper attachment, then align the whipper attachment with the motor unit and twist until it locks.
3. **Assembling the Chopper:** Place the chopper blade onto the central pin inside the chopper bottle. Add ingredients. Align the motor unit with the chopper bottle lid and twist to secure.

5. OPERATING INSTRUCTIONS

The BRUNO Multi-Stick Blender offers five main functions:

5.1. Blending / Mashing (Blender Stick)

Use the blender stick for pureeing soups, making smoothies, or mashing soft ingredients directly in a pot or the included blender cup.

- Attach the blender stick to the motor unit.
- Immerse the blender stick into the ingredients.
- Press and hold the power button to operate. Move the blender up and down for even blending.
- Release the button to stop.

5.2. Chopping / Crushing (Chopper)

The chopper attachment is ideal for finely chopping vegetables, nuts, or even crushing ice.

- Assemble the chopper with the blade and ingredients in the chopper bottle.
- Attach the motor unit to the chopper lid.
- Press and hold the power button in short pulses for chopping, or continuously for finer results.
- For crushing ice, ensure ice cubes are small enough to fit and do not overload.



Image: The chopper attachment in use, finely chopping onions.



Image: The chopper attachment crushing ice cubes.

5.3. Whipping (Whipper)

Use the whipper attachment to create fluffy whipped cream or stiff egg whites.

- Attach the whipper to the motor unit.
- Place the whipper into the ingredients in a bowl.
- Press and hold the power button until desired consistency is reached.

5.4. Ceramic Storage Containers

The included ceramic containers are designed for versatile food storage and preparation.

- **Storage:** Use the lids to store food in the refrigerator or freezer.
- **Reheating:** The containers are microwave-safe. Open the air valve on the lid before microwaving.
- **Cleaning:** The containers and lids are dishwasher-safe.



Image: Ceramic containers holding various food items, ready for storage or serving.



Image: A meal served in the ceramic containers, demonstrating their use as serving bowls.

5.5. Product Demonstration Video

Watch this video for a visual guide on how to use the BRUNO Multi-Stick Blender's various functions and for cleaning tips.

Video: A comprehensive demonstration of the BRUNO Multi-Stick Blender's 5 functions (crushing, chopping, whipping, mixing, mashing) and easy maintenance. This video showcases how to prepare various dishes, from frozen drinks to baby food, and provides cleaning instructions.

6. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your appliance.

- **Motor Unit:** Wipe with a damp cloth. Do not immerse in water.
- **Blender Stick, Whipper, Chopper Bottle, Blades, Blender Cup:** These parts can be washed with warm soapy water. Use the included cleaning brush to remove food residue from blades.
- **Ceramic Storage Containers and Lids:** These are dishwasher safe.
- For quick cleaning of the blender stick, blend a small amount of warm water with a drop of dish soap in the blender cup, then rinse.



Image: The blender cup and cleaning brush, essential tools for maintaining the appliance.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; motor unit not properly attached.	Ensure the power cord is securely plugged in. Test the outlet with another appliance. Reattach the motor unit to the chosen attachment until it clicks.
Ingredients are not blending/chopping effectively.	Too many ingredients; ingredients are too large/hard; blade is dull or improperly installed.	Reduce the amount of ingredients. Cut larger ingredients into smaller pieces. Ensure the blade is correctly installed. For hard ingredients like ice, use the chopper and ensure pieces are small.
Unusual noise or odor during operation.	Overloading; foreign object; motor issue.	Stop the appliance immediately. Unplug and check for any foreign objects. Reduce load. If the problem persists, discontinue use and contact customer support.

8. SPECIFICATIONS

- **Model Number:** BOE034
- **Brand:** BRUNO
- **Power Source:** Corded Electric (AC100V)
- **Power Consumption:** 200W (Blender/Chopper)
- **Blender Cup Capacity:** 500 ml
- **Package Dimensions:** 29.5 x 29.5 x 23.5 cm
- **Package Weight:** 1200 grams
- **Dishwasher Safe (Ceramic Containers):** Yes
- **Microwave Safe (Ceramic Containers):** Yes

- **Freezer Safe (Ceramic Containers):** Yes
- **Country of Origin:** Blender - China / Ceramic Storage Containers - Japan

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in the packaging for specific terms and conditions. For technical support, replacement parts, or any inquiries, please contact BRUNO customer service through their official website or the retailer where the product was purchased.